



[Manuals.plus](#) /

> [eGo](#) /

> eGo Little EGO V2 Rotary Tattoo Machine User Manual

eGo Little EGO V2

eGo Little EGO V2 Rotary Tattoo Machine User Manual

Model: Little EGO V2

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

[Support](#)

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your eGo Little EGO V2 Rotary Tattoo Machine. Please read this manual thoroughly before operating the device and retain it for future reference. Proper understanding and adherence to these guidelines will ensure optimal performance and longevity of your machine.



Figure 1: The eGo Little EGO V2 Rotary Tattoo Machine in green, shown from a side perspective. This image highlights the machine's compact design and the rotary mechanism.

IMPORTANT SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the machine:

- Ensure the machine is disconnected from power before cleaning or performing any maintenance.
- Use only compatible power supplies and accessories.
- Keep the machine dry and away from liquids.
- Store the machine in a clean, dry environment when not in use.
- This device is intended for professional use by trained individuals only.

SETUP

Follow these steps to prepare your Little EGO V2 Rotary Tattoo Machine for operation:

1. **Unpack the Machine:** Carefully remove the tattoo machine and all accessories from its packaging. Inspect for any visible damage.
2. **Connect Power Supply:** Attach a compatible RCA clip cord or power supply cable to the machine's

input port. Ensure a secure connection.

3. **Install Grip and Needle Cartridge:**

- Securely attach your preferred tattoo grip to the machine.
- Insert a sterile needle cartridge into the grip, ensuring it clicks firmly into place.

4. **Adjust Needle Depth:** Rotate the grip to adjust the needle depth according to your tattooing requirements.

5. **Prepare Workstation:** Ensure your workstation is sterile and organized before beginning any tattooing procedure.

OPERATING INSTRUCTIONS

Once the machine is set up, follow these guidelines for operation:

1. **Power On:** Connect the power supply to an electrical outlet and turn it on.
2. **Adjust Voltage:** Set the desired voltage on your power supply. The optimal voltage range may vary based on needle configuration, skin type, and personal preference. Start with a lower voltage and gradually increase as needed.
3. **Begin Tattooing:** With the needle cartridge properly installed and depth adjusted, you can begin the tattooing process. Maintain proper hygiene and technique throughout.
4. **Monitor Performance:** Listen to the machine's sound and observe needle movement to ensure consistent performance.
5. **Power Off:** After use, turn off the power supply and disconnect the machine.

Note: The Little EGO V2 is designed for versatility. Experiment with different voltage settings to find what works best for various tattooing styles (lining, shading, color packing).

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Little EGO V2 machine:

- **Cleaning:** After each use, disconnect the machine from power. Wipe down the exterior surfaces with a suitable disinfectant solution. Avoid getting liquids inside the motor housing.
- **Lubrication:** Periodically apply a small amount of machine oil to moving parts as recommended by the manufacturer (if applicable, general rotary machine advice). Refer to specific eGo guidelines if provided.
- **Inspection:** Regularly inspect the machine for any signs of wear, loose components, or damage. Address any issues promptly.
- **Storage:** Store the machine in a clean, dry, and protective case to prevent dust accumulation and physical damage.

TROUBLESHOOTING

If you encounter issues with your Little EGO V2, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Machine not turning on	Loose power connection, faulty power supply, damaged cable.	Check all cable connections. Test with a different power supply or cable if available. Ensure power supply is switched on.
Inconsistent needle movement	Improperly seated needle cartridge, low voltage, worn-out parts.	Re-seat the needle cartridge. Increase voltage. Inspect for wear and tear; contact support if parts appear damaged.
Excessive vibration or noise	Loose components, lack of lubrication, motor issue.	Check for any loose screws or parts. Apply lubrication if necessary. If the issue persists, discontinue use and contact support.

If you cannot resolve the issue using the troubleshooting guide, please contact eGo customer support.

SPECIFICATIONS

Key specifications for the eGo Little EGO V2 Rotary Tattoo Machine:

- **Model:** Little EGO V2
- **Type:** Rotary Tattoo Machine
- **Brand:** eGo
- **ASIN:** B07LD15BFK
- **UPC/GTIN:** 644287731679
- **Unit Count:** 1.00 Count
- **Color:** Green (as per product description)
- **Compatibility:** Designed for use with standard tattoo grips and needle cartridges (RCA connection).

WARRANTY INFORMATION

Specific warranty details for the eGo Little EGO V2 Rotary Tattoo Machine are not provided in the product data. Please refer to the manufacturer's official website or contact your point of purchase for detailed warranty terms and conditions. Retain your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For technical assistance, spare parts, or further inquiries regarding your eGo Little EGO V2 Rotary Tattoo Machine, please contact eGo customer support directly. You may find contact information on the official eGo website or through the retailer where the product was purchased.

Online Resources: Visit the [eGo Store on Amazon](#) for additional product information and updates.