

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [CINEDIGM](#) /

› Condor: Season One DVD Instruction Manual

## CINEDIGM B07LD8RHNC

# Condor: Season One

## DVD INSTRUCTION MANUAL

### 1. Product Overview

---

This manual provides essential information for the proper setup, operation, and care of your *Condor: Season One* DVD set. The series follows Joe Turner, a CIA analyst whose theoretical reservations about his work become real dilemmas when his entire office is killed, forcing him to go on the run. He must redefine himself to uncover a far-reaching conspiracy and prevent a deadly objective threatening millions.

This product is a DVD format release, consisting of 3 discs, and features actors Max Irons and William Hurt. It was released on March 5, 2019, by CINEDIGM.



Image: Front cover of the Condor: Season One DVD set.

## 2. Initial Setup

---

Follow these steps to prepare your DVD set for playback:

1. **Unboxing:** Carefully remove the DVD case from its packaging.
2. **Disc Inspection:** Open the DVD case and gently remove the desired disc. Inspect the disc for any visible scratches, smudges, or damage. If present, gently clean the disc as described in the 'Care and Maintenance' section.

3. **Inserting the Disc:** With the label side facing up, carefully insert the disc into your DVD player's disc tray or slot. Ensure it is seated correctly.
4. **Connecting to Display:** Ensure your DVD player is properly connected to your television or display device using appropriate cables (e.g., HDMI, RCA). Refer to your DVD player's manual for specific connection instructions.

### 3. Operating Instructions

---

Once the DVD is inserted and your player is connected, you can begin watching:

#### 3.1. Basic Playback

1. **Power On:** Turn on your television and DVD player.
2. **Select Input:** Use your TV remote to select the correct input source (e.g., HDMI 1, Video 1) that corresponds to your DVD player's connection.
3. **Navigate Menus:** The DVD will typically load to a main menu. Use your DVD player's remote control (arrow keys, Enter/OK button) to navigate through options such as 'Play All', 'Episode Selection', 'Scene Selection', or 'Special Features'.
4. **Start Playback:** Select your desired option and press Enter/OK to begin playback.

#### 3.2. Special Features and Settings

Most DVDs include additional content and settings accessible from the main menu:

- **Episode Selection:** Choose specific episodes to watch.
- **Scene Selection:** Jump to specific scenes within an episode.
- **Audio/Subtitle Options:** Select preferred audio tracks (e.g., English, Spanish) or turn subtitles on/off.
- **Bonus Content:** Explore behind-the-scenes footage, deleted scenes, or interviews if available on the disc.



Image: A still from the series *Condor: Season One*, depicting a character in action.

## 4. Care and Maintenance

---

Proper care will extend the life of your DVD discs:

- **Handling Discs:** Always hold discs by their edges or by inserting a finger through the center hole. Avoid touching the shiny playback surface.
- **Cleaning Discs:** If a disc has smudges or fingerprints, gently wipe it with a soft, lint-free cloth (e.g., microfiber) from the center outwards in a straight line. Do not wipe in circles. For stubborn marks, use a specialized disc cleaning solution or a small amount of water, then dry thoroughly.
- **Storage:** Store discs in their original case, away from direct sunlight, extreme temperatures, and high humidity. Keep the case closed to prevent dust accumulation.
- **Avoid Scratches:** Do not place discs on rough surfaces or stack them without their cases.

## 5. Troubleshooting Guide

---

If you encounter issues, try these common solutions:

Problem	Possible Cause	Solution
No picture or sound	Incorrect TV input, loose cables, player off	Check TV input, ensure cables are secure, power on player.
Disc won't play or load	Disc inserted incorrectly, dirty/damaged disc, player malfunction	Re-insert disc correctly, clean disc, try another disc to test player.
Skipping or freezing during playback	Dirty or scratched disc, player lens dirty	Clean disc thoroughly. If problem persists, the disc may be damaged or your player's lens may need cleaning (refer to player manual).
Remote control not working	Dead batteries, obstructed signal	Replace batteries. Ensure no objects block the signal path between remote and player.

## 6. Technical Specifications

---

Feature	Detail
Product Title	Condor: Season One
Item Model Number	B07LD8RHNC
ASIN	B07LD8RHNC
Media Format	NTSC, Widescreen
Run Time	10 hours
Release Date	March 5, 2019

Feature	Detail
Actors	Max Irons, William Hurt
Studio	CINEDIGM
Number of Discs	3
Genre	Action, Mystery & Thrillers
Product Dimensions	0.7 x 7.5 x 5.4 inches; 3.84 ounces

## 7. Warranty and Support Information

---

Specific warranty details for this DVD product are not provided within this manual. For information regarding returns, replacements, or any product-specific inquiries, please refer to the original purchase platform or contact the seller directly.

You can find additional product details and seller information on the Amazon product page [Condor: Season One on Amazon.com](#)