

## Sony DVPSR510H

# SONY DVPSR510H DVD Player Instruction Manual

Model: DVPSR510H

## INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your SONY DVPSR510H DVD Player. Designed for near HD picture quality and solid sound, this compact unit supports various disc formats and offers convenient playback features. Please read these instructions thoroughly before using your DVD player.



Figure 1: Front view of the SONY DVPSR510H DVD Player.

## KEY FEATURES

- **Ultra Slim, New Mid Size Design:** Compact form factor for easy placement.
- **HDMI Output:** Connects to modern displays for high-quality digital video and audio.
- **1080P Upscaling:** Enhances standard definition DVD content to near high-definition resolution.
- **Versatile Playback:** Supports DVD, DVD+R, DVD+R DL, DVD+RW, DVD-R, DVD-R DL, DVD-RW video formats.
- **Audio CD Playback:** Compatible with CD, CD-R, and CD-RW audio discs.
- **MP3 and JPEG Playback:** View photos and listen to music files from compatible discs.
- **Multi Disc Resume:** Resumes playback from where you left off on multiple discs.
- **Multi-band TV Remote:** Control both the DVD player and certain TV functions with one remote.
- **Energy Star Certified:** Designed for energy efficiency.

- **Note:** This device is a DVD player and does not support Blu-ray discs.

## SETUP

Follow these steps to connect your SONY DVPSR510H DVD Player to your television or display unit.

1. **Unpacking:** Carefully remove all components from the packaging. Ensure you have the DVD player, remote control, and HDMI cable.
2. **Placement:** Place the DVD player on a stable, level surface with adequate ventilation. Avoid placing it near heat sources or in direct sunlight.
3. **HDMI Connection:** Connect one end of the supplied HDMI cable to the HDMI OUT port on the back of the DVD player. Connect the other end to an available HDMI IN port on your television or display.
4. **Power Connection:** Plug the power cord into the AC IN jack on the back of the DVD player, then plug the other end into a wall outlet.
5. **Initial Power On:** Press the power button on the front panel or the remote control to turn on the DVD player.
6. **TV Input Selection:** Use your TV remote to select the correct HDMI input source that corresponds to the port you connected the DVD player to.



Figure 2: The SONY DVPSR510H DVD Player shown with its included HDMI cable for connection.

## OPERATING INSTRUCTIONS

This section details the basic functions and controls for your DVD player.

### Front Panel Controls

- **Power Button (I/O):** Turns the unit on or off.
- **Open/Close Button:** Opens and closes the disc tray.
- **Play/Pause Button:** Starts or pauses disc playback.

- **Stop Button:** Stops disc playback.
- **Forward/Reverse Buttons:** Skips tracks or fast-forwards/rewinds during playback.

## Remote Control Functions

The supplied remote control provides full functionality for your DVD player. Ensure batteries are correctly inserted.

- **Power (I/O):** Turns the DVD player on/off.
- **Open/Close:** Ejects or retracts the disc tray.
- **Play (▶):** Starts playback.
- **Pause (||):** Pauses playback.
- **Stop (■):** Stops playback.
- **Fast/Slow Play:** Adjusts playback speed.
- **PREV/NEXT:** Skips to the previous or next chapter/track.
- **RETURN:** Returns to the previous menu or screen.
- **DISPLAY:** Shows playback information on screen.
- **AUDIO/SUBTITLE:** Selects audio tracks or subtitle languages.
- **MENU:** Accesses the disc menu.
- **Number Buttons (0-9):** Direct selection of tracks or chapters.
- **TV INPUT:** Switches TV input source (if programmed).
- **VOL +/-:** Adjusts TV volume (if programmed).

## Disc Playback

1. Press the **Open/Close** button to open the disc tray.
2. Place a disc gently onto the tray with the label side facing up.
3. Press the **Open/Close** button again to close the tray.
4. Playback will usually start automatically. If not, press the **Play** button.

## MAINTENANCE

Proper care ensures the longevity and optimal performance of your DVD player.

- **Cleaning the Unit:** Wipe the exterior of the DVD player with a soft, dry cloth. Do not use liquid or aerosol cleaners, as they may damage the finish or internal components. Ensure ventilation slots are free from dust accumulation.
- **Disc Care:** Handle discs by their edges to avoid fingerprints and scratches. Store discs in their cases when not in use. Clean dirty discs with a soft, lint-free cloth, wiping from the center outwards.
- **Remote Control:** If the remote control becomes unresponsive, check and replace the batteries.

## TROUBLESHOOTING

If you encounter issues with your DVD player, refer to the following common problems and solutions.

- **No Power:** Ensure the power cord is securely plugged into both the DVD player and a working wall outlet. Try a different outlet.
- **No Picture/Sound:** Verify that the HDMI cable is correctly connected to both the DVD player and the TV.

Ensure your TV is set to the correct HDMI input source.

- **Disc Not Playing/Skipping:** Check the disc for scratches or dirt and clean if necessary. Ensure the disc format is supported (not Blu-ray).
- **Front Panel Buttons Unresponsive:** While the remote control is generally reliable, the physical buttons on the unit may become less responsive over time due to dust or wear. Try using the remote control for all functions.
- **Remote Control Not Working:** Check the batteries in the remote control and replace them if needed. Ensure there are no obstructions between the remote and the DVD player's sensor.

## SPECIFICATIONS

Feature	Specification
Model Number	DVPSR510H
Brand	Sony
Product Dimensions	18"L x 16"W x 5"H
Item Weight	2.84 pounds
Resolution	1920x1080 (1080p Upscaling)
Connector Type	HDMI
Connectivity Technology	HDMI
Color	Black
Audio Output Mode	Surround
Media Type	CD, DVD

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Sony support website. Keep your proof of purchase for any warranty claims.