

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Walfront](#) /

> [Walfront Sewing Machine Foot Pedal \(EU Plug\) Instruction Manual](#)

## Walfront EU Plug

# Walfront Sewing Machine Foot Pedal (EU Plug) Instruction Manual

Model: EU Plug

## 1. PRODUCT OVERVIEW

This manual provides essential information for the safe and effective use of your Walfront Sewing Machine Foot Pedal. This electronic foot pedal is designed as a replacement or upgrade for compatible sewing machines, offering variable speed control and durable construction.



Image 1.1: Walfront Sewing Machine Foot Pedal with integrated EU power cord and machine connector.

### Key Features:

- Variable speed control for precise operation.
- Durable construction for long-lasting performance.
- Compatible with various sewing machine brands, including Singer and Butterfly.
- EU Plug (220-240V, 0.5A, 50Hz) for European electrical standards.

## 2. SAFETY INFORMATION

---

Please read all safety instructions before using the foot pedal to prevent injury or damage to the product or your sewing machine.

- Ensure the foot pedal's voltage and plug type match your region's electrical standards and your sewing machine's requirements. This model is designed for 220-240V EU outlets.
- Always unplug the sewing machine from the power outlet before connecting or disconnecting the foot pedal.
- Do not use the foot pedal if the cord or plug is damaged. Contact customer support for a replacement.
- Keep the foot pedal away from water or excessive moisture.
- Do not attempt to open or repair the foot pedal yourself. Refer to qualified service personnel.
- Keep out of reach of children.

## 3. SETUP AND INSTALLATION

---

Follow these steps to correctly install your new Walfront Sewing Machine Foot Pedal.

1. **Unpack the Foot Pedal:** Carefully remove the foot pedal and its cord from the packaging. Inspect for any visible damage.
2. **Identify the Machine Connector:** Locate the foot pedal port on your sewing machine. This pedal features a specific three-pin connector designed for compatible machines.



Image 3.1: Bottom view of the foot pedal, illustrating the connection point for the power cord.

- 3. Connect to Sewing Machine:** Align the three-pin connector of the foot pedal cord with the corresponding port on your sewing machine. Gently push until it is securely seated.

Durable construction  
for long-lasting performance.



Image 3.2: Detail of the three-pin connector that plugs into the sewing machine.

4. **Connect to Power Outlet:** Plug the EU power plug into a standard 220-240V electrical outlet.



5. Your foot pedal is now ready for use.

## 4. OPERATING INSTRUCTIONS

The Walfront Sewing Machine Foot Pedal provides variable speed control for your sewing machine.

1. Ensure the foot pedal is correctly connected to both the sewing machine and a power outlet.
2. Place the foot pedal on the floor in a comfortable position where you can easily operate it with your foot.
3. Gently press down on the pedal to start the sewing machine.
4. The harder you press the pedal, the faster the sewing machine will operate. This allows for precise speed control, from slow stitching to high-speed sewing.
5. Release pressure on the pedal to slow down or stop the machine.

Your browser does not support the video tag.

Video 4.1: Demonstration of the Walfront Sewing Machine Foot Pedal's operation and connections.

## 5. MAINTENANCE

To ensure the longevity and optimal performance of your foot pedal, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the exterior of the foot pedal with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Ensure no liquids enter the pedal's internal components.
- **Storage:** When not in use, store the foot pedal in a clean, dry place, away from direct sunlight and extreme temperatures. Avoid coiling the cord too tightly to prevent damage.
- **Cord Inspection:** Periodically inspect the power cord and machine connector for any signs of wear, cuts, or damage. If damage is found, discontinue use and seek a replacement.

## 6. TROUBLESHOOTING

If you encounter issues with your Walfront Sewing Machine Foot Pedal, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Foot pedal does not respond.	<ul style="list-style-type: none"><li>• Not properly connected to the sewing machine.</li><li>• Not plugged into a power outlet.</li><li>• Power outlet is not functioning.</li><li>• Damaged cord or pedal.</li></ul>	<ul style="list-style-type: none"><li>• Ensure the three-pin connector is fully inserted into the sewing machine.</li><li>• Verify the EU plug is securely in a live power outlet.</li><li>• Test the outlet with another appliance.</li><li>• Inspect the cord and pedal for damage. If damaged, do not use; contact support.</li></ul>

Problem	Possible Cause	Solution
Inconsistent speed control.	<ul style="list-style-type: none"><li>Internal component issue.</li><li>Incompatible sewing machine.</li></ul>	<ul style="list-style-type: none"><li>Ensure the pedal is fully pressed for maximum speed.</li><li>Verify your sewing machine model is listed as compatible.</li><li>If issues persist, contact customer support.</li></ul>

If troubleshooting steps do not resolve the issue, please contact Walfront customer support.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Walfront
Model	EU Plug (B07LFFS2HS)
Input Voltage	220-240V
Current	0.5A
Frequency	50Hz
Plug Type	EU Plug
Material	Plastic, Metal
Dimensions (L x W x H)	13.5 x 9 x 5.5 cm (approx.)
Weight	291 Grams (approx.)
Compatibility	Suitable for Singer, Butterfly, and most similar sewing machines.

## 8. WARRANTY AND SUPPORT

Walfront offers a lifetime warranty for this product. If you experience any issues with the product quality or performance, please do not hesitate to contact Walfront customer support. They are committed to resolving any problems you may encounter.

For support, please refer to the contact information provided with your purchase or visit the official Walfront store on Amazon: [Walfront Store](#).