

[Manuals.plus](#) /

› [Nordic Ware](#) /

› Nordic Ware 64702 Microwave 2-Cavity Egg Poacher Instruction Manual

Nordic Ware 64702

Nordic Ware 64702 Microwave 2-Cavity Egg Poacher Instruction Manual

Model: 64702

INTRODUCTION

The Nordic Ware 64702 Microwave 2-Cavity Egg Poacher is designed for convenient and efficient preparation of poached eggs using a microwave oven. This manual provides essential information for safe and effective use, ensuring you achieve consistent results.

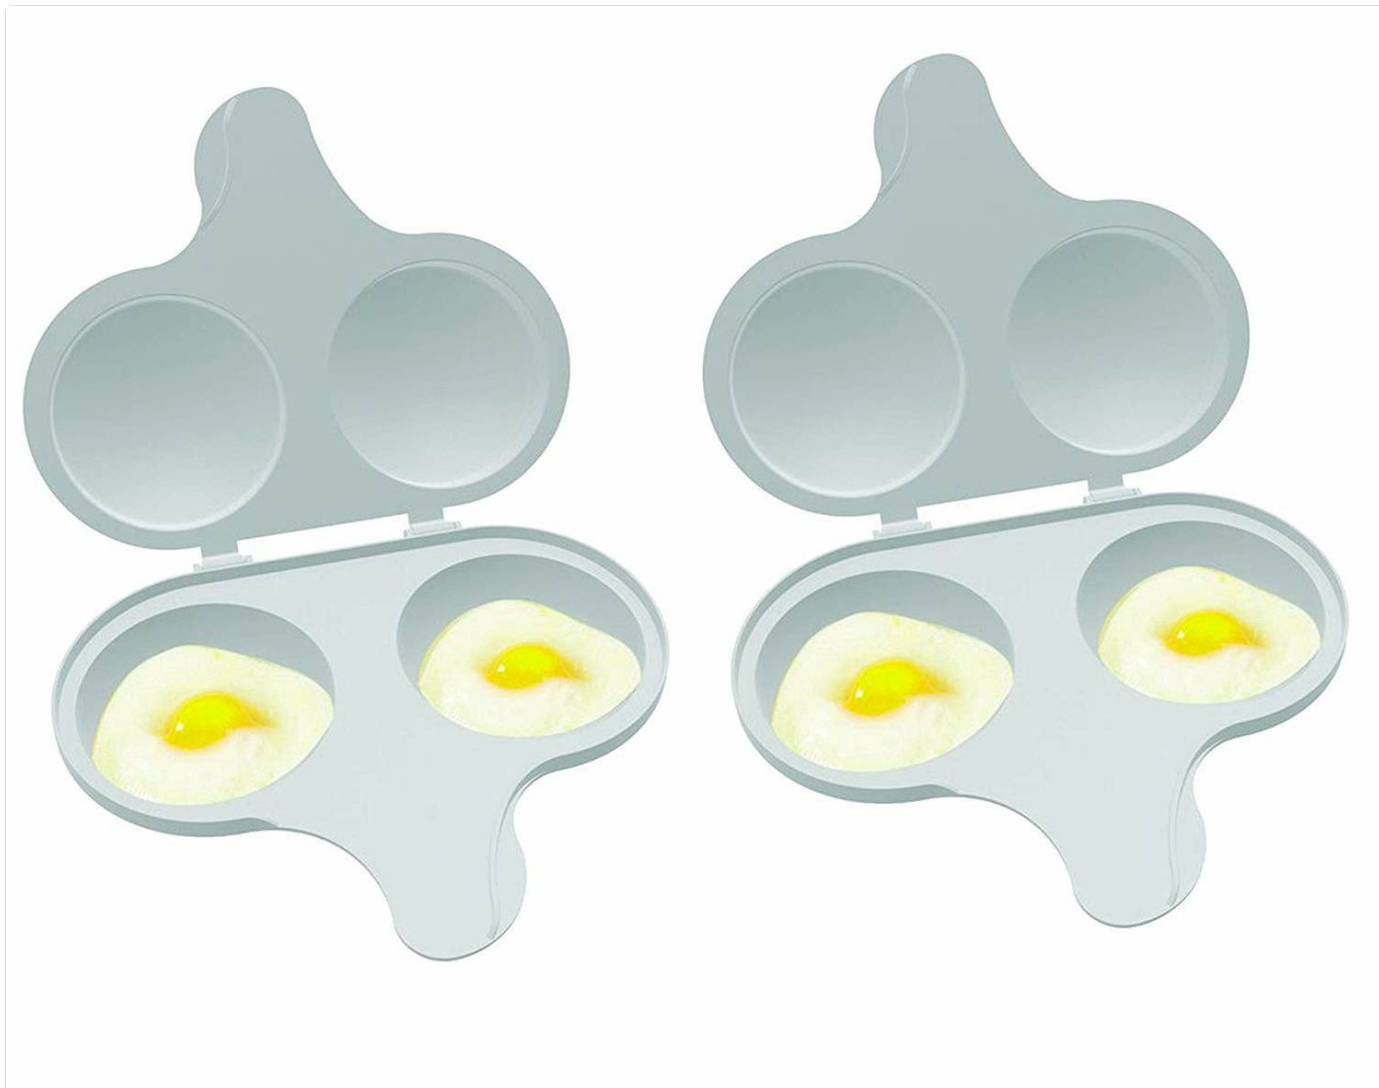


Image: The Nordic Ware 2-Cavity Microwave Egg Poacher in white, featuring two egg cavities and a hinged lid.

SAFETY PRECAUTIONS

- Always handle the poacher with care, especially after microwaving, as it may be hot.
- Do not use metal utensils with this product, as they may scratch the surface.
- Ensure eggs are pierced before microwaving to prevent bursting.
- This product is intended for microwave and storage use only.

SETUP

Initial Cleaning

Before the first use, and after each subsequent use, hand wash the egg poacher with warm, soapy water. Rinse thoroughly and dry completely.

Preparation

Lightly grease each cavity of the poacher with butter or cooking spray to prevent sticking and facilitate easy removal of cooked eggs.

OPERATING INSTRUCTIONS

1. **Prepare Eggs:** Crack one egg into each greased cavity of the poacher.

2. **Pierce Yolks:** Using a fork or toothpick, carefully pierce the yolk of each egg. This step is crucial to prevent eggs from bursting during microwaving.
3. **Add Water (Optional):** For softer poached eggs, you may add a tablespoon of water to each cavity before closing the lid.
4. **Close Lid:** Close the hinged lid of the poacher. Note that the lid may not latch tightly on all units; this is generally not an issue for cooking. If concerned about steam escaping, a microwave-safe plate can be placed loosely on top.
5. **Microwave:** Place the closed poacher in the microwave. Cooking times vary depending on microwave wattage and desired egg consistency.
 - For a single egg: Start with 30-45 seconds.
 - For two eggs: Start with 45-60 seconds.
 - Adjust cooking time in 10-second increments until desired doneness is achieved. Eggs will continue to cook slightly after removal.
6. **Rest:** Carefully remove the poacher from the microwave using oven mitts or a towel, as it will be hot. Let it rest for 30 seconds to 1 minute.
7. **Serve:** Open the lid and gently slide the poached eggs onto your plate.



Image: An example of poached eggs prepared with the Nordic Ware poacher, served on toast with fresh garnishes.

MAINTENANCE AND CARE

- **Hand Wash Only:** Always hand wash the poacher with warm, soapy water.
- **Avoid Dishwasher:** Dishwasher use is not recommended as it may cause the product to warp.
- **No Metal Utensils:** Do not use metal utensils, as they can scratch and damage the non-stick surface.
- **Storage:** Store in a clean, dry place.



Image: The Nordic Ware 2-Cavity Microwave Egg Poacher shown in its closed position, ready for storage or use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Eggs are overcooked or rubbery.	Microwave time is too long or wattage is too high.	Reduce cooking time by 5-10 seconds. Adjust based on your microwave's power.
Eggs burst in the microwave.	Yolk was not pierced, or cooking time is too long.	Always pierce the yolk before cooking. Reduce cooking time if bursting persists.
Eggs stick to the poacher.	Cavities were not greased sufficiently.	Ensure cavities are lightly greased with butter or cooking spray before each use.
Lid does not close tightly.	This is a design characteristic; the lid is not intended to be airtight.	The poacher will still function correctly. If desired, a microwave-safe plate can be placed loosely on top during cooking.

SPECIFICATIONS

- Model:** 64702
- Brand:** Nordic Ware
- Capacity:** 2 eggs
- Material:** Durable, microwave-safe material (typically plastic, designed for microwave use)
- Color:** White (as pictured; color may vary by specific product batch)
- Shape:** Rectangular
- Care:** Hand Wash Only

Dishwasher Safe: No

WARRANTY INFORMATION

For detailed warranty information, please refer to the official Nordic Ware website or the product packaging. Warranty terms and conditions may vary.

SUPPORT

Should you require further assistance or have questions not covered in this manual, please visit the official Nordic Ware website at www.nordicware.com or contact their customer service department directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question