



Manuals.plus /

› Sony /

› Sony BDP-S1700 Blu-ray Disc Player User Manual

Sony BDP-S1700

Sony BDP-S1700 Streaming Blu-ray Disc Player User Manual

Model: BDP-S1700 | Brand: Sony

INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your Sony BDP-S1700 Streaming Blu-ray Disc Player. This device allows you to enjoy Full HD 1080p Blu-ray Disc playback, DVD upscaling to near HD quality, and access to various entertainment services via a wired Ethernet connection. It also supports PlayStation Now games, offering a wide range of entertainment options from a single unit.

WHAT'S IN THE BOX

Please verify that all items listed below are included in your package:

- Sony BDP-S1700 Streaming Blu-ray Disc Player
- Remote Control (RMT-VB201U)
- Batteries (Type AAA x 2)
- Deco Gear 6ft High Speed HDMI Cable
- Customer Registration Card
- Instruction Manual (Simple Web Manual)
- Authorized USA Dealer Warranty Information



Image: The Sony BDP-S1700 Blu-ray Disc Player shown with its included remote control and a 6ft HDMI cable.

SETUP

1. **Placement:** Place the Blu-ray Disc player on a stable, level surface with adequate ventilation. Ensure no objects block the ventilation holes.



Image: An angled top view of the Sony BDP-S1700 Blu-ray player, highlighting its compact design.

2. **Connect to TV:** Connect the included HDMI cable from the HDMI OUT port on the Blu-ray Disc player to an HDMI IN port on your television.



Image: A coiled 6ft High Speed HDMI Cable, used for connecting the player to a television.

3. **Power Connection:** Plug the AC power cord into the player's power input, then into a wall outlet.
4. **Network Connection (Wired Only):** This player does **not** support wireless internet connections. To access streaming services and online features, connect an Ethernet cable from the LAN port on the back of the player to your home router or modem.
5. **Initial Setup:** Turn on your TV and select the correct HDMI input. Power on the Blu-ray Disc player. Follow the on-screen instructions for initial setup, including language selection and network

configuration (if connected via Ethernet).

OPERATING INSTRUCTIONS

Disc Playback

1. Press the **OPEN/CLOSE** button on the player or remote control to open the disc tray.
2. Place a Blu-ray Disc or DVD onto the disc tray with the label side facing up.
3. Press the **OPEN/CLOSE** button again to close the tray. Playback will usually start automatically. If not, select "Play" from the disc menu.



Image: The Sony BDP-S1700 Blu-ray player with its disc tray extended, showing a Blu-ray disc ready for playback.

Streaming Services

- Ensure the player is connected to the internet via an Ethernet cable.
- From the Home menu, navigate to the "Network" or "Apps" section.
- Select your desired streaming service (e.g., Netflix, YouTube, Hulu Plus, Pandora).
- Log in with your account credentials to begin streaming.

USB Playback

- Insert a USB storage device into the front USB port.
- Navigate to the "Video," "Music," or "Photo" section on the Home menu.
- Select the USB device and browse for your media files.



Image: A close-up front view of the Sony BDP-S1700 Blu-ray player, showing the front panel controls and USB port.

MAINTENANCE

- **Cleaning the Unit:** Wipe the exterior of the player with a soft, dry cloth. Do not use abrasive pads, scouring powder, or solvents such as alcohol or benzene.
- **Cleaning Discs:** Use a soft, dry cloth to wipe discs from the center outwards. Avoid using solvents or abrasive cleaners.

- **Ventilation:** Ensure the player has adequate space around it for proper ventilation to prevent overheating.

TROUBLESHOOTING

Problem	Possible Cause / Solution
No power	Check if the power cord is securely plugged into the player and the wall outlet.
No picture or sound	Ensure the HDMI cable is correctly connected to both the player and the TV. Verify the TV is set to the correct HDMI input.
Cannot connect to internet / Streaming issues	This model requires a wired Ethernet connection . Ensure an Ethernet cable is connected from the player's LAN port to your router/modem. Check your network settings and internet connection. This player does not support Wi-Fi.
Disc does not play	Check if the disc is inserted correctly (label side up). Clean the disc if it is dirty or scratched. Ensure the disc format is supported by the player (Blu-ray Disc, DVD).
Remote control not working	Check the batteries and replace them if necessary (2 x AAA). Ensure there are no obstructions between the remote and the player's sensor.

SPECIFICATIONS

Feature	Detail
Brand	Sony
Model Name	BDP-S1700
Item Model Number	E10SNBDPS1700
Product Dimensions	9.1 x 7.8 x 1.6 inches
Item Weight	2 pounds
Color	Black
Media Type	Blu-Ray Disc, DVD
Connectivity Technology	HDMI, Ethernet (Wired LAN)
Audio Output Mode	Surround (Dolby TrueHD, dts-Master Audio)
Special Features	Blu-ray support, DVD upscaling, Front USB slot, PlayStation Now compatibility

WARRANTY AND SUPPORT

Your Sony BDP-S1700 Streaming Blu-ray Disc Player comes with Authorized USA Coverage. For detailed warranty information and support, please refer to the Customer Registration Card included in your package or visit the official Sony support website.

For technical assistance or troubleshooting beyond this manual, please contact Sony Customer Support.