

[Manuals.plus](#) /

› [SeeKool](#) /

› SeeKool 3D Pandora 2650 Home Arcade Console User Manual

SeeKool 2650

SeeKool 3D Pandora 2650 Home Arcade Console

User Manual

INTRODUCTION

Thank you for choosing the SeeKool 3D Pandora 2650 Home Arcade Console. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new arcade system. Please read it thoroughly before use to ensure optimal performance and longevity of the product.



Image: The SeeKool 3D Pandora 2650 Home Arcade Console, showcasing its design and connectivity to a television.

PRODUCT FEATURES

- **High Definition Visuals:** Supports 1920x1080 Full HD output via HDMI and VGA, compatible with HD TVs and PCs. Features a high-definition game resolution and superior video/audio engine for an immersive visual experience.
- **Advanced System Performance:** Equipped with a new 3D system, 16GB RAM with eMMC flash memory technology (80% faster than traditional consoles), an A53 mainboard, and a 4-core chip to minimize freezing and delays.
- **Extensive Game Library:** Pre-loaded with 2190 retro arcade games and 70 3D games (60 3D games included on the TF card).
- **Expandable Storage:** Supports TF card and USB hard drive for downloading additional 3D games.
- **Multiplayer Support:** Designed for up to four players simultaneously, enhancing the interactive experience.
- **Versatile Connectivity:** Can connect to PS3 consoles and function as a gamepad for PC, PS3, and Raspberry Pi.
- **User-Friendly Design:** Features an acrylic panel with multi-color LED lighting, a built-in speaker, and an integrated

cooling fan for extended use. Includes a game interruption function.



Image: Internal components of the console, illustrating the high-speed CPU and expandable storage options.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x SeeKool 3D Pandora 2650 Arcade Game Console
- 2 x Spare Buttons
- 1 x Power Cable
- 1 x Power Adapter
- 1 x VGA Data Cable
- 1 x HDMI Data Cable
- 1 x USB Cable
- 1 x User Manual
- 1 x TF Card (pre-loaded with 60 3D games)

SETUP

Follow these steps to set up your arcade console:

1. **Connect to Display:** Use either the provided HDMI or VGA cable to connect the console to your TV, PC monitor, or projector.
2. **Power Connection:** Connect the power adapter to the console's power input and then plug it into a wall outlet.
3. **External Storage (Optional):** If you wish to add more games, insert a TF card into the designated slot or connect a USB hard drive to a USB port.

4. **PS3 Connection (Optional):** To use the console as a gamepad for a PS3, connect the console to the PS3 using the provided USB cable.



Image: Connection diagram for the arcade console, showing various output and input ports.

OPERATING INSTRUCTIONS

Powering On/Off

- To power on, ensure the console is connected to a power source and a display, then press the power button.
- To power off, press the power button again. It is recommended to save any game progress before powering off.

Game Selection and Navigation

- The console features a "Smart List" for easy game browsing.
- Games can be sorted alphabetically for quick access.
- Recently played games are automatically saved and displayed on the homepage for convenience.

- Use the joystick and buttons to navigate through the game menus.



Image: The console's game selection interface, demonstrating sorting and recent game features.

Adding Games

- Insert a TF card or USB hard drive containing compatible game files into the console's respective ports.
- Follow the on-screen instructions to access and add new games to your library.

Multiplayer Gaming

The console supports up to four players. Additional controllers may be required for 3-4 player games, depending on the game's requirements.

Using as a Gamepad

Connect the console to a PC, PS3, or Raspberry Pi via the USB cable to use it as an external gamepad.

Used as a Gamepad



Work with PC,PS3,Raspberry Pi

Image: Illustration of the console's compatibility as a gamepad for various platforms.

Controller Layout

The console features two sets of 8-way joysticks and action buttons. Refer to the diagram below for button identification.

DOUBLE 8-WAY STICK ARCADE CONSOLE

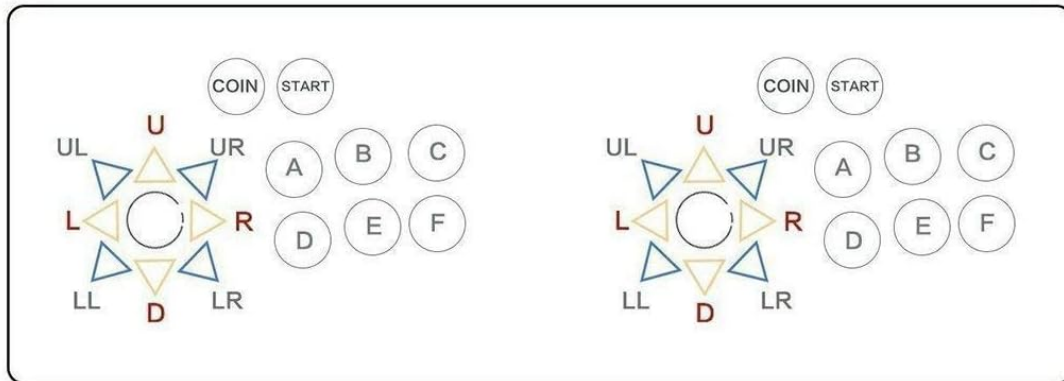


Image: Detailed layout of the joysticks and buttons on the arcade console.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the console. Avoid using corrosive liquids or abrasive cleaners, as these can damage the acrylic panel and other components.
- **Storage:** Store the console in a cool, dry place. Protect it from direct sunlight, excessive heat, and moisture to prevent damage.
- **Cable Handling:** Do not pull strongly on the power cord or other connected cables to avoid damaging the connectors or internal wiring.

TROUBLESHOOTING

If you encounter issues with your SeeKool 3D Pandora 2650 console, consider the following common solutions:

- **No Power:** Ensure the power cable and adapter are securely connected to both the console and a working power outlet.
- **No Display:** Verify that the HDMI or VGA cable is firmly connected to both the console and your display device. Check that the display input source is correctly selected.
- **Game Freezing/Lag:** The console is designed with a high-speed CPU and ample RAM to minimize these issues. Ensure no external factors (like extreme heat) are affecting performance. If using external storage, ensure it is functioning correctly.
- **Controller Unresponsive:** Check all button connections and ensure the console is powered on. If using as a gamepad for an external device, verify the USB connection.
- **Audio Issues:** Check the audio output settings on your display device and ensure the console's volume is adjusted.

If problems persist, please refer to the support information provided with your purchase or contact SeeKool customer service.

SPECIFICATIONS

Model	3D Pandora 2650
Brand	SeeKool
Form Factor	Full-size Arcade Console
Dimensions (L x W x H)	64 x 22 x 6.5 cm
Weight	4.44 kg
Material	Plastic, Acrylic Panel
Output Resolution	1920 x 1080 Full HD
Video Output	HDMI, VGA
Processor	A53 Mainboard with 4 Cores Chip
RAM	16GB with eMMC Flash Memory
Storage Expansion	TF Card, USB Hard Drive
Number of Players	Up to 4 players
Controller Type	8-way Joystick, Button Control
Power Source	Electric Cable (DC 12V)
Interface	USB
Display Type	LED (for panel lighting)

SAFETY INFORMATION

To ensure safe operation and prevent damage to the product or injury, please observe the following safety guidelines:

- **Environmental Conditions:** Avoid exposing the console to extreme heat, water, or direct sunlight.

- **Power Cord:** Do not pull the main power cord forcefully. Always grasp the plug when disconnecting from an outlet.
- **Cleaning Agents:** Do not use corrosive liquids or harsh chemicals to clean the product surface.
- **Service and Repair:** Do not attempt to disassemble, modify, or repair the product yourself. Refer all servicing to qualified personnel.
- **Usage Duration:** Avoid continuous use for more than 6 hours to prevent overheating and ensure product longevity.

WARRANTY AND SUPPORT

Specific warranty details are typically provided with your purchase documentation. For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact SeeKool customer service through the vendor or platform where you purchased the product.

Please retain your proof of purchase for warranty purposes.

© 2023 SeeKool. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question