

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Walker Edison](#) /

› [Walker Edison Saxon Mid Century Modern 2 Door Glass Shelf TV Stand for TVs up to 80 Inches, 70 Inch, Dark Walnut User Manual](#)

Walker Edison W70NORDW

Walker Edison Saxon Mid Century Modern 2 Door Glass Shelf TV Stand User Manual

Brand: Walker Edison | Model: W70NORDW

INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your Walker Edison Saxon Mid Century Modern 2 Door Glass Shelf TV Stand. Designed to accommodate TVs up to 80 inches, this stylish 70-inch entertainment center features metal tapered legs, sleek metal handles, and a center glass shelf, offering both aesthetic appeal and practical storage solutions for your living room, bedroom, kitchen, or dining room. It includes two side cabinets for closed storage and center open shelving.



Figure 1: The Walker Edison Saxon Mid Century Modern TV Stand in Dark Walnut.

SAFETY INFORMATION

Please read all safety warnings and instructions carefully before assembly and use. This product may contain chemicals

known to the State of California to cause cancer and birth defects or other reproductive harm (Proposition 65 warning). Always ensure the TV stand is placed on a stable, level surface. Do not exceed the maximum recommended load of 250 pounds. If placing a heavy TV with a central stand, ensure weight is distributed evenly or consider wall mounting to prevent sagging.

PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. The package should include:

- Frame components
- Legs (metal tapered)
- Shelves (including one adjustable glass shelf)
- Doors (two with soft-close hinges)
- Hardware pack (screws, connectors, etc.)

SETUP AND ASSEMBLY

For detailed step-by-step assembly instructions, please refer to the official Installation Manual (PDF) provided with your product or available online. A link to the digital manual can be found [here](#).

Key assembly features include:

- **Adjustable Shelves:** The two adjustable shelves and the center glass shelf allow for flexible storage configurations.
- **Soft-Close Doors:** The two doors are equipped with adjustable soft-close hinges for quiet and smooth operation.
- **Stable and Protective Legs:** Angled metal legs include adjustable rubber feet to protect your flooring from scratches.
- **Cord Management:** Integrated cord management ports help keep cables organized and out of sight.



Figure 2: Product dimensions: 15.75"D x 70"W x 24"H.



Simple Cord Management

Easily organize messy wires with cut-outs for overall cord management.



Figure 3: Detail of the simple cord management system.



Figure 4: Interior view showing adjustable shelves and cord management ports.

OPERATING INSTRUCTIONS

The Walker Edison TV stand is designed for versatile use in various rooms. It can function as a TV stand, storage cabinet, or buffet. The unit accommodates televisions up to 80 inches in size. Utilize the two side cabinets for concealed storage of items you wish to keep out of sight, and the central open shelving with its glass shelf for displaying media devices, decorative items, or books. The cord management ports located at the top of each section allow for neat routing of cables from your electronic devices.



Figure 5: The TV stand in a living room setting, showcasing its functionality.



Entertainment Center for 85" TV

Accommodates most popular size of flat TVs up to 85".

Figure 6: The TV stand is designed to accommodate TVs up to 80 inches, with visual representation up to 85 inches.

CARE AND MAINTENANCE

To maintain the appearance and longevity of your TV stand, wipe it with a dry cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the wood finish or glass components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
TV stand appears to sag in the middle.	Excessive weight concentrated in the center, especially from TVs with a single central stand.	Ensure the TV's weight is distributed evenly across the stand. If your TV has a central stand, consider using a wall mount or adding additional support under the TV's base to distribute the load. The maximum recommended load is 250 pounds.

Problem	Possible Cause	Solution
Doors do not close smoothly or align properly.	Hinges may need adjustment or were not installed correctly.	Refer to the assembly manual for detailed instructions on adjusting the soft-close hinges. Ensure all screws are tightened appropriately.
Missing or damaged parts upon arrival.	Shipping damage or packaging error.	Contact Walker Edison customer support within 30 days of delivery for replacement parts.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Walker Edison
Model Number	W70NORDW
Color	Dark Walnut
Product Dimensions	15.75"D x 70"W x 24"H
Material	Engineered Wood
Special Feature	Adjustable Shelf
Mounting Type	Floor Mount
Room Type	Kitchen, Living Room, Bedroom, Dining Room
Weight Limit	81 Pounds (Item Weight), 250 Pounds (Maximum recommended load)
Number of Shelves	3
Assembly Required	Yes
Care Instructions	Wipe with Dry Cloth
Country of Origin	China
UPC	842158185587

WARRANTY AND SUPPORT

This product comes with a 30-day limited manufacturer warranty. For any questions, concerns, or to request replacement parts (within 30 days of delivery), please contact Walker Edison customer support.

QUESTIONS?

We can help you.



1-801-433-3008

or email **service@walkerredison.com**

Replacement parts now available.

Please contact Walker Edison within 30 days of delivery.

Figure 7: Contact Walker Edison for support.

Phone: [1-801-433-3008](tel:1-801-433-3008)

Email: service@walkerredison.com

© 2024 Walker Edison. All rights reserved.

Related Documents - W70NORDW



[Walker Edison W70CSGD TV Stand Assembly Instructions](#)

Detailed assembly instructions for the Walker Edison W70CSGD TV Stand, including parts list, hardware list, and step-by-step guidance for building your furniture.



[Walker Edison W584DHDHB Assembly Instructions | Furniture Setup Guide](#)

Detailed assembly instructions for the Walker Edison W584DHDHB furniture item. Learn how to assemble your new cabinet with clear steps, parts list, and hardware guide. Includes general assembly tips for this Dark Walnut Classic Glass Door Universal TV Stand.




[Walker Edison FRAB4C Nightstand Assembly Instructions](#)

Detailed assembly instructions for the Walker Edison Mid-Century Modern 1-Drawer Nightstand (Model FRAB4C), including parts list, hardware list, and step-by-step guidance.



[Walker Edison NOAM3F2 Assembly Instructions](#)

Detailed assembly guide for the Walker Edison NOAM3F2 TV stand or media console, including parts list and step-by-step instructions for home assembly.

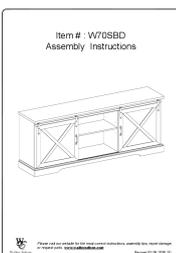

[Walker Edison W70SBD TV Stand Assembly Instructions](#)

Detailed assembly instructions for the Walker Edison W70SBD TV Stand, including parts list, hardware list, and step-by-step guidance for building your furniture.



[Walker Edison Bronx 6-Drawer Dresser Assembly Guide](#)

Comprehensive assembly guide for the Walker Edison Bronx 6-Drawer Dresser, featuring estimated assembly time, required tools, safety warnings, detailed step-by-step instructions, and parts lists for a successful setup.