

[Manuals.plus](#) /

› [ABC.store](#) /

› ABC.store 10'x30' Canopy Party Wedding Tent Instruction Manual

ABC.store 10'x30' Canopy Tent

ABC.store 10'x30' Canopy Party Wedding Tent Instruction Manual

Model: 10'x30' Canopy Tent

1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions and safety warnings before assembling and using this product. Failure to follow these instructions may result in injury or damage to the product.

- Always secure the tent to the ground using weights or stakes to prevent it from tipping over in windy conditions.
- Keep away from heat sources and open flames to prevent fire.
- This tent does not provide UV protection. Use additional sun protection measures as needed.
- Do not use in severe weather conditions, including heavy winds, rain, or snow. Disassemble the tent if adverse weather is expected.
- Ensure adequate ventilation if using any heating or cooking appliances inside the tent.
- Assembly requires multiple people for safety and ease.

2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Steel Frame Poles (various lengths and connectors)
- Polyethylene (PE) Roof Cover
- Polyethylene (PE) Side Walls (with windows)
- Ropes and Stakes for securing
- Assembly Instructions



Figure 2.1: Fully assembled 10'x30' canopy tent with side walls and windows, set up on a lawn.

3. SETUP INSTRUCTIONS

Assembly requires at least 2-3 people. Choose a flat, level area for setup, clear of overhead obstructions and sharp objects.

3.1. Frame Assembly

1. Unpack all components and lay them out. Identify all poles and connectors.
2. Begin by assembling the base frame. Connect the longest horizontal poles to the corner and middle connectors.
3. Attach the vertical leg poles to the base frame connectors.
4. Connect the roof frame poles to the top of the vertical leg poles, forming the roof structure. Ensure all connections are secure.



Figure 3.1: Illustration of the tent frame with dimensions: 10 feet wide, 30 feet long, and 8.5 feet high at the peak.

3.2. Cover and Side Wall Installation

5. Carefully drape the roof cover over the assembled frame. Ensure it is centered and evenly distributed.
6. Secure the roof cover to the frame using the provided fasteners (e.g., bungee balls, ties).
7. Attach the side walls to the frame. The side walls with windows should be positioned as desired.
8. Zip or tie the side walls together and to the corner poles to fully enclose the tent.



Figure 3.2: The canopy tent fully enclosed with side walls, featuring multiple window panels.

3.3. Securing the Tent

9. Use the provided ropes and stakes to firmly anchor the tent to the ground. Attach ropes to the tent frame at designated points and stake them into the ground at an angle.
10. For additional stability, especially in areas prone to wind, consider using sandbags or water weights on each leg.

4. OPERATING INSTRUCTIONS (USAGE)

This canopy tent is designed for temporary outdoor use, such as parties, weddings, and other events. It provides shelter from light rain and sun.

- **Ventilation:** Open side walls or roll up door panels for air circulation, especially on warm days.
- **Entry/Exit:** Utilize the zippered door panels for easy access.
- **Weather Monitoring:** Continuously monitor weather conditions. Disassemble the tent immediately if strong winds,

heavy rain, or thunderstorms are forecast.



Figure 4.1: The canopy tent with one end panel rolled up, creating an open entrance.



Figure 4.2: An interior perspective of the tent, highlighting the window panels and the internal frame structure.

5. MAINTENANCE

- **Cleaning:** Clean the canopy cover and side walls with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** Inspect the steel frame for any signs of rust or damage. Clean any dirt or debris from the poles.
- **Storage:** Disassemble the tent and store all components in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure the fabric is completely dry to prevent mold and mildew.
- **Inspection:** Periodically check all connections, ropes, and stakes for wear and tear. Replace damaged parts as needed.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tent is unstable or sways in light wind.	Insufficient anchoring; loose frame connections.	Ensure all ropes are taut and stakes are firmly in the ground. Add additional weights (sandbags, water weights) to each leg. Verify all frame connections are fully engaged.
Water pooling on the roof.	Improper roof cover tension; heavy rain.	Adjust the roof cover to ensure it is taut and evenly stretched over the frame. If rain is heavy, consider disassembling the tent to prevent damage.
Poles bending or breaking.	Excessive wind load; improper assembly.	This tent is not designed for strong winds. Disassemble immediately if high winds are expected. Ensure correct assembly and secure anchoring. Replace any damaged poles.
Side walls do not fit correctly.	Incorrect orientation; frame not square.	Double-check the orientation of each side wall. Ensure the frame is assembled squarely and all poles are fully inserted into connectors.

7. SPECIFICATIONS

Feature	Detail
Brand	ABC.store
Model	10'x30' Canopy Tent
Dimensions (L x W x H)	360 x 120 x 102 inches (30 x 10 x 8.5 feet)
Floor Area	300 Square Feet
Material (Frame)	Alloy Steel
Material (Cover/Walls)	Polyethylene (PE)
Color	White
Water Resistance Level	Waterproof
UV Protection	No (as per safety information)
Assembly Required	Yes
Recommended Uses	Outdoor Activities, Parties, Weddings
UPC	019213348946
ASIN	B07LG9W1WV

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact ABC.store customer service through your original point of

purchase or visit the official ABC.store website. Please have your model number (10'x30' Canopy Tent) and ASIN (B07LG9W1WV) available when contacting support.

This product is designed for temporary use and proper care and storage are essential for its longevity. Damage due to severe weather, improper assembly, or misuse may not be covered under warranty.

© 2025 ABC.store. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question