

[manuals.plus](#) /

› [Zerone](#) /

› [Zerone Replacement TV Remote Control User Manual for Thomson TCL ERISSON RC3000E01, RC3000E02, 08-RC3000E-RM201AA, TLC-925, RC200](#)

Zerone Zerone3xqn1wfvug

Zerone Replacement TV Remote Control User Manual

Models: RC3000E01, RC3000E02, 08-RC3000E-RM201AA, TLC-925, RC200

1. INTRODUCTION

This manual provides instructions for the Zerone Replacement TV Remote Control. This remote is designed to function as a direct replacement for various Thomson, TCL, and ERISSON TV models, specifically RC3000E01, RC3000E02, 08-RC3000E-RM201AA, TLC-925, and RC200. It offers stable performance and a familiar layout for ease of use.



Image 1.1: Front view of the Zerone Replacement TV Remote Control.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside.
4. Slide the battery cover back into place until it clicks securely.

Note: This remote control does not require programming or setup. It is designed to work directly with compatible TV models upon battery installation. The remote retains codes when changing batteries.



Image 2.1: Rear view of the remote control showing the battery compartment.



Image 2.2: Detailed view of battery insertion into the compartment.

3. OPERATING INSTRUCTIONS

The Zerone Replacement TV Remote Control features a standard layout for intuitive operation. Below are descriptions of key functions:



Image 3.1: Remote control held in hand, demonstrating ergonomic design.

3.1 Basic Functions

- **Power Button (>):** Turns the TV on or off.
- **Mute Button (>):** Mutes or unmutes the TV audio.
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (VOL +/-):** Adjusts the TV volume.
- **Channel Up/Down (CH +/-):** Changes the TV channel.

3.2 Navigation and Menu

- **Directional Pad (Up, Down, Left, Right):** Navigates through menus and options.
- **OK Button:** Confirms selections within menus.
- **Menu Button:** Accesses the TV's main menu.
- **Source Button:** Selects input sources (e.g., HDMI 1, AV).

- **Exit Button:** Exits current menu or function.
- **Display Button:** Shows current channel information or other on-screen display.
- **Return Button:** Goes back to the previous screen or channel.



Image 3.2: Close-up of the power, mute, and number buttons.

3.3 Special Functions

- **F1 (MTS), F2 (3D), F3, F4 (DEMO) Buttons:** These colored function buttons provide quick access to specific TV features, which may vary depending on your TV model. Refer to your TV's original manual for specific functionality.
- **USB Button:** Likely for accessing media from a USB device connected to the TV.
- **ZOOM, P.EFFECT, S.EFFECT, SLEEP Buttons:** These buttons control various picture settings, sound effects, and sleep timer functions.



Image 3.3: Close-up of the F1-F4, USB, and other special function buttons.

4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or it stops responding. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If storing for extended periods, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and TV. Remote out of range.	<ul style="list-style-type: none">Replace batteries with new AAA batteries, ensuring correct polarity.Remove any objects blocking the line of sight between the remote and the TV's IR receiver.Move closer to the TV.
Some buttons not working.	Dirt or debris under buttons. Internal malfunction.	<ul style="list-style-type: none">Clean the remote surface.If cleaning does not resolve the issue, the remote may be faulty and require replacement.
Remote does not control TV.	Incompatible TV model.	<ul style="list-style-type: none">Verify that your TV model is listed as compatible (RC3000E01, RC3000E02, 08-RC3000E-RM201AA, TLC-925, RC200).Ensure batteries are fresh and correctly installed.

6. SPECIFICATIONS

- Brand:** Zerone
- Model Number:** Zerone3xqn1wfvug
- Compatible TV Models:** Thomson, TCL, ERISSON (RC3000E01, RC3000E02, 08-RC3000E-RM201AA, TLC-925, RC200)
- Power Source:** 2 x AAA Batteries (not included)
- Material:** ABS
- Color:** Black
- Item Weight:** Approximately 2.46 ounces (70g)
- Special Feature:** Universal replacement, no programming required.



Image 6.1: Dimensions of the remote control (approx. 20cm length, 4.8cm width).

7. WARRANTY AND SUPPORT

For any questions, technical support, or warranty inquiries regarding your Zerone Replacement TV Remote Control, please contact the retailer or manufacturer directly. Please refer to your purchase documentation for specific warranty terms and contact information.