

Manuals.plus /

› Easytry123 /

› Easytry123 Replacement Remote Control User Manual for Samsung Home Theater Systems (Models: AH59-02370A, HT-C5200, HW-D600, etc.)

Easytry123 AH59-02370A,AH59-02303A,HT-C5200,HT-C5800,HT-C6200,HW-D600,HW-D650S,AH59-02326A,AH5902328A

Easytry123 Replacement Remote Control User Manual

For Samsung DVD and Home Theater Systems

Compatible Models: AH59-02370A, AH59-02303A, HT-C5200, HT-C5800, HT-C6200, HW-D600, HW-D650S, AH59-02326A, AH5902328A

1. INTRODUCTION

This manual provides instructions for the Easytry123 replacement remote control, designed for use with various Samsung DVD and Home Theater Systems. This remote offers essential functions for controlling your compatible device.

Important Note: As a replacement unit, some advanced or specific functions of your original remote may not be fully supported. Please verify compatibility with your specific model number.

2. SETUP AND BATTERY INSTALLATION

The remote control requires two (2) AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





This image displays the rear of the remote control with the battery cover removed, revealing the two slots for AAA batteries. Observe the polarity markings (+ and -) within the compartment to ensure correct battery insertion.

3. OPERATING THE REMOTE CONTROL

Point the remote control directly at the infrared receiver on your Samsung DVD or Home Theater System. Ensure there are no obstructions between the remote and the device.

Key Functions Overview



This image shows the front face of the remote control, highlighting its ergonomic design and the layout of its buttons. Key buttons include Power (red, top left), Volume Up/Down (blue, center left), Channel/Track navigation, Menu, and Playback controls (bottom).

The remote features standard controls for your home theater system. Common functions include:

- **POWER:** Turns the device on or off.
- **VOL +/-:** Adjusts the volume level.
- **MUTE:** Silences the audio output.
- **Number Buttons (0-9):** For direct input or channel selection.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** For menu navigation and selection.
- **MENU:** Accesses the main menu of your device.
- **PLAY/PAUSE, STOP, REWIND, FAST FORWARD:** Standard media playback controls.
- **DISC MENU / TITLE MENU:** Accesses disc-specific menus.
- **TOOLS / INFO:** Provides additional options or information.
- **RETURN / EXIT:** Navigates back or exits current menus.

Refer to your Samsung device's original manual for specific functions of each button as they relate to your system.

4. CARE AND MAINTENANCE

- Keep the remote control dry. If it gets wet, wipe it dry immediately.
- Use a soft, dry cloth to clean the remote. Do not use abrasive cleaners or solvents.
- Avoid exposing the remote to extreme temperatures or direct sunlight.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

5. TROUBLESHOOTING

Remote is not responding:

- Ensure batteries are inserted correctly with the correct polarity.
- Replace old batteries with new AAA batteries.
- Check for any obstructions between the remote and your device's infrared sensor.
- Make sure you are within the effective range of the device.
- Confirm that your Samsung device is powered on.

Some functions do not work:

- This is a replacement remote. Some advanced or specific functions of your original device may not be supported.
- Refer to your device's original manual to confirm if the function is available and how it is typically accessed.

If issues persist after following these steps, contact the seller for further assistance.

6. SPECIFICATIONS

- **Brand:** Easytry123
- **Compatible Devices:** Samsung DVD and Home Theater Systems (Models: AH59-02370A, AH59-02303A, HT-C5200, HT-C5800, HT-C6200, HW-D600, HW-D650S, AH59-02326A, AH5902328A)
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Special Feature:** Ergonomic design

Note: Specifications are subject to change without prior notice.

7. WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the terms provided by the seller at the time of purchase. For technical support or further inquiries, please contact the Easytry123 customer service or the retailer from whom you purchased the product.

Keep your purchase receipt as proof of purchase.