

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [CRAFTSMAN](#) /
- › [CRAFTSMAN Garage Glider Rolling Tool Chest Seat User Manual](#)

## CRAFTSMAN B07M65L81H

# CRAFTSMAN Garage Glider Rolling Tool Chest Seat User Manual

## INTRODUCTION

This manual provides essential information for the safe and efficient use of your CRAFTSMAN Garage Glider Rolling Tool Chest Seat. This product is designed to offer convenient seating and organized storage for tools and small parts in a garage or workshop environment. Please read these instructions thoroughly before assembly and operation.

## SETUP

The CRAFTSMAN Garage Glider Rolling Tool Chest Seat requires minimal assembly, primarily involving the attachment of the wheel casters. Ensure all components are present and undamaged before beginning.

- Unpack Components:** Carefully remove all parts from the packaging. Verify that all screws and the wrench are included.
- Orient Side Panels:** Before attaching the wheels, ensure the side panels are correctly oriented. The flat edge of the side panels should be positioned at the bottom, allowing proper clearance and attachment for the wheel casters. Incorrect orientation may prevent proper wheel installation.
- Attach Wheel Casters:** Securely attach the four wheel casters to the designated points on the bottom frame of the tool chest seat using the provided screws and wrench. Ensure all screws are tightened to prevent wobbling during use.
- Final Inspection:** Once assembled, gently test the stability of the seat and the smooth rolling of the casters.



Image: Side view of the CRAFTSMAN Garage Glider Rolling Tool Chest Seat, illustrating the frame and caster attachment points.

## OPERATING INSTRUCTIONS

The Garage Glider is designed for ease of use and mobility in your workspace.

1. **Seating:** Sit comfortably on the padded seat. The seat is hinged and can be lifted to reveal an additional storage compartment underneath.
2. **Mobility:** Utilize the smooth-rolling casters to move the tool chest seat around your garage or workshop as needed.
3. **Tool Storage:**
  - **Drawers:** The unit features two pull-out drawers for storing smaller tools, parts, or accessories.
  - **Side Trays:** Integrated side trays provide convenient access to nuts, bolts, screws, or other

frequently used items.

- **Pegboard:** One side of the unit features a metal pegboard. Standard pegboard hooks (not included) can be used to hang tools for easy access.



Image: The CRAFTSMAN Garage Glider Rolling Tool Chest Seat with its drawers extended and tools organized in the side compartments, demonstrating its storage capabilities.

## Product Overview Video

Video: This video provides an overview of the CRAFTSMAN Garage Glider Rolling Tool Chest Seat, showcasing its rolling functionality, various storage options including the lift-up seat, side trays, and pegboard, and its compact design for easy storage.

## MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your tool chest seat.

- **Cleaning:** Wipe down all surfaces with a damp cloth as needed. Avoid abrasive cleaners that may damage the finish or seat material.
- **Casters:** Periodically check the wheel casters for debris (e.g., hair, dust, small particles) and remove them to ensure smooth rolling. Lubricate the caster swivels and axles with a silicone-based lubricant if

they become stiff.

- **Drawers:** Keep drawer slides clean and free of obstructions. If drawers become difficult to open or close, apply a small amount of silicone lubricant to the slides.
- **Seat:** Inspect the fabric seat for any signs of wear, tears, or damage. Clean spills immediately to prevent staining.
- **General Safety:** Do not overload the tool chest or its drawers. Always be cautious of fingers when opening and closing drawers to prevent pinching.

## TROUBLESHOOTING

---

Refer to the following common issues and solutions:

- **Wheels not rolling smoothly:**
  - Check casters for trapped debris and remove.
  - Apply lubricant to the caster swivels and axles.
  - Ensure casters are securely attached and not loose.
- **Drawers sticking or difficult to open/close:**
  - Check for items obstructing the drawer slides.
  - Clean the drawer slides and apply a silicone lubricant.
  - Ensure drawers are not overloaded.
- **Unit feels unstable:**
  - Verify all assembly screws, especially those for the casters and frame, are securely tightened.
  - Ensure the unit is on a flat, level surface.

## SPECIFICATIONS

---

**Brand:** CRAFTSMAN

**Model:** B07M65L81H

**Product Dimensions:** 10.2 x 14 x 20.5 inches

**Item Weight:** 29.9 pounds

**Frame Material:** Metal

**Top Material Type:** Fabric

**Color:** Red

**Mounting Type:** Floor Mount

**Room Type:** Garage

**Number of Compartments:** 2 (drawers)

**Storage Options:** 2 drawers, 1 shelf (under seat), 2 compartments (side trays)

**Assembly Required:** Yes

**GTIN:** 820909705758

## WARRANTY AND SUPPORT

---

For warranty information, please refer to the documentation included with your product packaging or visit the

official CRAFTSMAN website. If you require further assistance, have questions about assembly, operation, or need to report a defect, please contact CRAFTSMAN customer service directly.

When contacting support, please have your product model number (B07M65L81H) and proof of purchase available.