



Manuals.plus /

› UpStart Components /

› User Manual for UpStart Components Universal Remote Control

UpStart Components RC-RCR503BZ-DL108

User Manual for UpStart Components Universal Remote Control

Model: RC-RCR503BZ-DL108

1. PRODUCT OVERVIEW

This manual provides instructions for the UpStart Components Replacement 3-Device Universal Remote Control, model RC-RCR503BZ-DL108. This remote is designed as a direct replacement and is compatible with various devices, including Sceptre TVs, using specific remote codes.

Key Features:

- Designed for easy replacement and operation.
- Quick replacement; no programming needed. Just install batteries and use.
- Made from premium quality materials for long-lasting durability.



Figure 1: Front view of the UpStart Components Universal Remote Control, showing all buttons and layout.

2. SETUP AND BATTERY INSTALLATION

The UpStart Components Universal Remote Control requires two AAA batteries for operation. Batteries are not included with the remote.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: This remote is designed for quick replacement and typically requires no programming. Once batteries are installed, it should be ready for use with compatible devices.

3. OPERATING INSTRUCTIONS

This universal remote control is designed to operate various devices. Its primary function is to replace your original remote without complex setup. It is compatible with Sceptre TVs and uses remote codes such as 0878, 1217, 1360, 1599, and 2506.

3.1. Button Functions

Refer to Figure 2 for a visual guide to the remote's buttons.



Figure 2: Detailed view of the remote control's buttons, highlighting the layout and labels.

- **POWER:** Turns the connected device on or off.
- **TV / SAT-CBL-DTC DVD-VCR:** Device selection buttons to control different types of equipment.
- **VOL+ / VOL-:** Increases or decreases the volume.
- **CHAN+ / CHAN-:** Changes the channel up or down.

- **MUTE:** Silences the audio.
- **MENU:** Accesses the device's menu.
- **Directional Pad (Up, Down, Left, Right, ENTER):** Navigates through menus and confirms selections.
- **Number Buttons (0-9):** Directly enters channel numbers or other numerical inputs.
- **SOURCE:** Changes the input source on the TV.
- **PLAY, PAUSE II, STOP, REW, FWD, REC:** Controls playback functions for compatible media devices (e.g., DVD, VCR).
- **CODE SEARCH:** Used for programming, though this model is designed for direct use.
- **SLEEP:** Activates the sleep timer function on compatible devices.
- **GO BACK:** Returns to the previous channel or menu.

3.2. Device Compatibility

This remote is specifically designed to be compatible with Sceptre TVs and other devices that utilize the listed remote codes. If your device is not a Sceptre TV, you may need to verify its compatibility with the provided remote codes.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

4.1. Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.2. Cleaning

To clean the remote, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's electronics or finish.

4.3. Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage, which can damage the remote. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common problems and solutions:

- **Remote is not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AAA batteries.
 - Ensure there are no obstructions between the remote and the device's infrared sensor.
 - Make sure you are within the effective range of the device.
- **Remote controls some functions but not others:**

- Verify that the correct device mode button (e.g., TV, DVD) is selected on the remote.
 - While this remote is designed for direct use, some specific device models might require a code. Refer to the original device's manual for compatible remote codes if issues persist.
- **Buttons are sticky or unresponsive:**
 - Clean the remote's surface and buttons as described in the Maintenance section.
 - Avoid spilling liquids on the remote.

6. SPECIFICATIONS

Feature	Description
Model Number	RC-RCR503BZ-DL108
Brand	UpStart Components
Compatible Devices	Television (specifically Sceptre TV with codes 0878, 1217, 1360, 1599, 2506)
Connectivity Technology	Infrared
Color	Black
Batteries Required	2 AAA batteries (not included)
Special Feature	Universal

7. WARRANTY AND SUPPORT

This product is an UpStart Components Brand replacement part and is not an OEM (Original Equipment Manufacturer) product. All mentions of brand names or model descriptions are made strictly to illustrate compatibility. All brand names and logos are registered trademarks of their respective owners. This product is not affiliated with any brands and is not covered under any warranties offered by the original manufacturers.

Any warranties for this product are offered solely by UpStart Components. For support or warranty inquiries, please refer to the contact information provided by UpStart Components at the point of purchase or on their official website.

Please retain your proof of purchase for any warranty claims.