



Manuals.plus /

- › **SIMPLETASTE** /
- › SIMPLETaste Electric Milk Frother User Manual

SIMPLETASTE 706-0004

SIMPLETaste Electric Milk Frother User Manual

Model: 706-0004

INTRODUCTION

Thank you for choosing the SIMPLETaste Electric Milk Frother. This automatic, battery-operated foam maker and drink mixer is designed to effortlessly create rich, creamy foam for your favorite beverages. Its hands-free operation and durable construction make it a convenient addition to any kitchen.



Figure 1: SIMPLETaste Electric Milk Frother with its components.

PRODUCT COMPONENTS

The SIMPLETaste Electric Milk Frother consists of the following parts:



1. Milk Cup

2. Durable Stainless Steel Whisk

3. Durable Stainless Steel Rod

4. Power On/Off Button

5. Silicon Base

6. Beaker Lid

Figure 2: Labeled components of the SIMPLETaste Milk Frother.

1. **Milk Cup:** Made of Tritan material, suitable for holding milk or other liquids.
2. **Durable Stainless Steel Whisk:** The whisking attachment for frothing.
3. **Durable Stainless Steel Rod:** Connects the whisk to the motor.
4. **Power On/Off Button:** Activates and deactivates the frother.
5. **Silicon Base:** Provides stability for the milk cup.
6. **Beaker Lid:** Covers the milk cup during operation.

The main unit houses the robust 12,000 RPM motor, powered by 2 AA batteries (not included).



Figure 3: Internal view of the frother's motor and battery compartment.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Install Batteries:** Open the battery compartment on the top unit and insert 2 AA batteries, ensuring correct polarity. Close the compartment securely.
3. **Initial Cleaning:** Before first use, wash the milk cup, stainless steel whisk, and beaker lid with warm, soapy water. Rinse thoroughly and dry. *Do not rinse the frother body under water or immerse it in water.*
4. **Assemble:** Place the milk cup onto the silicon base. Insert the stainless steel rod with the whisk into the top unit, then place the top unit onto the milk cup, ensuring it is securely seated.

OPERATING INSTRUCTIONS

The SIMPLETaste Electric Milk Frother offers hands-free operation for convenience.

1. **Add Liquid:** Pour your desired amount of milk (or other liquid) into the milk cup. The cup has measurement markings for guidance. For hot milk, warm it in a separate mug before pouring into the frother cup.
2. **Secure Lid:** Ensure the top unit with the whisk is properly placed and secured onto the milk cup.
3. **Start Frothing:** Press the Power On/Off Button located on the top unit. The frother will begin to operate automatically.

Just One Press To Froth



Figure 4: Activating the frother with a single press.

4. **Hands-Free Operation:** The frother is designed for hands-free use, allowing you to perform other tasks while it froths.



Figure 5: The SIMPLETaste frother offers hands-free convenience compared to traditional handheld models.

5. **Frothing Time:** The robust motor can turn milk into foam in approximately 10-30 seconds, depending on the desired consistency.
6. **Stop Frothing:** Press the Power On/Off Button again to stop the frother.
7. **Serve:** Carefully remove the top unit and pour the frothed milk into your beverage.

Easy to clean

DO NOT rinse the frother body under water or immerse the frother body in water.



Figure 6: Serving freshly frothed milk.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your frother.

1. **Disassemble:** Separate the top unit from the milk cup and silicon base.
2. **Wash Components:** The milk cup, stainless steel whisk, and beaker lid are dishwasher-safe. Alternatively, hand wash them with warm, soapy water immediately after use to prevent milk residue from drying.
3. **Clean Main Unit:** *Do NOT rinse the frother body under water or immerse the frother body in water.* Wipe the exterior of the top unit with a damp cloth. If necessary, carefully clean the stainless steel rod and whisk attachment with a damp cloth or sponge, avoiding contact with the motor housing.

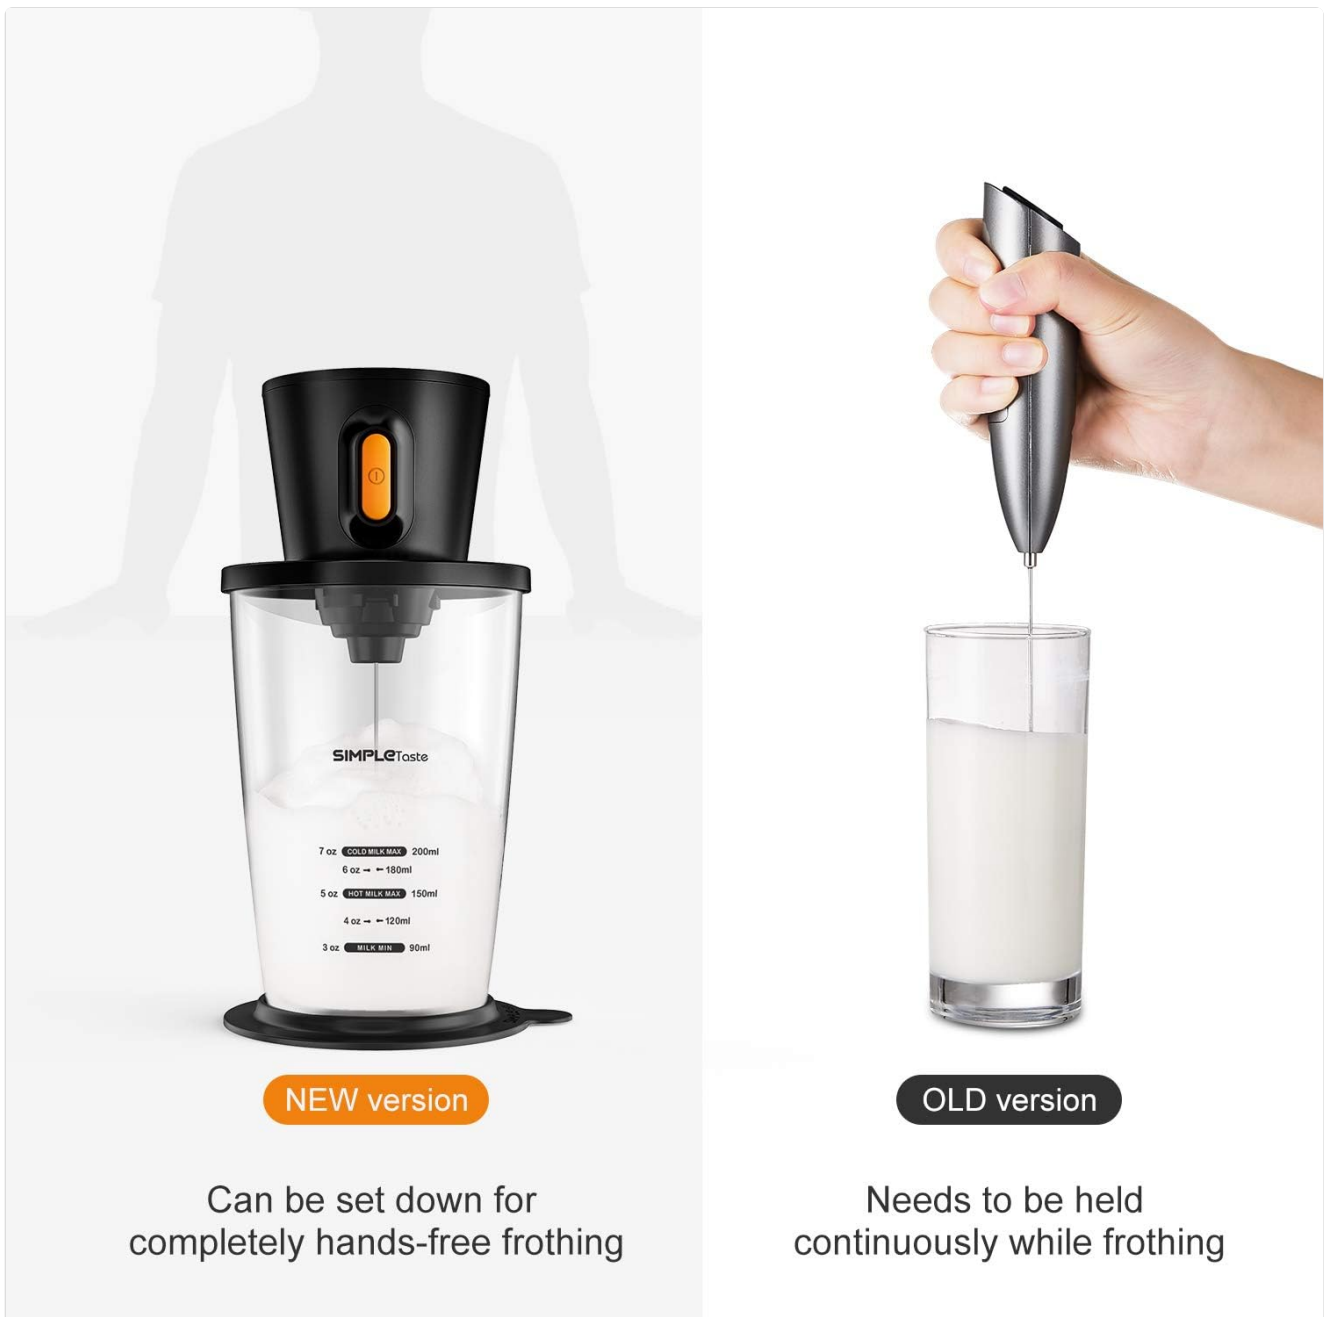


Figure 7: Step-by-step cleaning guide for the frother.

4. **Dry:** Ensure all parts are completely dry before reassembling or storing.
5. **Storage:** Store the frother in a clean, dry place.

TROUBLESHOOTING

If you encounter issues with your SIMPLETaste Electric Milk Frother, please review the following common problems and solutions:

- **Frother does not turn on:**
 - Check if batteries are inserted correctly with proper polarity.
 - Replace old batteries with new AA batteries.
 - Ensure the top unit is securely attached to the milk cup.
- **Milk is not frothing properly:**
 - Ensure the milk level is within the recommended range (between MIN and MAX lines).
 - Use fresh, cold milk for best frothing results. Different types of milk (dairy, almond, oat) may yield varying froth

consistencies.

- Check if the whisk is clean and free from obstructions.

- **Frother makes unusual noise:**

- Ensure the whisk is not bent or damaged.
- Verify that the top unit is correctly seated on the milk cup.

If problems persist, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	SIMPLETASTE
Model Name	706-0004
Color	Yellow/Black
Material	Plastic, Stainless Steel
Product Dimensions	4.72"W x 8.07"H
Item Weight	10.4 ounces
Power Source	Battery Powered (2 AA batteries, not included)
Wattage	12 watts
Capacity	7 ounces
Product Care Instructions	Hand Wash Only (frother body), Dishwasher Safe (cup, whisk, lid)
UPC	842120150032
ASIN	B07M6K44BC

WARRANTY AND SUPPORT

Specific warranty information and detailed customer support contacts are not provided within this manual. Please refer to the product packaging or the manufacturer's official website for warranty details and support options.

For further assistance, you may visit the SIMPLETASTE Store on Amazon.