

Timex TW2R98500

Timex Women's 25mm Blue/Gold-Tone Elastic Wristwatch Instruction Manual

Model: TW2R98500

INTRODUCTION

Thank you for choosing a Timex watch. This manual provides important information regarding the setup, operation, maintenance, and specifications of your new Timex Women's 25mm Blue/Gold-Tone Elastic Wristwatch. Please read these instructions carefully to ensure proper use and care of your timepiece.





Image: Front view of the Timex Women's 25mm Blue/Gold-Tone Elastic Wristwatch, showcasing the blue dial and gold-tone expansion band.

Key Features:

- **12mm Blue and Gold-Tone Stainless Steel Expansion Band:** Designed for comfort, fitting wrist circumferences up to 7.5 inches.
- **Silver and White Dial:** Features partial Arabic numerals for clear time reading.
- **Analog Quartz Movement:** Ensures accurate timekeeping.

- **25mm Case Diameter:** A classic size suitable for women's wrists.
- **Water Resistant to 30m (100ft):** Suitable for splashes or brief immersion in water. Not recommended for swimming or bathing.

SETUP

Setting the Time:

1. **Locate the Crown:** The crown is the small knob on the right side of the watch case.
2. **Pull Out the Crown:** Gently pull the crown outwards until you feel a click. This will stop the second hand (if present) and allow you to adjust the time.
3. **Set the Time:** Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the desired time.
4. **Push In the Crown:** Once the time is set, push the crown back into its original position. The second hand will resume movement.



Image: Side view of the watch case, highlighting the crown used for setting the time.

Battery Activation:

Your watch comes with a pre-installed battery. If the watch is not running upon arrival, ensure the crown is fully pushed in. If it still does not run, the battery may need replacement. Please refer to the 'Maintenance' section for battery information.

OPERATING YOUR WATCH

Wearing the Watch:

The elastic expansion band is designed for easy on-and-off wear. Simply stretch the band gently to slide the watch over your hand and onto your wrist. The band will then contract to fit comfortably.



Image: The Timex watch worn on a wrist, demonstrating its fit and appearance.

Water Resistance:

Your Timex watch is water resistant to 30 meters (100 feet). This means it is suitable for everyday use and can withstand splashes, rain, or brief immersion in water. However, it is **not** designed for swimming, showering, or diving. Avoid operating the crown while the watch is wet to prevent water intrusion.

MAINTENANCE

Cleaning Your Watch:

To clean your watch, wipe the case and band with a soft, damp cloth. For the metal expansion band, a soft brush can be used to remove dirt from between the links. Avoid using harsh chemicals or abrasive materials, as these can damage the finish.

Battery Replacement:

Your watch uses one product-specific battery, which is included. When the watch stops running, it indicates the battery needs replacement. Battery replacement should ideally be performed by a qualified watch technician to ensure the watch's water resistance is maintained and to prevent damage to the movement. Refer to the 'Specifications' section for battery type information.

Storage:

When not wearing your watch for extended periods, store it in a cool, dry place away from direct sunlight and extreme temperatures. Keeping it in its original packaging or a watch box can help protect it from dust and scratches.

TROUBLESHOOTING

• Watch Not Running:

- Ensure the crown is fully pushed into the watch case.
- If the crown is pushed in and the watch is still not running, the battery may need to be replaced.

• Time Inaccuracy:

- Check if the crown is fully pushed in. If it is partially pulled out, the watch may not keep accurate time.
- Extreme temperatures or strong magnetic fields can affect quartz watch accuracy. Avoid exposing your watch to such conditions.
- If the watch consistently runs fast or slow, it may require servicing by a professional.

- **Water Inside the Watch:**

- If you notice condensation or water droplets inside the watch, take it to a qualified watch technician immediately. This indicates a breach in water resistance, and prompt action can prevent further damage to the movement.

SPECIFICATIONS

Brand	Timex
Model Number	TW2R98500
Case Diameter	25 mm
Band Material	Stainless Steel (Expansion)
Movement	Analog Quartz
Water Resistance	30 meters (100 feet)
Battery	1 product-specific battery required, included
Material	Metal
Item Weight	36.29 g

WARRANTY AND SUPPORT

Timex watches are manufactured to high standards and undergo rigorous quality control. For specific warranty information, please refer to the warranty card included with your purchase or visit the official Timex website. Keep your proof of purchase for any warranty claims.

If you require technical assistance, servicing, or have questions not covered in this manual, please contact Timex customer support. Contact information can typically be found on the official Timex website or on your warranty documentation.