

Mayer MMRC20

Mayer MMRC20 0.8L Ceramic Pot Rice Cooker Instruction Manual

Model: MMRC20

1. PRODUCT OVERVIEW

The Mayer MMRC20 Rice Cooker is designed for efficient and convenient cooking of various dishes. It features a 0.8L capacity ceramic pot, which promotes even heat distribution and prevents sticking. The suspended heating system ensures consistent cooking results, producing fluffy rice and other well-prepared meals. This appliance is equipped with multiple cooking functions to cater to diverse culinary needs.

Included Components

- 1 x Mayer MMRC20 Rice Cooker Unit
- 1 x Ceramic Inner Pot
- 1 x Measuring Cup
- 1 x Rice Scoop



Figure 1: Mayer MMRC20 Rice Cooker with its standard accessories, including the ceramic inner pot, measuring cup, and rice scoop.

2. IMPORTANT SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage to the appliance or injury to yourself, please read and follow these safety precautions carefully.

- Always ensure the voltage indicated on the appliance matches your local power supply before connecting.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children.
- Unplug the rice cooker from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only accessories recommended by the manufacturer.
- Do not use the appliance outdoors.
- Always place the rice cooker on a stable, flat, heat-resistant surface.
- Avoid touching hot surfaces. Use handles or knobs.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- Ensure the lid is properly closed during operation to prevent steam burns.
- Do not block the steam vent during cooking.

3. PRODUCT COMPONENTS AND CONTROL PANEL



Figure 2: Front view of the Mayer MMRC20 Rice Cooker, highlighting the main unit and control panel.

Control Panel Functions:

- **Start:** Initiates the selected cooking program.
- **Keep Warm/Cancel:** Maintains food at a warm temperature after cooking or cancels the current operation.
- **Rice:** Standard program for cooking rice.
- **Porridge:** Program for cooking porridge.
- **Soup:** Program for preparing soups.
- **Baby Food:** Dedicated program for cooking baby food.
- **Claypot Rice:** Program for cooking claypot-style rice.
- **Timer:** Sets a delayed start time for cooking.
- **Hours:** Adjusts the hours for the timer function.
- **Mins:** Adjusts the minutes for the timer function.

4. INITIAL SETUP

1. **Unpack:** Carefully remove all packaging materials and accessories from the box.
2. **Clean:** Before first use, wash the ceramic inner pot, measuring cup, and rice scoop with warm soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the rice cooker on a stable, level, and heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the appliance.

4. **Power Connection:** Connect the power cord to the rice cooker's power inlet, then plug it into a grounded electrical outlet.



Figure 3: Side view of the rice cooker, illustrating the power cord connection point.

5. OPERATING INSTRUCTIONS

General Cooking Steps:

1. **Prepare Ingredients:** Measure the desired amount of rice or other ingredients using the provided measuring cup. Rinse rice thoroughly if required.
2. **Add to Pot:** Place the prepared ingredients into the ceramic inner pot. Add the appropriate amount of water according to the recipe or rice type.
3. **Insert Pot:** Place the inner pot into the main rice cooker unit, ensuring it sits correctly and makes full contact with the heating element.
4. **Close Lid:** Close the lid securely until it clicks into place.
5. **Select Function:** Plug in the rice cooker. The display will light up. Press the desired cooking function button (e.g., **Rice**, **Porridge**, **Soup**, **Baby Food**, **Claypot Rice**).
6. **Start Cooking:** Press the **Start** button to begin the cooking process. The indicator light for the selected function will illuminate.
7. **Completion:** Once cooking is complete, the rice cooker will automatically switch to the **Keep Warm** mode. The display will show the elapsed time in Keep Warm mode.
8. **Serve:** Open the lid carefully to avoid steam. Use the provided rice scoop to serve.
9. **Cancel:** To cancel any operation or exit Keep Warm mode, press the **Keep Warm/Cancel** button.

Using the Timer Function:

The timer function allows you to set a delayed start for your cooking.

1. Prepare ingredients and place them in the inner pot as described above.
2. Close the lid.
3. Press the desired cooking function button.
4. Press the **Timer** button. The display will show a default delay time.
5. Use the **Hours** and **Mins** buttons to adjust the desired delay time.
6. Press the **Start** button to confirm the timer setting. The timer indicator will light up, and the countdown will begin.
7. The rice cooker will automatically start cooking once the set delay time has elapsed.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your Mayer MMRC20 Rice Cooker and ensure optimal performance.

- **Before Cleaning:** Always unplug the rice cooker from the power outlet and allow it to cool completely before cleaning.
- **Ceramic Inner Pot:** Clean the inner pot after each use with mild detergent and warm water. Avoid using abrasive materials, scouring pads, or harsh chemicals, as these can damage the non-stick glaze layer. To maintain the glaze layer, do not soak the inner pot for extended periods and avoid sudden temperature changes (e.g., placing a hot pot under cold water).
- **Lid and Inner Lid:** The inner lid may be detachable for thorough cleaning. Wash it with warm soapy water, rinse, and dry. Wipe the main lid exterior with a damp cloth.
- **Main Unit Exterior:** Wipe the exterior of the rice cooker with a soft, damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
- **Accessories:** Wash the measuring cup and rice scoop with warm soapy water and dry them.
- **Storage:** Ensure all parts are clean and dry before storing the rice cooker in a cool, dry place.

7. TROUBLESHOOTING GUIDE

Refer to the table below for common issues and their potential solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Rice cooker does not turn on.	No power supply.	Check if the power cord is securely plugged into both the appliance and the wall outlet. Test the outlet with another appliance.
Rice is undercooked or too hard.	Insufficient water; lid not properly closed; incorrect cooking function selected.	Ensure correct water-to-rice ratio. Verify the lid is securely closed. Select the appropriate cooking function for rice.
Rice is overcooked or mushy.	Too much water; incorrect cooking function selected.	Reduce water amount for future cooking. Ensure the correct cooking function is selected.
Food sticks to the inner pot.	Inner pot not clean; insufficient water; prolonged "Keep Warm" cycle.	Ensure the inner pot is clean before use. Add sufficient water. Avoid leaving food in "Keep Warm" mode for excessively long periods.
Steam leaks from the lid.	Lid not properly closed; seal ring dirty or damaged.	Ensure the lid is securely closed. Clean the seal ring and check for any damage. Replace if necessary.

8. PRODUCT SPECIFICATIONS

Brand	Mayer
Model	MMRC20
Capacity	0.8 Liters
Material (Inner Pot)	Ceramic (Glaze layer)
Material (Exterior)	Plastic
Color	White
Special Features	Non-Stick, 5 Cooking Functions
Power Source	Corded Electric
Product Dimensions (D x W x H)	30.4D x 21.7W x 25.4H centimetres
Item Weight	2.9 Kilograms









Figure 4: Approximate dimensions of the Mayer MMRC20 Rice Cooker for scale.

9. WARRANTY AND CUSTOMER SUPPORT

For information regarding the product warranty, please refer to the warranty card included with your purchase or the official Mayer website.

Should you encounter any issues not covered in this manual or require further assistance, please contact Mayer customer support through their official channels.

Related Documents - MMRC20

	<p>Mayer Digital Air Pot (3L) MMAP30D User Manual</p> <p>User manual for the Mayer Digital Air Pot, model MMAP30D, part of the Paradise Collection. Provides instructions and specifications for the 3L air pot.</p>
	<p>Mayer MMFS28 Food Steamer: Instruction Manual and User Guide</p> <p>Comprehensive guide for the Mayer MMFS28 Food Steamer, covering safety instructions, assembly, operation, cleaning, maintenance, and warranty information.</p>
	<p>Mayer MMSO2050 Steam Oven User Manual</p> <p>Comprehensive user manual for the Mayer MMSO2050 Steam Oven, covering safety instructions, operating features, cleaning, maintenance, and troubleshooting for optimal use.</p>
	<p>Mayer MM076 Electric Oven - User Manual</p> <p>Instruction manual for the Mayer MM076 Electric Oven, The Professional Chef Series. Includes safety instructions, parts introduction, controls and operations, function guide, and cleaning and maintenance.</p>
	<p>Mayer MMDO13C Built-in Oven: User Manual and Safety Guide</p> <p>Comprehensive user manual for the Mayer MMDO13C built-in oven. Learn about safety, installation, operation, cooking modes, accessories, cleaning, troubleshooting, and energy-efficient use.</p>
	<p>Mayer MMDO6M Built-in Electric Oven User's Manual</p> <p>Comprehensive user manual for the Mayer MMDO6M Built-in Electric Oven, covering installation, operation, safety guidelines, cleaning, and maintenance for optimal performance.</p>