

[Manuals.plus](#) /

› [Chicco](#) /

› Chicco GoFit Plus Backless Booster Car Seat Instruction Manual

Chicco GoFit Plus

Chicco GoFit Plus Backless Booster Car Seat Instruction Manual

Model: GoFit Plus | Brand: Chicco

1. PRODUCT OVERVIEW

The Chicco GoFit Plus Backless Booster Car Seat is designed for children who meet specific weight and height requirements, providing comfort and safety during vehicle travel. It features a LATCH attachment system for stability, integrated belt guides for proper seat belt positioning, and easy-to-clean components.



Image: A child seated in the Chicco GoFit Plus Backless Booster Car Seat, secured with the vehicle's seat belt. The booster seat is black and grey with orange accents, featuring cup holders on both sides.

2. SAFETY GUIDELINES

- **Age and Size Requirements:** This booster seat is for children who are at least 4 years old, weigh between 40-110 lbs., and are 44-57 inches tall. The child must be able to sit relatively still in the same seated position throughout the car ride.
- **Vehicle Seat Belt Use:** Always use the vehicle's lap and shoulder belt system with the booster seat. Ensure the lap belt is low on the child's hips, touching the thighs, and the shoulder belt crosses the center of the child's chest and shoulder.
- **LATCH System:** The LATCH attachment helps stabilize the booster seat when unoccupied and during child entry/exit. It is not a primary restraint system.
- **Proper Installation:** Follow all instructions in this manual and in the written instructions issued by the child restraint manufacturer.



Image: Proper shoulder belt positioning using the integrated shoulder belt clip on the Chicco GoFit Plus booster seat.

3. SETUP AND INSTALLATION

3.1 LATCH Attachment

1. Locate the LATCH anchors in your vehicle's back seat.
2. Extend the LATCH connectors from the booster seat.
3. Push the LATCH connectors onto the vehicle's LATCH anchors until they click securely into place.
4. Pull the adjustment strap at the front of the booster seat to tighten the LATCH connection, ensuring the booster seat is snug against the vehicle seat.

[REDACTED]

Video: Demonstrates the quick-release LATCH system and installation of the Chicco GoFit Plus Backless Booster Seat.

[REDACTED]

Video: Shows the unboxing and installation process of the Chicco GoFit Plus Backless Booster Seat.

[REDACTED]

Video: Illustrates the easy installation and portability of the Chicco GoFit Plus Backless Booster Car Seat.

3.2 Quick-Release LATCH Removal

To remove the booster seat, simply pull the quick-release handle located at the front of the seat. This allows for one-hand removal, making it convenient for switching between vehicles.



Image: A hand demonstrating the quick-release LATCH removal feature of the booster seat.

4. OPERATING INSTRUCTIONS

4.1 Securing Your Child

1. Ensure the booster seat is properly installed and secured with the LATCH system.
2. Have your child sit on the booster seat, ensuring their back is flat against the vehicle seat back.
3. Guide the vehicle's lap belt across your child's upper thighs, ensuring it sits low on the hips.
4. Route the vehicle's shoulder belt through the integrated shoulder belt clip on the booster seat, ensuring it rests snugly across the center of your child's chest and shoulder, not on the neck or face.
5. Buckle the vehicle's seat belt and pull any slack to ensure a tight and secure fit.

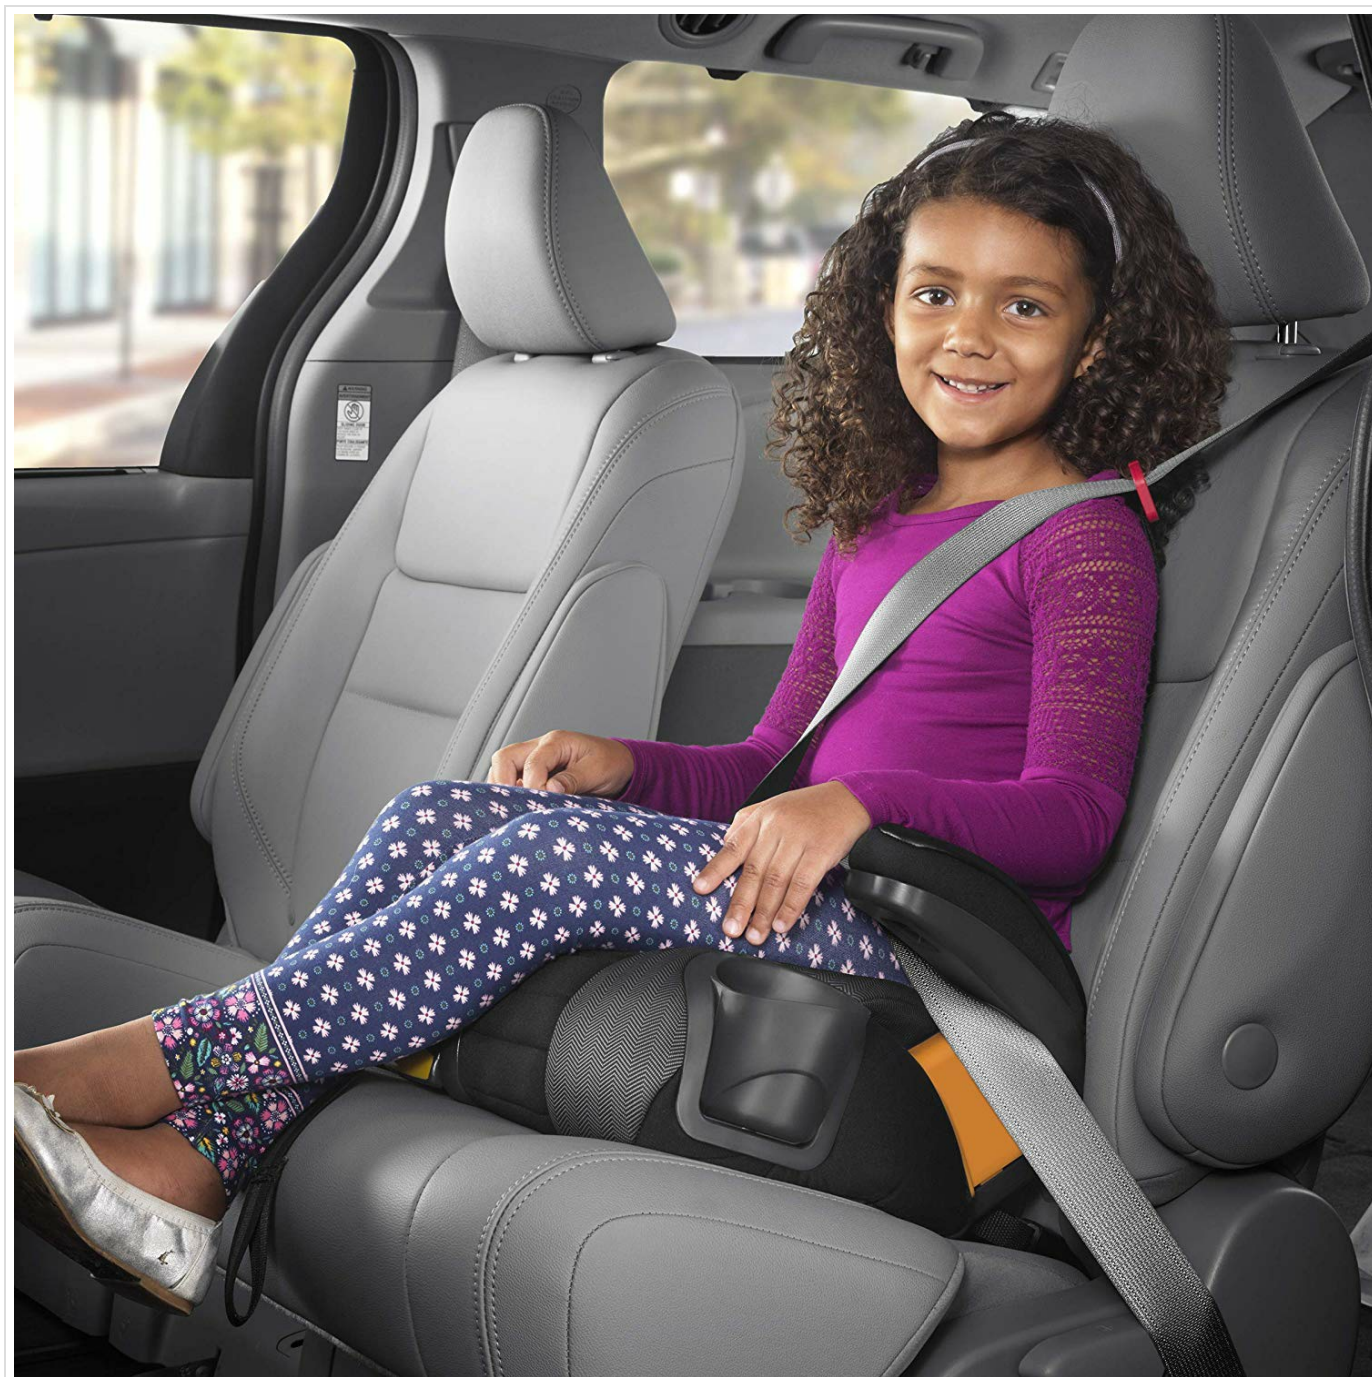


Image: A child demonstrating correct seating and belt positioning in the booster seat.

4.2 Using CupFolders

The GoFit Plus features two soft-sided CupFolders that can be easily flexed and folded out of the way to save space when not in use. To use, simply pull them out. To store, push them inwards.

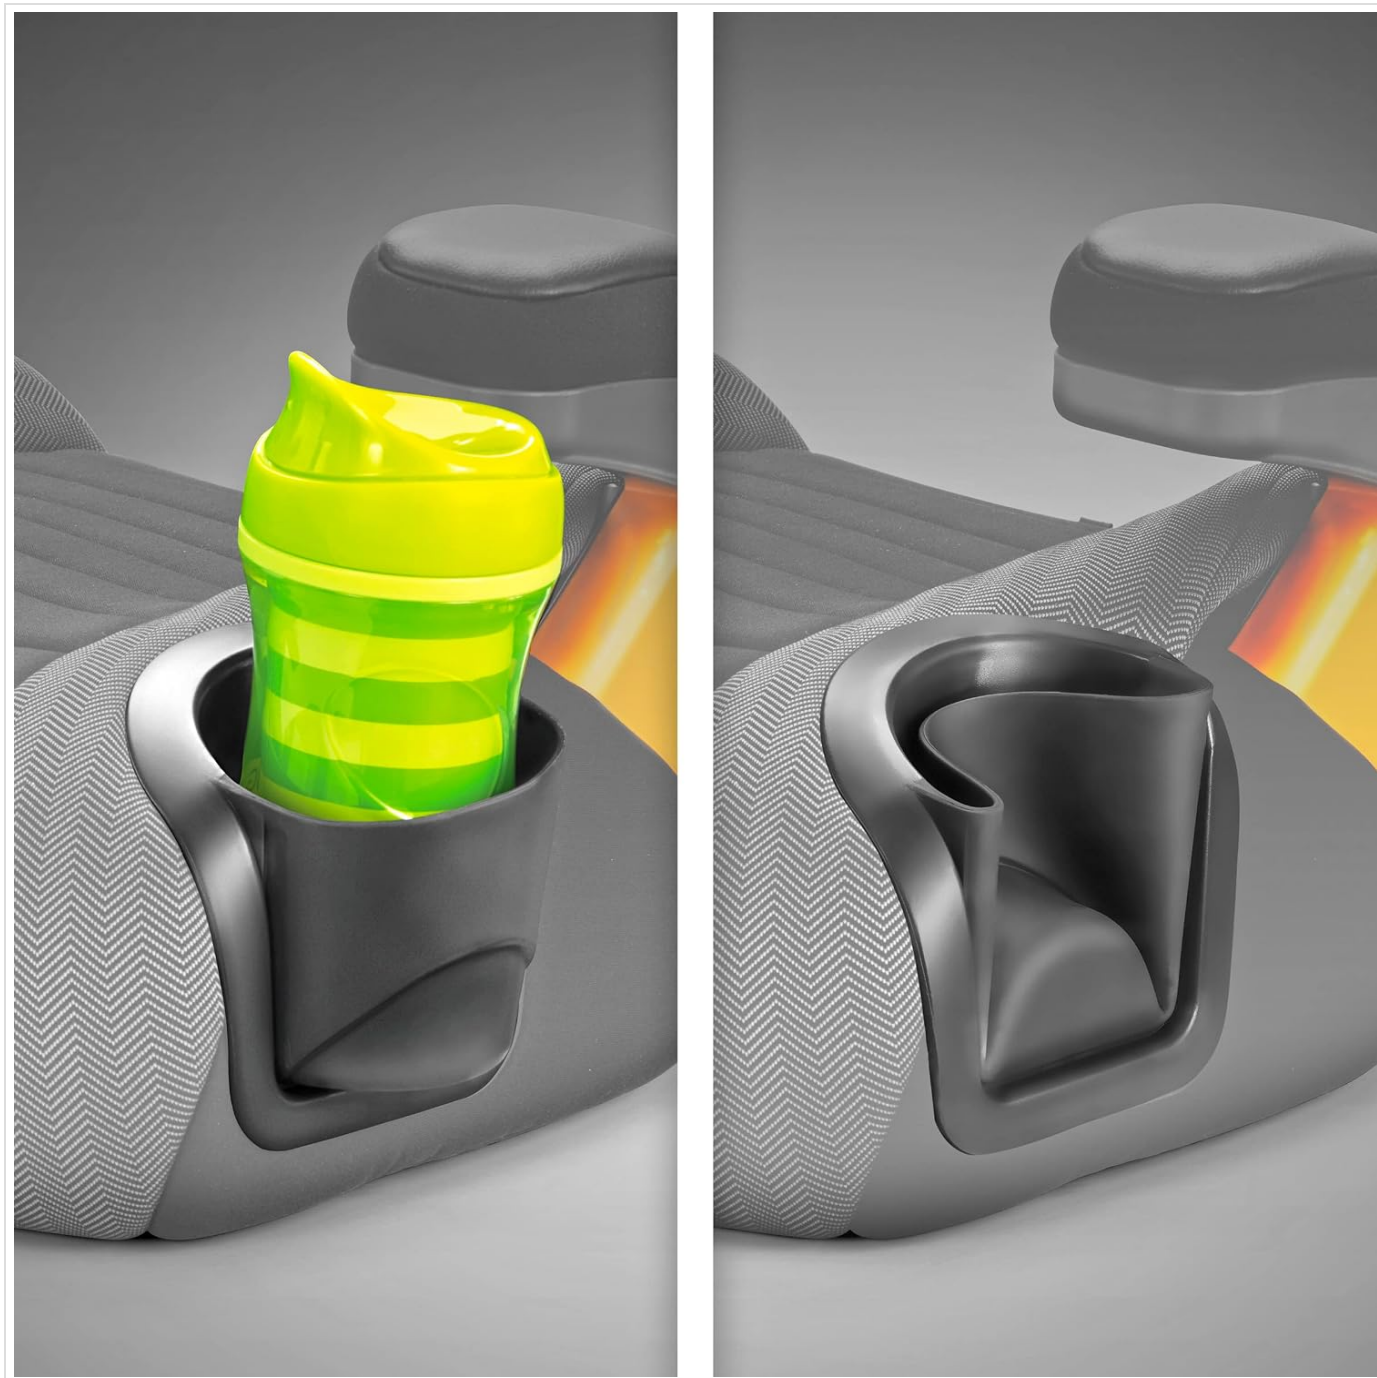


Image: Demonstration of the flexible CupFolders, showing them extended for use and folded for space-saving.

5. MAINTENANCE AND CLEANING

- **Fabric Covers:** All fabric covers, including the pop-out armrest covers, are removable and machine-washable. Use cold water on a delicate cycle and air dry. Do not bleach.
- **Foam Insert:** The foam insert may be hand rinsed and hung to dry.
- **Cup Holders:** The soft-sided CupFolders are easy to remove and are dishwasher-safe for convenient cleaning.
- **Plastic/Metal Parts:** Wipe plastic and metal parts with a soft, damp cloth and mild soap. Do not use abrasive cleaners or solvents.



Image: Demonstration of removing the armrest cover for cleaning.



Video: Highlights the machine-washable features of the booster seat's fabric covers.

6. TROUBLESHOOTING

If you encounter any issues with your Chicco GoFit Plus Backless Booster Car Seat, please refer to the following general troubleshooting tips:

- **Loose Installation:** Ensure the LATCH connectors are fully engaged and the adjustment strap is pulled tight. Wiggle the seat to confirm it does not move more than one inch side-to-side or front-to-back at the belt path.
- **Improper Belt Fit:** Re-check the vehicle's lap and shoulder belt positioning according to the "Securing Your Child" section. The shoulder belt should not rub against the child's neck.
- **Child Discomfort:** Verify that the child meets all age, weight, and height requirements. Ensure clothing is not interfering with the fit.

For further assistance, contact Chicco customer support or consult the full user manual.

7. SPECIFICATIONS

Feature	Detail
Maximum Weight Recommendation	110 Pounds
Minimum Height Recommendation	38 Inches
Minimum Weight Recommendation	40 Pounds
Maximum Height Recommended	57 Inches
Installation Type	LATCH
Orientation	Forward Facing
Harness Type	3-Point (Vehicle's)
Item Dimensions (D x W x H)	15"D x 17"W x 8.5"H
Item Weight	5.5 Pounds
Material Type	Metal, Plastic, Polyester
Color	Iron



Image: Visual representation of the booster seat's dimensions.

8. WARRANTY AND SUPPORT

The Chicco GoFit Plus Backless Booster Car Seat comes with a**1-year limited warranty** from the manufacturer, Artsana USA, Inc.

For warranty claims, product support, or additional information, please refer to the full user guide included with your product or visit the official Chicco website.

© 2026 Chicco. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question