

SEVERIN 8922-000

SEVERIN Retro RKG 8922 Refrigerator-Freezer Combination User Manual

Model: RKG 8922-000

INTRODUCTION

Thank you for choosing the SEVERIN Retro RKG 8922 Refrigerator-Freezer Combination. This appliance is designed to provide efficient and reliable food storage with a stylish retro aesthetic. This manual provides essential information for the safe and effective use, installation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before operation and keep it for future reference.

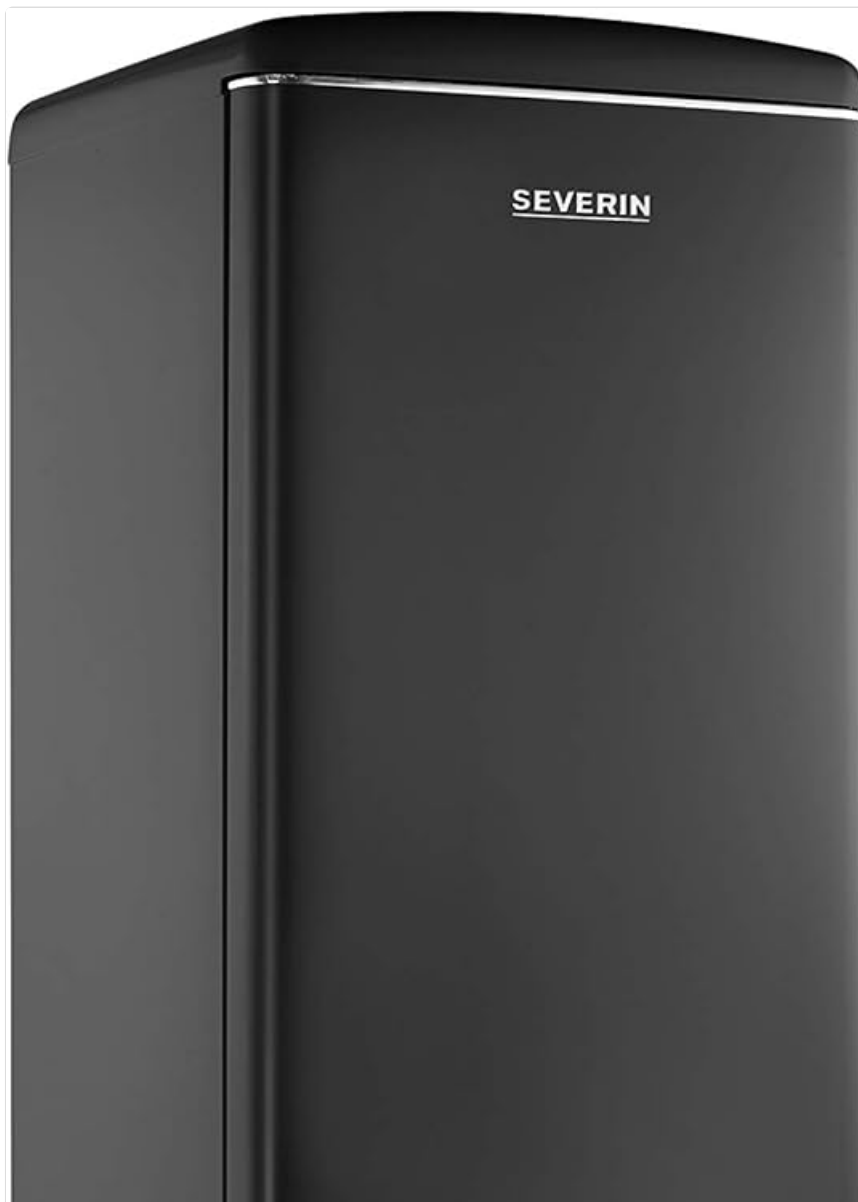




Figure 1: Front view of the SEVERIN Retro RKG 8922 Refrigerator-Freezer Combination in black, showcasing its sleek design and chrome handles.

SAFETY INSTRUCTIONS

- Ensure the appliance is disconnected from the power supply before cleaning or maintenance.
- Do not damage the refrigerant circuit. If damaged, avoid open flames and ventilate the room.
- This appliance is intended for household use only.
- Keep ventilation openings clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Children should be supervised to ensure they do not play with the appliance.

SETUP AND INSTALLATION

1. Unpacking

Carefully remove all packaging materials. Inspect the appliance for any transport damage. Report any damage to your retailer immediately.

2. Placement

Place the refrigerator-freezer on a firm, level surface. Ensure adequate ventilation around the appliance. Maintain a minimum distance of 10 cm from walls and other furniture to allow for proper air circulation and heat dissipation. Avoid direct sunlight and heat sources.

- **Dimensions (L x W x H):** 55 x 61.5 x 183 cm
- **Weight:** 53 kg

3. Initial Cleaning

Before first use, clean the interior and all accessories with lukewarm water and a mild detergent. Dry thoroughly.

4. Power Connection

Connect the appliance to a properly grounded electrical outlet. Allow the appliance to stand upright for at least 2-4 hours before plugging it in to allow the refrigerant to settle.

OPERATING INSTRUCTIONS



Figure 2: Interior view of the SEVERIN Retro RKG 8922, showing the refrigerator compartment with adjustable shelves and the freezer compartment with drawers.

1. Temperature Control

The temperature inside the refrigerator is controlled by a thermostat located within the appliance. Adjust the dial to your desired setting. A lower number indicates a warmer temperature, and a higher number indicates a colder temperature. The LED interior lighting illuminates the refrigerator compartment.

2. Refrigerator Compartment (181 Liters)

- **Adjustable Shelves:** The four safety glass shelves can be adjusted to different heights to accommodate various food items.
- **Fresh Food Compartment:** A spacious drawer is provided at the bottom for storing fruits and vegetables, helping to maintain their freshness.
- **Door Bins:** Two universal compartments and a bottle rack (for bottles up to 1.5 liters) are located on the door for organized storage of smaller items and beverages.

3. Freezer Compartment (63 Liters)

The 4-star freezer compartment is located at the bottom of the appliance and features three transparent drawers for easy organization of frozen goods.

- **Freezing Capacity:** Capable of freezing up to 3 kg of fresh food per 24 hours.
- **Storage Time during Power Failure:** Food can remain safely stored for up to 15 hours in the event of a power outage.

MAINTENANCE AND CLEANING

1. Cleaning the Interior

Regularly clean the interior of the refrigerator-freezer. Unplug the appliance before cleaning. Use a soft cloth and a solution of lukewarm water with a mild, non-abrasive detergent. Avoid harsh chemicals or abrasive cleaners. Rinse with clean water and dry thoroughly.

2. Defrosting

This appliance features a manual defrost system. When the ice layer in the freezer compartment reaches a thickness of about 3-5 mm, it should be defrosted. To defrost:

1. Unplug the appliance.
2. Remove all food items and store them in a cool place.
3. Leave the freezer door open to allow ice to melt naturally. You can place towels at the bottom to absorb water.
4. Once defrosted, clean and dry the interior thoroughly before plugging the appliance back in and returning food.

3. Exterior Cleaning

Clean the exterior surfaces with a soft, damp cloth. For stubborn marks, use a mild detergent. Wipe dry with a clean cloth. Regularly clean the condenser coils at the back of the appliance with a soft brush or vacuum cleaner to maintain efficiency.



Figure 3: Detail of the stylish chrome handles, which should be cleaned with a soft, damp cloth to preserve their finish.

TROUBLESHOOTING

Before contacting service, please check the following common issues:

Problem	Possible Cause	Solution
Appliance does not operate.	No power supply; thermostat set to '0' or too warm.	Check power plug and fuse; adjust thermostat setting.
Temperature is not cold enough.	Door not closed properly; frequent door opening; large amount of warm food inserted; poor ventilation; thermostat setting too warm.	Check door seal and close firmly; avoid frequent opening; allow food to cool before placing inside; ensure adequate ventilation; adjust thermostat to a colder setting.

Problem	Possible Cause	Solution
Excessive noise.	Appliance not level; contact with wall/furniture; normal operating sounds.	Adjust leveling feet; ensure clearance; some sounds (e.g., gurgling, humming) are normal.
Water accumulation inside.	Drain hole blocked; door left open too long.	Clear the drain hole (usually at the back of the fridge compartment); ensure door is closed properly.

If the problem persists after checking these points, please contact authorized service personnel.





SPECIFICATIONS

Feature	Detail
Model Number	RKG 8922-000
Total Capacity	244 Liters
Refrigerator Capacity	181 Liters
Freezer Capacity	63 Liters
Dimensions (L x W x H)	55 x 61.5 x 183 cm
Weight	53 kg
Energy Efficiency Class	E (on a scale of A to G)
Annual Energy Consumption	Approx. 202 kWh
Noise Level	40 dB (A) (Noise Class C)
Climate Class	N-ST (16 - 38 °C)
Defrost System	Manual
Color	Matte Black
Installation Type	Freestanding

WARRANTY AND SUPPORT

SEVERIN products are manufactured to high-quality standards and come with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, spare parts, or service inquiries, please contact your local SEVERIN service center or the retailer from whom you purchased the appliance. Always have your model number (RKG 8922-000) and purchase date available when contacting support. You can find more information and contact details on the official SEVERIN website: www.severin.com

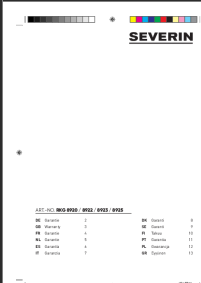Related Documents

	<p>SEVERIN Appliance Warranty Information</p> <p>This document outlines the warranty terms and conditions provided by SEVERIN for its appliances, including model numbers RKG 8920, RKG 8922, RKG 8923, and RKG 8925. It details consumer rights, manufacturer commitments, warranty exclusions, and the procedure for making a claim.</p>
	<p>SEVERIN Retro Kühlschrank Bedienungsanleitung & Technische Daten (RKG 8890-8936)</p> <p>Umfassende Anleitung für SEVERIN Retro Kühlschränke (Modelle RKG 8890-8936). Enthält Informationen zu Installation, Nutzung, Sicherheit, Wartung und Energieeffizienz.</p>
	<p>SEVERIN RKG 8983/8984/8985/8986/8989/8992 Retro Refrigerator User Manual</p> <p>Comprehensive user manual for the SEVERIN RKG retro-style refrigerator series, covering setup, operation, safety, and maintenance. Learn how to properly use and care for your SEVERIN refrigerator.</p>
	<p>SEVERIN Retro Kühlschrank RKS 8830 Gebrauchsanweisung</p> <p>Umfassende Gebrauchsanweisung für SEVERIN Retro Kühlschränke der Modelle RKS 8830 bis RKS 8835. Enthält wichtige Informationen zu Sicherheit, Bedienung, Wartung und Energieeffizienz.</p>

lang: **score:11** filesize: 247.24 K page_count: 1 document date: 2019-05-20