

[Manuals.plus](#) /

› [Areyourshop](#) /

› Areyourshop Drive Belt 23100-MCT-003 User Manual

Areyourshop 23100-MCT-003

Areyourshop Drive Belt 23100-MCT-003 User Manual

For Honda FJS600 Silver Wing, FJS 600 Silver Wing ABS, FSC600 SilverWing Scooter, FSC600 (ABS)

PRODUCT OVERVIEW

This manual provides essential information for the Areyourshop Drive Belt, part number 23100-MCT-003. This high-quality aramid fiber toothed belt is designed for specific Honda scooter models, ensuring reliable power transmission.

It is engineered for exceptional strength and durability, suitable for various all-terrain conditions and utility vehicle applications.



Image: The Areyourshop Drive Belt 23100-MCT-003, a black toothed belt made of aramid fiber, designed for power transmission in scooters.

COMPATIBILITY

This drive belt is compatible with the following Honda models:

- Honda FJS600 Silver Wing (2001-2011)
- Honda FJS 600 Silver Wing ABS (2003-2015)
- Honda FSC600 SilverWing Scooter (2002-2013)
- Honda FSC600 (ABS) (2003-2013)

Please verify your vehicle's model and year to ensure proper fitment before installation.

SETUP AND INSTALLATION

Installation of a drive belt typically requires specialized tools and mechanical knowledge. It is highly recommended that installation be performed by a qualified technician or an individual with experience in scooter maintenance.

General Installation Steps (Consult your vehicle's service manual for detailed instructions):

1. **Preparation:** Ensure the vehicle is on a stable stand and the engine is cool. Disconnect the battery if necessary.
2. **Access the Drive System:** Remove the necessary covers and components to gain access to the continuously variable transmission (CVT) system, which houses the drive belt.
3. **Remove Old Belt:** Carefully remove the old drive belt. Note its orientation and how it sits within the pulleys.
4. **Inspect Pulleys:** Inspect the primary and secondary pulleys for wear, damage, or debris. Clean them thoroughly.
5. **Install New Belt:** Install the new Areyourshop drive belt, ensuring it is correctly seated in both the primary (variator) and secondary (clutch) pulleys. The belt should be installed with the correct rotational direction if indicated on the belt itself.
6. **Reassemble:** Reinstall all covers and components removed during disassembly.
7. **Test:** Start the engine and perform a low-speed test to ensure proper operation before full use.



Image: The drive belt shown with approximate dimensions (56.6cm / 22.28 inches), which is crucial for verifying fitment.

OPERATING CONSIDERATIONS

Once installed, the drive belt operates as part of your scooter's CVT system, transmitting power from the engine to the rear wheel. Proper operation relies on the belt's integrity and the condition of the pulleys.

- **Initial Break-in:** It is advisable to perform a gentle break-in period for a new drive belt. Avoid aggressive acceleration or high-speed riding for the first 50-100 miles to allow the belt to seat properly.
- **Smooth Operation:** A properly functioning drive belt should provide smooth and consistent power delivery without excessive noise or slippage.

MAINTENANCE

Regular inspection and maintenance are crucial for extending the life of your drive belt and ensuring safe operation.

- **Inspection Frequency:** Refer to your scooter's service manual for recommended inspection intervals. Typically, drive belts should be inspected every 3,000-6,000 miles or annually, whichever comes first.
- **What to Look For:** Inspect the belt for signs of wear, cracking, fraying, glazing, or missing teeth. Also check for any foreign objects lodged in the belt or pulleys.
- **Cleaning:** Keep the CVT area clean and free of dirt, oil, and debris, as these can accelerate belt wear.
- **Replacement:** Replace the drive belt immediately if any signs of significant wear or damage are observed, or if it reaches the manufacturer's recommended replacement mileage. A worn belt can lead to loss of power, reduced fuel efficiency, and potential failure.



Image: A close-up view of the drive belt's teeth, highlighting the importance of inspecting for wear and damage in this area.

If you experience issues related to power transmission or unusual noises from the CVT area, the drive belt may be a contributing factor. Always consult a qualified mechanic for diagnosis and repair.

Symptom	Possible Cause	Action
Loss of power or sluggish acceleration	Worn or stretched belt, belt slippage	Inspect belt for wear; replace if necessary. Check pulley condition.
Squealing or grinding noise from CVT	Belt slippage, worn belt, debris in CVT, worn pulleys	Inspect belt and pulleys for damage or debris. Clean CVT area.
Belt breaking prematurely	Improper installation, misaligned pulleys, excessive heat, incorrect belt type	Ensure correct belt for application. Verify proper installation and pulley alignment.

SPECIFICATIONS

Manufacturer Part Number	23100-MCT-003
Material	Aramid Fiber
Type	Toothed Belt
Color	Black
Compatible Devices	ATV, Scooter, UTV
Package Dimensions	22.36 x 4.45 x 1.26 inches
Weight	1.15 Pounds

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your Areyourshop Drive Belt, please contact Areyourshop directly through their official channels or the retailer from whom the product was purchased.

It is recommended to retain your proof of purchase for any warranty claims.

Manufacturer: Areyourshop

ASIN: B07M8RKLB5

Date First Available: December 19, 2018

