

[Manuals.plus](#) /

› [Easytry123](#) /

› Instruction Manual for Easytry123 General Remote Control for Onkyo TX-NR906 TX-NR626 RC-690M TX-SR502 TX-SR706 HT-S5600 TX-SR502S TX-SR706S TX-NR545 HT-R520 A/V AV Receiver

Easytry123 General Replacement Remote Control

Instruction Manual for Easytry123 General Replacement Remote Control

Compatible with Onkyo A/V Receivers: TX-NR906, TX-NR626, RC-690M, TX-SR502, TX-SR706, HT-S5600, TX-SR502S, TX-SR706S, TX-NR545, HT-R520

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Easytry123 General Replacement Remote Control. This infrared (IR) remote is designed as a direct replacement for various Onkyo A/V Receiver models. Please ensure your original remote matches the appearance of this replacement for optimal compatibility.

SETUP

Battery Installation

The remote control requires two (2) AA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 1: Battery compartment on the back of the remote control.

Once batteries are installed, the remote is ready for use. No programming or pairing is typically required for this infrared replacement remote; it operates by pointing directly at your Onkyo A/V Receiver.

OPERATING INSTRUCTIONS

This replacement remote control provides essential functions for your compatible Onkyo A/V Receiver. Familiarize yourself with the button layout and their primary functions:



Figure 2: Front view of the remote control with button layout.

- **Power Button:** Located at the top, typically used to turn the receiver On or Off.
- **Input/Source Selection:** Buttons labeled "SOURCE", "INPUT", "DVD/USB", "CD", "FM", "AM", "AUX", "NET", "TV/CD", "PC", "BD/DVD" allow you to switch between different audio/video inputs connected to your receiver.
- **Volume Control:** "VOL +" and "VOL -" buttons adjust the master volume level.
- **Navigation Buttons:** A circular pad with "ENTER" in the center, surrounded by directional arrows (Up, Down, Left, Right), used for navigating menus and selections.
- **Menu/Setup:** Buttons like "MENU", "SETUP", "HOME" provide access to the receiver's on-screen display (OSD) menus for configuration.

- **Playback Controls:** Buttons such as "PLAY", "PAUSE", "STOP", "REWIND", "FAST FORWARD", "PREV CH", "NEXT CH" are used for controlling media playback.
- **Numeric Keypad:** Buttons 0-9 for direct input or channel selection.
- **Mode Buttons:** Buttons like "MUSIC", "MOVIE", "GAME", "STEREO" may switch audio modes or sound fields.

Important Note: This is a replacement remote. While it provides core functionalities, it may not replicate every advanced feature or specific button function of your original Onkyo remote, especially if your original remote had unique programming or learning capabilities. Refer to your Onkyo A/V Receiver's original manual for detailed functions of specific buttons if you encounter discrepancies.

MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AA). Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage, which can damage the remote. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical shocks and drops, as this can damage internal components.

TROUBLESHOOTING

If you experience issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are installed correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AA batteries.
 - Ensure there are no obstructions between the remote control and the infrared sensor on your Onkyo A/V Receiver.
 - Make sure you are within the effective operating range and pointing the remote directly at the receiver.
- **Certain Functions Not Working:**
 - As a replacement remote, some advanced or specific functions unique to your original Onkyo remote might not be supported. This remote is designed for core functionalities.
 - Verify that the function you are trying to use is supported by this replacement remote by comparing its button layout and labels to your original remote.
 - Ensure your Onkyo A/V Receiver is in the correct input mode for the function you are attempting (e.g., trying to control a DVD player when the receiver is set to TV input).
- **Intermittent Operation:**
 - This could indicate low battery power. Replace the batteries.
 - Ensure there is no strong light source (like direct sunlight or bright fluorescent lights) interfering with the IR signal.

SPECIFICATIONS

Feature	Detail
Brand	Easytry123
Product Type	Replacement Remote Control
Connectivity Technology	Infrared (IR)
Compatible Devices	Onkyo A/V Receivers (TX-NR906, TX-NR626, RC-690M, TX-SR502, TX-SR706, HT-S5600, TX-SR502S, TX-SR706S, TX-NR545, HT-R520)
Batteries Required	2 x AA batteries
Product Dimensions	5.51 x 1.57 x 0.79 inches (approx.)

WARRANTY AND SUPPORT

This product is an aftermarket replacement remote control. For specific warranty information, please refer to the terms and conditions provided by the seller at the time of purchase. If you encounter any issues or require further assistance, please contact the seller directly through the platform where the purchase was made. Keep your purchase receipt or order number handy for faster service.

© 2023 Easytry123. All rights reserved. Onkyo and associated model names are trademarks of their respective owners.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07M8ZD2YZ>

More documents and user manuals: <https://manuals.plus/>