

Manuals.plus /

› De'Longhi /

› De'Longhi Nespresso Butterfly Whisk Instruction Manual for Aeroccino 3, Inissia, Prodigio, EN80, EN270

## De'Longhi Butterfly Whisk

# De'Longhi Nespresso Butterfly Whisk Instruction Manual

Compatible with Aeroccino 3, Inissia, Prodigio, EN80, EN270

## 1. INTRODUCTION

This manual provides essential instructions for the proper use and maintenance of your De'Longhi Nespresso Butterfly Whisk. This accessory is designed to enhance your coffee experience by assisting in the preparation of frothed milk for various beverages. Please read this manual carefully before use.

## 2. PRODUCT OVERVIEW

The De'Longhi Nespresso Butterfly Whisk is a small, specialized component used primarily in milk frothers and certain Nespresso coffee machines to create frothed milk. Its unique design ensures efficient aeration of milk for cappuccinos, lattes, and other milk-based coffee drinks.



Image showing the Delonghi Nespresso Butterfly Whisk, designed for frothing milk.

This whisk is compatible with De'Longhi Nespresso Aeroccino 3 milk frothers and specific Nespresso

machine models including Inissia, Prodigio, EN80, and EN270, where a frothing function is present or supported by this accessory.

### 3. SETUP

---

1. **Unpacking:** Carefully remove the butterfly whisk from its packaging. Inspect for any signs of damage.
2. **Initial Cleaning:** Before first use, wash the whisk with warm soapy water and rinse thoroughly. Dry completely.
3. **Placement in Aeroccino/Machine:**
  - For Aeroccino 3: Place the whisk onto the small pin located at the bottom center of the frother's jug. Ensure it sits securely.
  - For compatible Nespresso machines (e.g., Inissia, Prodigio, EN80, EN270): Refer to your machine's specific manual for the exact placement of the whisk within its frothing mechanism. Generally, it attaches to a magnetic or mechanical pin.

*Note: Incorrect placement may result in poor frothing performance or damage to the whisk/device.*

### 4. OPERATING INSTRUCTIONS

---

The butterfly whisk is an integral part of the milk frothing process. Its operation is typically controlled by the main device (Aeroccino or Nespresso machine).

1. **Add Milk:** Pour the desired amount of cold milk into your Aeroccino or the frothing component of your Nespresso machine. Do not exceed the maximum fill line indicated on the device.
2. **Select Function:** Depending on your device, select the desired frothing function (e.g., hot froth, cold froth, hot milk).
3. **Start Frothing:** Activate the frothing cycle according to your device's instructions. The whisk will rotate rapidly to aerate and heat the milk.
4. **Serve:** Once the cycle is complete, carefully pour the frothed milk into your coffee cup.

*Tip: For best results, use fresh, cold, full-fat milk. Skim milk can also be frothed, but may yield a lighter foam.*

### 5. MAINTENANCE

---

Regular cleaning of the butterfly whisk is crucial for hygiene and optimal performance.

1. **Immediate Cleaning:** After each use, remove the whisk from the device. Rinse it immediately under warm running water to prevent milk residue from drying.
2. **Thorough Cleaning:** Wash the whisk with a mild dish soap and a soft sponge or brush. Ensure all milk residue is removed from the blades and central shaft.
3. **Drying:** Dry the whisk completely before storing or reinserting it into the device.
4. **Storage:** Store the whisk in a clean, dry place. If storing within the Aeroccino or machine, ensure it is dry.

*Caution: Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the whisk's surface.*

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Whisk not spinning or spinning slowly.	Incorrect placement; milk residue buildup; foreign object.	Ensure whisk is correctly seated on the pin. Clean thoroughly to remove any residue. Check for obstructions.
Poor or no milk froth.	Incorrect milk type/temperature; whisk not clean; whisk damaged.	Use fresh, cold milk. Ensure whisk is clean. Inspect whisk for damage; replace if necessary.
Unusual noise during frothing.	Whisk not properly seated; foreign object.	Re-seat the whisk. Check for any small objects in the frother jug.

## 7. SPECIFICATIONS

- **Product Type:** Butterfly Whisk
- **Brand:** De'Longhi
- **Material:** Stainless Steel
- **Item Weight:** Approximately 0.01 Kilograms
- **Compatibility:** De'Longhi Nespresso Aeroccino 3, Nespresso Inissia, Nespresso Prodigio, Nespresso EN80, Nespresso EN270
- **Included Components:** Aeroccino Butterfly Whisk (single unit)

## 8. WARRANTY AND SUPPORT

This De'Longhi accessory is covered by the standard warranty terms provided by De'Longhi. Please refer to the warranty information included with your original Nespresso machine or Aeroccino device, or visit the official De'Longhi website for detailed warranty policies.

For technical assistance, replacement parts, or further inquiries, please contact De'Longhi customer support. Contact information can typically be found on the De'Longhi official website or in the documentation provided with your main appliance.