

## Racktime 13024

# Racktime Woodpacker Wooden Box (Snapit System) Instruction Manual

Model: 13024

## PRODUCT OVERVIEW

The Racktime Woodpacker Wooden Box is designed for convenient attachment to bicycles equipped with a Racktime Snapit system. This durable wooden box offers a classic aesthetic combined with modern functionality, providing ample storage for your cycling needs. It comes with a pre-assembled Snapit adapter for easy installation.

- **Volume:** 25 liters
- **Maximum Load:** 9 kg (19.8 lbs)
- **Material:** Wood
- **Mounting:** Rack Mount (Snapit System)

## SETUP AND INSTALLATION

The Racktime Woodpacker Wooden Box is equipped with a pre-assembled Snapit adapter for quick and secure attachment. **Important:** This product requires a Racktime rack on your bicycle for proper installation and use. Ensure your bike is fitted with a compatible Racktime rack before proceeding.

### Step-by-Step Installation:

1. **Prepare Your Rack:** Ensure your bicycle's Racktime rack is clean and free from obstructions.
2. **Position the Box:** Align the pre-assembled Snapit adapter on the bottom of the Woodpacker box with the mounting points on your Racktime rack.
3. **Engage the Adapter:** Gently press the box downwards onto the rack until you hear a distinct "click." This indicates that the Snapit adapter has securely engaged with the rack.
4. **Verify Security:** Lightly pull upwards on the box to confirm it is firmly attached and does not wobble.



*Image: Bottom view of the Racktime Woodpacker Wooden Box, showing the pre-assembled Snapit adapter for rack attachment.*



*Image: Interior view of the Racktime Woodpacker Wooden Box, displaying the maximum load capacity marking.*

## OPERATING INSTRUCTIONS

Once securely installed, the Woodpacker box is ready for use. It provides a convenient storage solution for various items during your bike rides.

### Loading the Box:

- **Load Capacity:** Do not exceed the maximum load capacity of 9 kg (19.8 lbs). Overloading can

compromise the box's integrity and the stability of your bicycle.

- **Weight Distribution:** Distribute the weight evenly within the box to maintain bicycle balance, especially when cornering or stopping.
- **Secure Contents:** For bumpy rides, consider securing items inside the box to prevent them from shifting or falling out.

## Removing the Box:

To remove the Woodpacker box from your Racktime rack, locate the release mechanism on the Snapit adapter (typically a lever or button). Activate the mechanism and lift the box upwards from the rack.

## MAINTENANCE

Proper maintenance will extend the life of your Racktime Woodpacker Wooden Box.

- **Cleaning:** Wipe the wooden surfaces with a damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the wood finish.
- **Drying:** Ensure the box is thoroughly dry after cleaning or exposure to rain to prevent wood warping or mold growth.
- **Structural Integrity:** Periodically inspect the box for any signs of wear, loose joints, or damage to the wood. If staples or joints appear loose, consider reinforcing them with wood glue or small screws for added durability.
- **Snapit Adapter:** Keep the Snapit adapter mechanism clean and free of debris to ensure smooth attachment and detachment.

## TROUBLESHOOTING

If you encounter issues with your Woodpacker box, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Box does not attach securely to the rack.	Incompatible rack; Snapit adapter not fully engaged; debris in mechanism.	Ensure you have a Racktime rack. Press firmly until a "click" is heard. Clean the adapter and rack mounting points.
Box feels wobbly after attachment.	Adapter not fully engaged; damaged adapter or rack.	Re-engage the adapter. Inspect the adapter and rack for damage. If damaged, contact Racktime support.
Wood joints or staples are loose.	Wear and tear; heavy loads; environmental factors.	Reinforce loose joints with wood glue or small screws. Avoid exceeding load capacity. Store in a dry environment.
Difficulty removing the box.	Release mechanism stuck or dirty.	Clean the release mechanism. Apply a small amount of silicone spray if necessary (avoiding wood).

## SPECIFICATIONS

<b>Model Number</b>	13024
---------------------	-------

<b>Weight (including adapter)</b>	Approx. 2830 g (6.24 lbs)
<b>Dimensions (W x H x D)</b>	49 cm x 24.1 cm x 29.5 cm (19.33"D x 9.45"W x 11.61"H)
<b>Volume</b>	25 Liters
<b>Maximum Load Capacity</b>	9 kg (19.8 lbs)
<b>Material</b>	Wood
<b>Mounting Type</b>	Rack Mount (Snapit System)
<b>Included Components</b>	1 x bicycle basket

## WARRANTY INFORMATION

According to product specifications, there is **No Manufacturer's Guarantee** provided with the Racktime Woodpacker Wooden Box.

Please retain your proof of purchase for any potential claims or inquiries with your retailer.

## CUSTOMER SUPPORT

For further assistance or inquiries regarding your Racktime Woodpacker Wooden Box, please contact the retailer from whom you purchased the product. They can provide support for product-related questions or issues.

You may also visit the official Racktime website for general product information and updates.