

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Zerone](#) /
- › [Zerone AA59-00786A Replacement TV Remote Control User Manual](#)

Zerone AA59-00786A

Zerone AA59-00786A Replacement TV Remote Control User Manual

Model: AA59-00786A

INTRODUCTION

This manual provides instructions for the Zerone AA59-00786A Replacement TV Remote Control. This remote is designed to be a direct replacement for compatible LED Smart TVs, offering dedicated menu navigation and direct channel access.



Image: Angled view of the Zerone AA59-00786A Replacement TV Remote Control, showcasing its full button layout.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.



Image: The back of the remote control with the battery compartment open, showing where to insert two AAA batteries.

2. Initial Use

The Zerone AA59-00786A remote control is designed as a direct replacement and typically requires no programming or setup. Once batteries are installed, it should function immediately with compatible LED Smart TVs.

OPERATING INSTRUCTIONS

The remote control features a standard layout for easy navigation and control of your television. Below is a general guide to its primary functions:



Image: Front view of the Zerone AA59-00786A Remote Control, displaying all buttons clearly.

- **Power Button (⏻):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (+/-):** Adjusts the TV's volume level.
- **Channel Up/Down (CH LIST / P):** Changes the TV channel sequentially.
- **Mute Button (🔇):** Mutes or unmutes the TV's audio.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Used to navigate menus and select options.
- **Menu Button:** Accesses the TV's main menu.
- **Smart Hub Button:** Opens the Smart Hub interface for smart TV features.
- **Guide Button:** Displays the electronic program guide (EPG).

- **Info Button:** Shows information about the current program or input.
- **Return Button:** Goes back to the previous screen or menu.
- **Exit Button:** Exits the current menu or application.
- **Source Button:** Selects the input source (HDMI, AV, etc.).
- **Colored Buttons (A, B, C, D):** These buttons perform specific functions depending on the TV model or application.
- **Media Control Buttons (Play, Pause, Stop, Fast Forward, Rewind):** Controls media playback.



Image: A hand holding the remote control, demonstrating its ergonomic design and ease of use.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface.

or buttons.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Storage

Store the remote control in a dry place, away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace the batteries with fresh AAA batteries.
- Ensure there are no obstructions between the remote control and the TV's infrared sensor.
- Point the remote directly at the TV's sensor.

- **Specific buttons not working:**

- Clean the remote control, especially around the affected buttons, to remove any dirt or debris that might be causing them to stick.
- If only certain functions are not working, verify that your TV model supports those specific functions with a replacement remote.

- **Short operating distance:**

- Replace the batteries. Low battery power can reduce the remote's effective range.
- Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the TV's IR receiver.

SPECIFICATIONS



Image: The remote control with key dimensions indicated: length 17.5cm, width 4.3cm, thickness 2.3cm.

Feature	Detail
Model	AA59-00786A
Brand	Zerone
Power Source	2 x AAA Batteries (Not Included)
Operating Distance	Up to 8 meters
Material	ABS
Color	Black
Product Dimensions	17.6 x 4.7 x 2.3 cm (6.93 x 1.85 x 0.91 inches)
Item Weight	1.76 ounces (approx. 50g)
Compatible Devices	TV remote control AA59-00786A can compatible with most of its LCD, LED or plasma TVs under the brand for .

WARRANTY AND SUPPORT

Warranty Information

As a replacement remote control, this product is typically covered by a standard return policy. Please refer to your purchase documentation or retailer for specific warranty details and return periods. The remote is designed to retain codes when changing batteries, ensuring consistent performance.

Customer Support

For further assistance or inquiries regarding the Zerone AA59-00786A Replacement TV Remote Control, please contact the retailer from whom you purchased the product. You may also visit the [Zerone Store on Amazon](#) for additional product information.