

CIQILY PT-WC-05

CIQILY USB Wall Charger 5-Pack Instruction Manual

Model: PT-WC-05

1. INTRODUCTION

Thank you for choosing the CIQILY USB Wall Charger 5-Pack. This manual provides essential information for the safe and efficient use of your new chargers. These compact and portable wall adapters are designed to provide reliable power for a wide range of USB-powered devices, featuring built-in safety mechanisms to protect your electronics. Each charger in this 5-pack is designed for ease of use, simply requiring a USB charging cable to begin powering your devices. Their travel-ready design makes them suitable for both home use and international travel.

2. SAFETY INFORMATION AND PRECAUTIONS

Please read all safety instructions before using the product to prevent injury or damage to your devices.

- **Electrical Safety:** The chargers are UL, FCC, and CE certified and feature an automatic protection circuit against short-circuiting, over-heating, over-current, and over-charging.
- **Heat Generation:** It is normal for the charger to become warm during operation. However, if the charger becomes excessively hot to the touch, discontinue use immediately and unplug it from the power outlet. Ensure adequate ventilation around the charger during use and avoid covering it.
- **Indoor Use Only:** These chargers are designed for indoor use in dry locations. Do not expose to liquids, moisture, or extreme temperatures.
- **Proper Insertion:** Always ensure the charger is fully inserted into the wall outlet.
- **Children and Pets:** Keep out of reach of children and pets.
- **Damage:** Do not use if the charger or cable is damaged.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 5 x CIQILY Single Port USB Wall Chargers (Model PT-WC-05)

Note: USB charging cables are not included and must be purchased separately.

4. SETUP AND OPERATION

Using your CIQILY USB Wall Charger is straightforward:

1. **Plug into Power:** Insert the CIQILY USB Wall Charger into a standard electrical wall outlet (100-240V).
2. **Connect USB Cable:** Obtain a compatible USB charging cable for your device. Plug the standard USB-A end of your charging cable into the USB port on the CIQILY wall charger.
3. **Connect Device:** Plug the other end of the USB charging cable into your electronic device (e.g., smartphone, tablet, power bank).
4. **Begin Charging:** Your device should automatically begin charging. The charger is designed to stop charging when your device's battery is full, protecting it from overcharging.



Image 1: The CIQILY USB Wall Charger 5-Pack, illustrating the compact design and multiple color options.

Fast Charging

fast charging for standard USB
devices, up to 10w



Image 2: A purple CIQILY charger highlighting its 10W charging capability for standard USB devices.

5. COMPATIBILITY

The CIQILY USB Wall Charger is broadly compatible with a wide range of USB-powered devices, including but not limited to:

- **Smartphones:** iPhone (14, 13, 12, 11, X, 8, 7, 6, 5 series), Samsung Galaxy (S22, S21, S20, S10, S9, S8, Note series), Google Pixel (6a, 6 Pro, 5a, 4a), LG, Moto, HTC, OnePlus, Sony, Huawei, Blackberry.
- **Tablets:** iPad (Pro, Air, Mini series), Samsung Galaxy Tab, Kindle.
- **Other Devices:** Power banks, headphones, Bluetooth speakers, GPS devices, PSP, MP3 players, and other 5V USB-powered electronics.

Universal compatibility

optimized charging for any device



Image 3: The CIQILY charger demonstrating its universal compatibility with a variety of electronic devices.

6. MAINTENANCE

To ensure the longevity and optimal performance of your CIQILY USB Wall Chargers, follow these maintenance guidelines:

- **Cleaning:** Disconnect the charger from the power outlet before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store chargers in a cool, dry place away from direct sunlight and moisture when not in use.
- **Handling:** Avoid dropping or subjecting the chargers to strong impacts. Do not pull on the cable to unplug the charger from the wall; always grasp the charger body.

7. TROUBLESHOOTING

If you encounter issues with your CIQILY USB Wall Charger, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device not charging.	Charger not fully plugged in. Faulty USB cable. Faulty wall outlet. Device compatibility issue.	Ensure the charger is securely plugged into the wall outlet. Try a different USB cable. Test the outlet with another working appliance or try a different outlet. Verify your device is compatible with 5V/1A charging.
Charger gets very hot.	Normal operation heat. Poor ventilation. Overload or internal fault.	A slight warmth is normal. Ensure the charger is not covered and has adequate airflow. If excessively hot or emitting smoke/smell, unplug immediately and discontinue use. Contact customer support.
One or more chargers in the pack do not work.	Manufacturing defect. Damage during transit or use.	Try the non-working charger with a known good cable and outlet. If it still fails, refer to the Warranty and Support section.

Advanced Safety Features



**Over Voltage
Protection**



**Over Current
Protection**



**PC Fire Proof
Material**



**Safety
Reliability**

Image 4: Safety features of the CIQILY USB Wall Charger, including protection against over-voltage and over-current.

8. SPECIFICATIONS

Model Number	PT-WC-05
Input	AC 100-240V, 50/60Hz, 0.5A
Output	DC 5V/1A (10.5W)
USB Ports	1 (Single USB-A Port)
Dimensions (per charger)	Approximately 5.87 x 5.28 x 1.3 inches (Package Dimensions)
Weight (per charger)	Approximately 3.84 ounces (Total Item Weight for 5-pack)
Material	PC Fireproof Material

Certifications

UL, FCC, CE

9. WARRANTY AND CUSTOMER SUPPORT

CIQILY provides an **18-month Warranty Quality Guarantee** for this product. If you experience any issues or have questions regarding your USB Wall Chargers, please do not hesitate to contact CIQILY customer service. Our friendly customer service team is available to assist you.

For support, please refer to the contact information provided with your purchase or visit the official CIQILY store on Amazon: [CIQILY Amazon Store](#).

© 2025 CIQILY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question