Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Roland /
- Roland GO:PIANO 88-Key Digital Portable Piano Keyboard Instruction Manual

Roland GO-88

Roland GO:PIANO 88-Key Digital Portable Piano Keyboard Instruction Manual

Model: GO-88 | Brand: Roland

1. Introduction

The Roland GO:PIANO 88 is a full-size 88-key digital piano designed for portability and ease of use. It offers a premium piano playing experience with onboard Bluetooth speakers, making it suitable for various environments. This manual provides essential information for setting up, operating, and maintaining your instrument.



Figure 1: Front view of the Roland GO:PIANO 88-Key Digital Portable Piano Keyboard.

2. WHAT'S IN THE BOX

Upon unpacking, please ensure all the following items are present:

- Roland GO:PIANO 88-Key Digital Portable Piano Keyboard
- Sustain Pedal
- Power Adaptor
- Music Rest
- Batteries (for optional wireless operation)

3. SETUP

Follow these steps to set up your Roland GO:PIANO 88:

- 1. **Power Connection:** Connect the power adaptor to the DC 12V input on the rear panel of the keyboard and plug it into a wall outlet. Alternatively, for portable use, insert the specified batteries into the battery compartment.
- 2. **Sustain Pedal:** Connect the included sustain pedal to the dedicated sustain pedal jack on the rear panel.
- 3. **Headphones:** For private practice, connect 3.5mm headphones to the headphone jack on the rear panel.
- 4. Bluetooth Pairing: To connect to a smartphone or tablet for audio streaming or MIDI functionality, activate Bluetooth on your device and follow the pairing instructions in your device's manual. The GO:PIANO 88 supports Bluetooth audio and MIDI.



Figure 2: Rear panel connections for power, sustain pedal, and headphones.

4. OPERATING INSTRUCTIONS

The Roland GO:PIANO 88 offers various features to enhance your playing and learning experience.

4.1 Basic Playing

Press the power button to turn on the instrument. The default sound is a grand piano. Adjust the master volume knob to your desired listening level.



Figure 3: User playing the Roland GO:PIANO 88.

4.2 Sound Selection

The GO:PIANO 88 includes various instrument sounds. Use the dedicated buttons or function keys to select between different piano tones, electric pianos, organs, and other sounds.

4.3 Metronome

Activate the built-in metronome to assist with timing and rhythm practice. Adjust the tempo as needed using the dedicated controls.

4.4 Transpose

The transpose function allows you to shift the pitch of the entire keyboard up or down in semitone steps, which is useful for playing in different keys without changing your fingering.

4.5 Recording

The instrument features recording capabilities to capture your performances. Refer to the detailed instructions in the full user manual for specific recording procedures.

4.6 Online Lessons Integration

The Roland GO:PIANO 88 supports advanced music lessons via Bluetooth MIDI with your smartphone or tablet. Many online piano lesson platforms are compatible, offering step-by-step lessons and tutorial videos.



Figure 4: Roland GO:PIANO 88 integrating with online piano lessons via a tablet.

4.7 Product Overview Video

Video 1: An official overview of the Roland GO:PIANO 88, demonstrating its features and portability.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Roland GO:PIANO 88, follow these maintenance guidelines:

- Cleaning: Wipe the surface of the instrument with a soft, dry cloth. Avoid using abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use, store the piano in a dry, dust-free environment. Avoid extreme temperatures or direct sunlight.
- Handling: Handle the instrument with care. Avoid dropping it or subjecting it to strong impacts.

6. TROUBLESHOOTING

If you encounter any issues with your Roland GO:PIANO 88, consider the following basic troubleshooting steps:

• **No Power:** Ensure the power adaptor is securely connected to both the instrument and a working power outlet. If using batteries, check if they are correctly inserted and have sufficient charge.

- **No Sound:** Check the master volume level. Ensure headphones are not plugged in if you intend to use the built-in speakers. Verify that the correct instrument sound is selected.
- **Bluetooth Connection Issues:** Ensure Bluetooth is enabled on both the piano and your external device. Try restarting both devices and re-attempting the pairing process.

For more complex issues, please refer to the comprehensive troubleshooting section in the full user manual or contact Roland customer support.

7. Specifications

Below are the key specifications for the Roland GO:PIANO 88:

• Number of Keys: 88 (Full-size)

• Polyphony: 128 voices

• Connectivity: Bluetooth (Audio and MIDI), 3.5mm Audio Jack, Micro USB 2.0 Type B

• Power Source: Battery Powered (optional) or AC Adaptor

• Built-in Speakers: Yes

• **Dimensions (W x D x H):** 55" x 15" x 7" (139.7 cm x 38.1 cm x 17.8 cm)

• Item Weight: 15.4 Pounds (approx. 7 kg)


• Body Material: Plastic



Figure 5: Dimensions of the Roland GO:PIANO 88.

8. WARRANTY AND SUPPORT

The Roland GO:PIANO 88 comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support, service, or additional inquiries, visit the official Roland website or contact their customer service department.

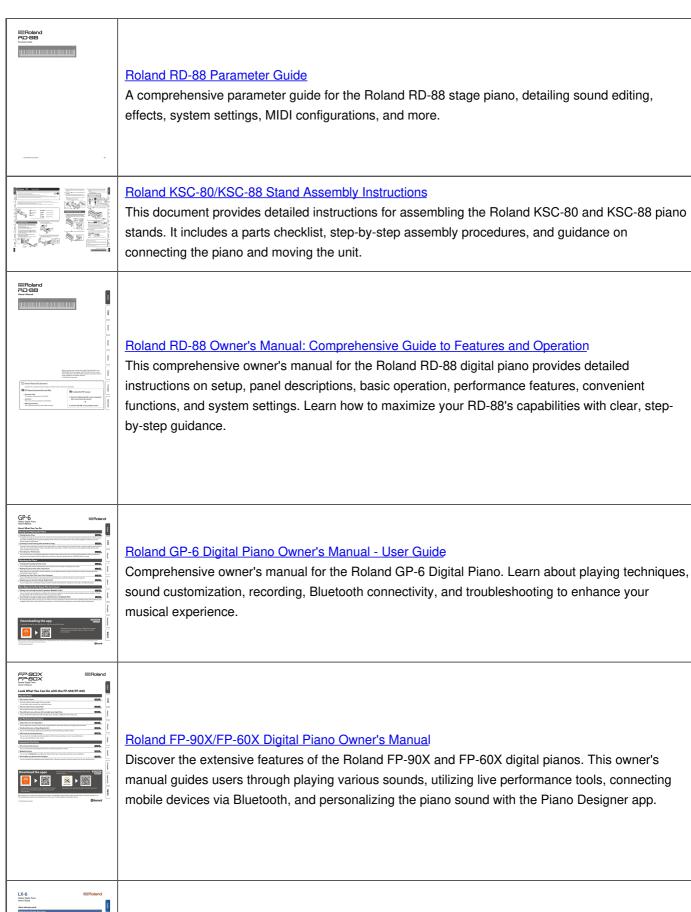



Roland LX-6 Digital Piano Owner's Manual: Features and Guide

Comprehensive owner's manual for the Roland LX-6 digital piano. Discover how to play, record, connect via Bluetooth, customize sounds, and troubleshoot with this official guide.