

KW-Trio OS1578-CTUS

KW-Trio Multi-Functional Paper Rotary Trimmer Instruction Manual

Model: OS1578-CTUS

PRODUCT OVERVIEW

The KW-Trio Multi-Functional Paper Rotary Trimmer is a versatile tool designed for precise cutting of various paper sizes, photos, business cards, and craft materials. It features multiple cutting styles and a built-in corner rounder for enhanced functionality, making it ideal for office, school, and craft use.

Key Features

- 5-in-1 multi-functional paper trimmer with 4 optional cutting styles (straight, skip, wave, score) and a corner rounder.
- 33cm (13.8 inches) cutting length, suitable for A4, A5, and A6 paper.
- 1mm cutting depth, capable of cutting 3-5 sheets of 80gsm paper at one time.
- Clear scale ruler on the base plate for precise and effective cutting.
- Solid metal cutting base plate matched with a non-slip pad for sturdy performance and long durability.

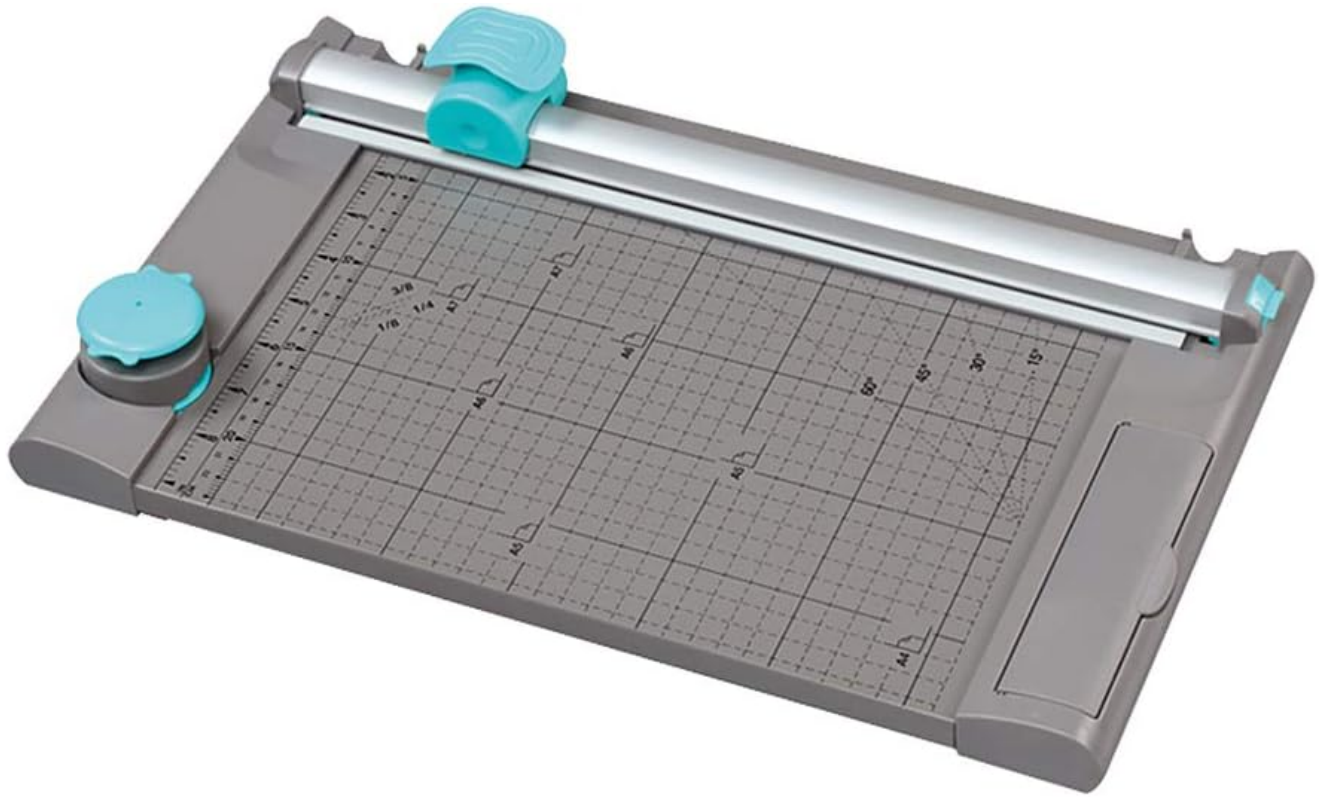 


Image: The KW-Trio Multi-Functional Paper Rotary Trimmer, showing its grey base with measurement grid, clear cutting guide, and turquoise cutting head and corner rounder.

SETUP

The KW-Trio Paper Rotary Trimmer comes pre-assembled and ready for immediate use. Minimal setup is required.

Unpacking

- Carefully remove the trimmer from its packaging.
- Inspect the trimmer for any signs of damage that may have occurred during transit.
- Ensure all components, including the cutting head and corner rounder, are securely in place.

Placement

- Place the trimmer on a stable, flat, and non-slip surface to ensure safe and accurate operation.

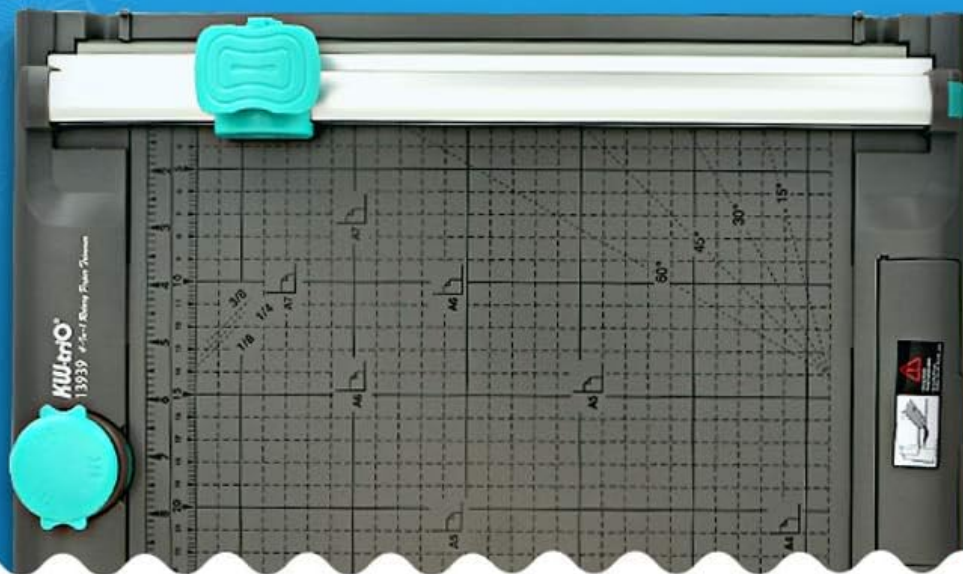
OPERATING INSTRUCTIONS

Selecting a Cutting Style

The trimmer offers five distinct cutting styles: Straight, Skip, Wave, Score, and Round Corner. The main cutting head handles Straight, Skip, Wave, and Score lines, while a separate integrated tool is used for corner rounding.

可得优 KW-triO®

5-IN-1 MULTI-FUNCTIONAL ROLLING PAPER TRIMMER



High-Quality



Elegant



Rolling Cutting



Multiple Styles

Image: Demonstrates the various cutting styles available, including straight, skip, wave, and score lines, along with examples of different round corner cuts.

Using the Main Cutting Head (Straight, Skip, Wave, Score)

1. Identify the desired blade type on the cutting head. The cutting head typically contains multiple blades for different styles, which can be rotated or selected.
2. Lift the clear cutting guide bar.
3. Place the paper or material flat against the base plate, aligning it with the desired measurement marks or grid lines.
4. Lower the clear cutting guide bar firmly to secure the paper in place.
5. Press down firmly on the cutting head and slide it along the guide rail to make the cut. Ensure even pressure is applied for a clean and precise cut.

6. Lift the cutting head and guide bar to remove the cut material.

Using the Corner Rounder

1. Locate the separate corner rounder tool, typically integrated into the left side of the trimmer.
2. Insert the corner of the paper fully into the slot of the corner rounder.
3. Press down firmly on the top of the corner rounder to punch the rounded corner.
4. Remove the paper.



Image: A close-up view of the corner rounder tool, demonstrating its function on paper corners and showing various rounding options.

MAINTENANCE

Blade Replacement

Over time, the cutting blades may become dull and require replacement to maintain cutting precision and quality. The trimmer is designed for easy blade replacement.

How to Replace the Blade

Choose

Open the holder and find proper blade



2 TWO
THE SECOND



Change

Anti-clockwise rotate to take out the present blade and clockwise rotate to install the new one

Clean

Put and store the replaced blade in order



Image: Step-by-step visual guide on how to open the blade holder, remove the old blade, and install a new one.

1. **Choose:** Open the blade holder compartment, typically located on the right side of the trimmer, to access the spare blades. Select the proper blade for replacement.
2. **Change:** Carefully remove the cutting head from the guide rail. Rotate the existing blade anti-clockwise to detach it. Install the new blade by rotating it clockwise until it clicks into place.
3. **Clean:** After replacement, ensure the old blade is safely stored or disposed of. Clean any paper dust or debris from the blade compartment before closing.

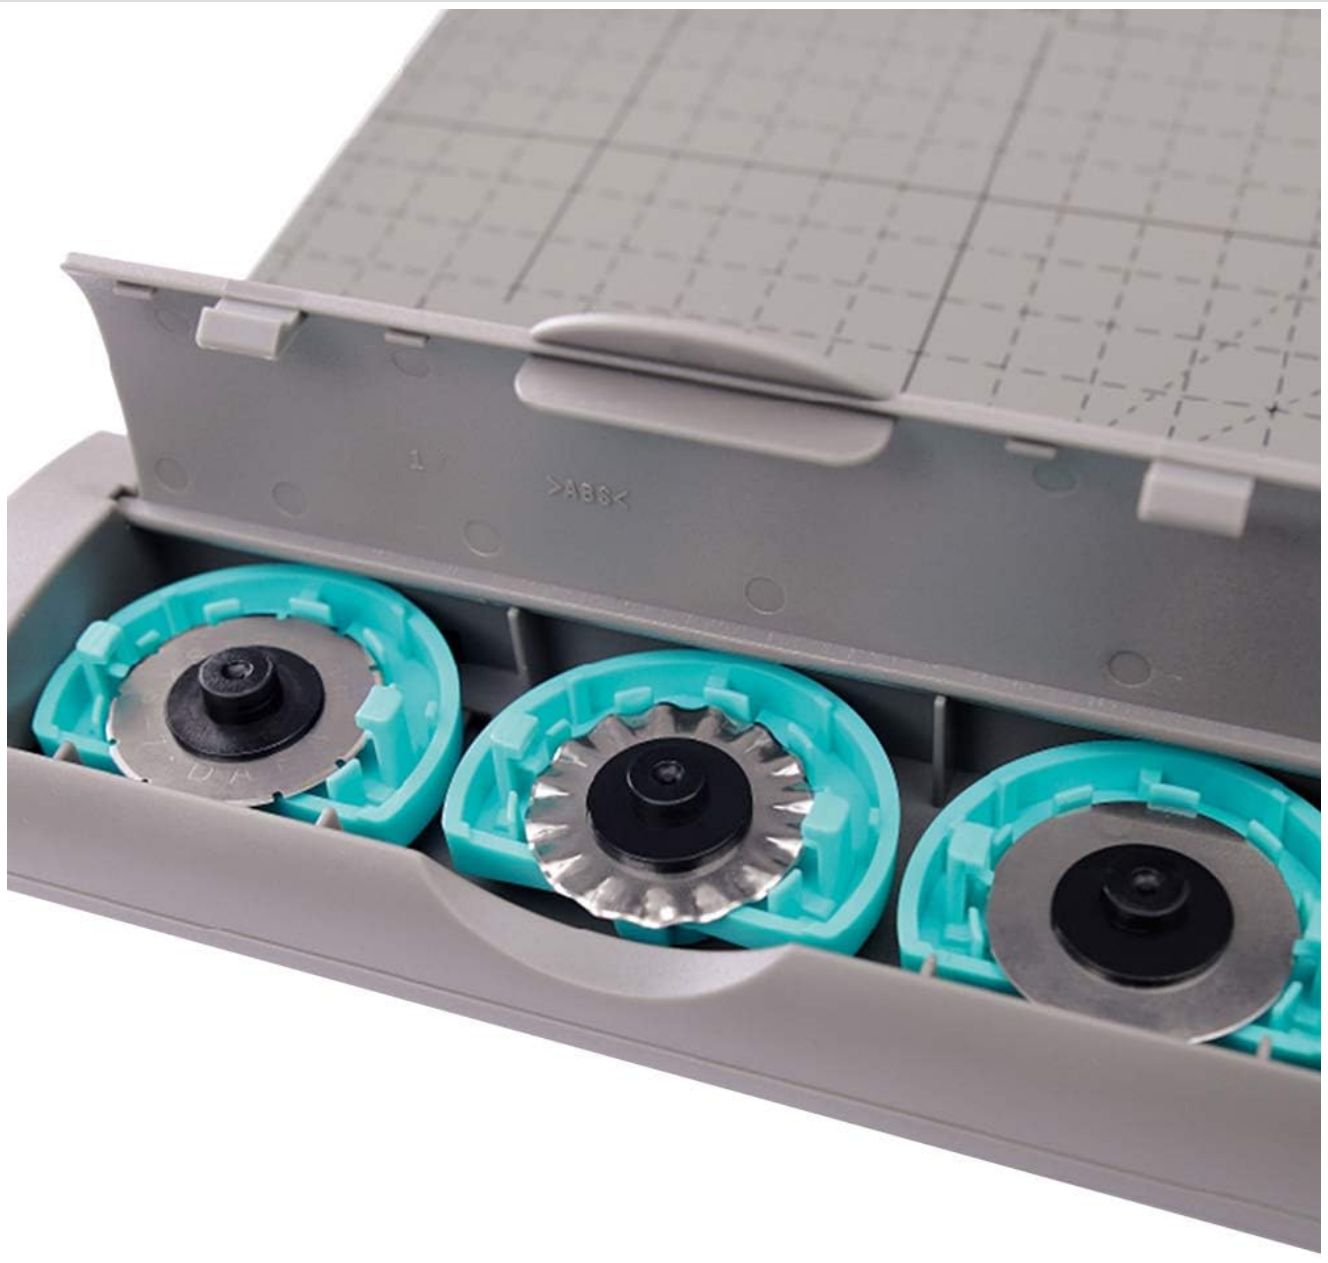


Image: A view of the blade storage compartment, showing multiple spare blades neatly organized within the trimmer's base.

Cleaning

Regularly clean the trimmer to prevent paper dust and debris from affecting performance and to ensure smooth operation.

- Use a soft, dry cloth to wipe down the base plate, measurement grid, and cutting guide.
- Remove any small paper scraps or dust from the cutting channel and blade area.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as they may damage the plastic or metal components of the trimmer.

TROUBLESHOOTING

Uneven or Ragged Cuts

- **Cause:** Dull blade.
Solution: Replace the blade following the "Blade Replacement" instructions in the Maintenance section.

- **Cause:** Paper not held securely.
Solution: Ensure the paper is laid flat and firmly held under the clear cutting guide bar before sliding the cutting head.
- **Cause:** Insufficient or inconsistent pressure on the cutting head.
Solution: Apply consistent, firm pressure when sliding the cutting head along the guide rail.

Paper Jams

- **Cause:** Attempting to cut too many sheets at once.
Solution: Adhere to the maximum cutting capacity (3-5 sheets of 80gsm paper). Reduce the number of sheets per cut.
- **Cause:** Misaligned paper.
Solution: Ensure paper is properly aligned with the guide and flat against the base before initiating the cut.

Corner Rounder Not Working Effectively

- **Cause:** Paper not fully inserted or misaligned.
Solution: Ensure the corner of the paper is fully seated into the slot before pressing down.
- **Cause:** Dull punch.
Solution: While the corner rounder punch is generally durable, excessive force or very thick materials can dull it. If issues persist, contact customer support.

SPECIFICATIONS

| Feature | Detail |
|----------------------|---|
| Brand | KW-Trio |
| Model | 13939 (OS1578-CTUS) |
| Suitable Paper Sizes | A4, A5, A6 |
| Cutting Types | Straight, Skip, Wave, Score, Round Cut |
| Cutting Depth | 1mm (approx. 3-5 sheets of 80gsm paper) |
| Cutting Length | 33cm (13.8 inches) |
| Item Size | 25.6 x 42.5 x 6.5 cm |
| Manufacturer | KW-trio |
| ASIN | B07M9YY1HM |
| Date First Available | Jan. 11 2019 |

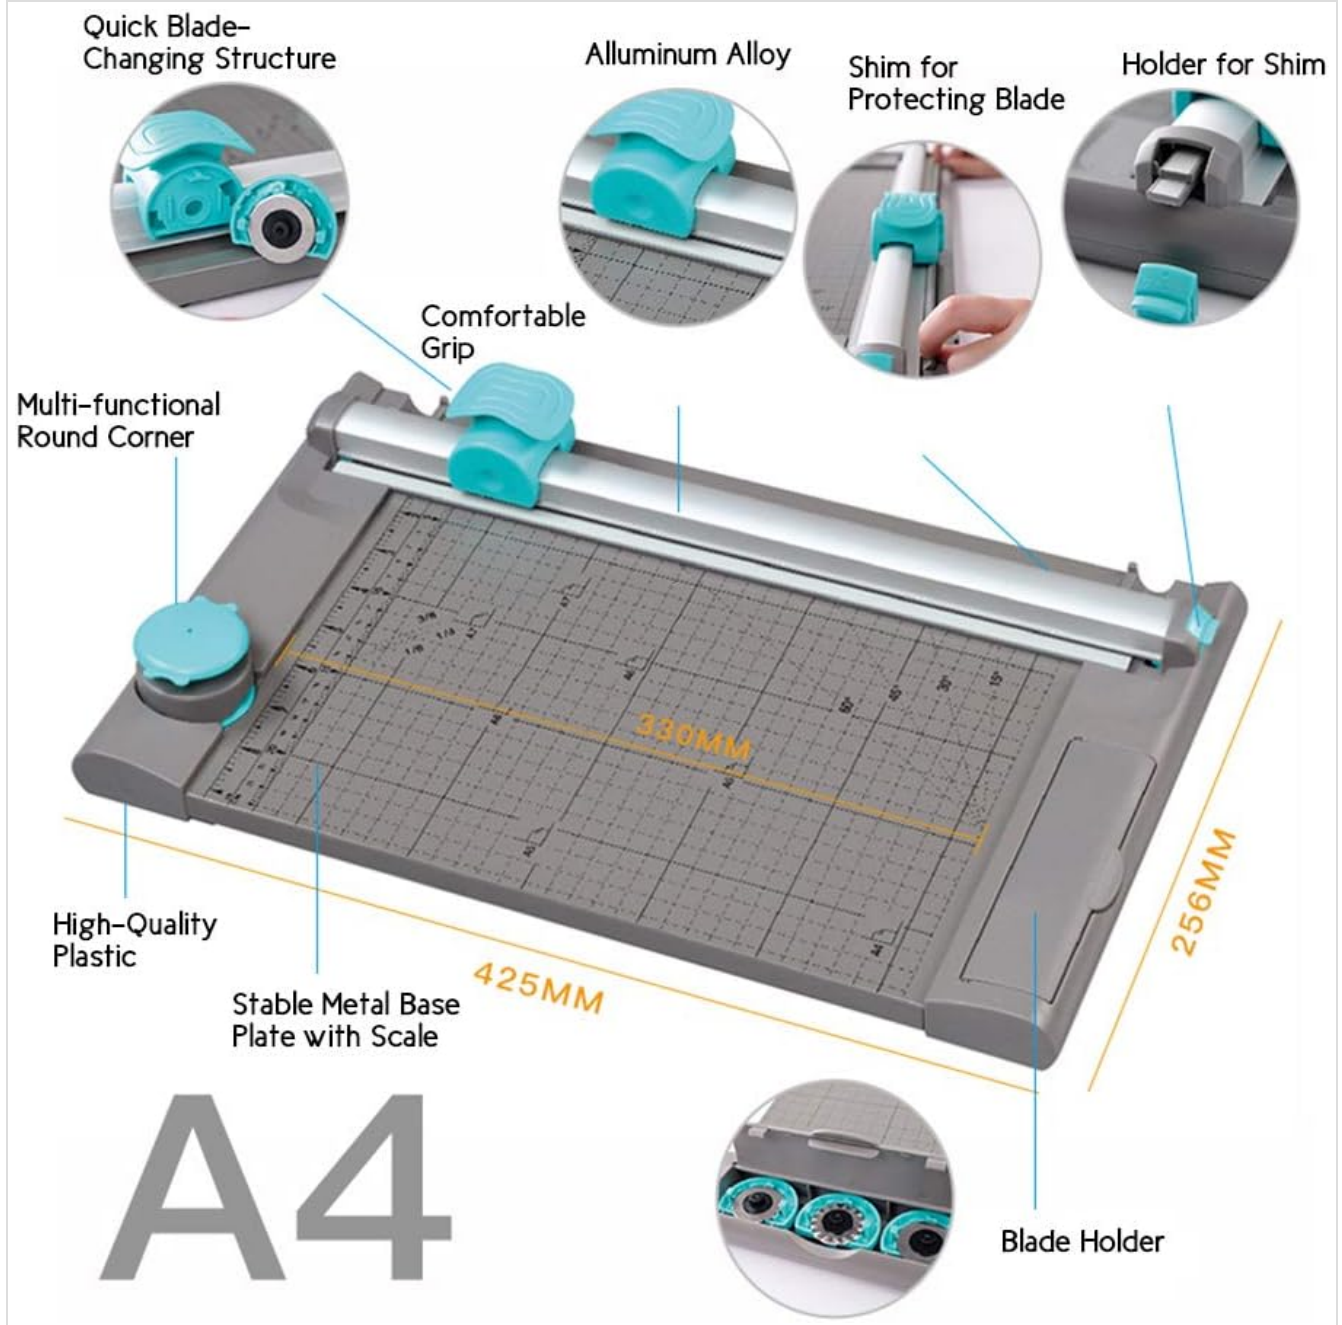 


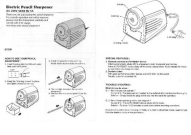 




Image: An annotated diagram showing the key dimensions (425mm length, 256mm width, 330mm cutting length) and components of the paper cutter.

WARRANTY AND SUPPORT

For warranty information or technical support regarding your KW-Trio Multi-Functional Paper Rotary Trimmer, please refer to the product packaging or contact your retailer directly. It is recommended to keep your purchase receipt as proof of purchase for any warranty claims.

| | |
|---|--|
|  | <p>KW-Trio 13033 Paper Trimmer: Operating Instructions and Safety Guide</p> <p>Comprehensive operating instructions and safety guidelines for the KW-Trio 13033 paper trimmer. Learn how to use, maintain, and replace the cutter safely.</p> |
|  | <p>KW Trio 5000 Long Reach Heavy Duty Stapler Instruction Manual</p> <p>Instruction manual for the KW Trio 5000 Long Reach Heavy Duty Stapler, covering staple loading, jam clearing, specifications, and stapling capacity. Includes multilingual sections in English, German, French, and Spanish.</p> |
|  | <p>Electric Pencil Sharpener AC 230V 50/60 Hz 1A User Manual</p> <p>This document provides instructions for using, maintaining, and troubleshooting the Electric Pencil Sharpener AC 230V 50/60 Hz 1A. It includes parts identification, special features like the auto-reset device, and safety warnings.</p> |
|  | <p>KW-trio 05270 Metal Square-Cap Stapler - Specifications and Features</p> <p>Detailed information on the KW-trio 05270 metal square-cap stapler, including its capacity, construction, and features like a built-in staple remover. Suitable for office use.</p> |
|  | <p>KW-trio 05512T Transparent Mini Stapler - Specifications and Features</p> <p>Detailed information on the KW-trio 05512T transparent mini stapler, including its capacity, insert depth, staple compatibility, and built-in staple remover.</p> |