

Beko BVM35400XPS

Beko BVM35400XPS Electric Pyrolytic Oven User Manual

Model: BVM35400XPS

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing a Beko appliance. This manual provides essential information for the safe and efficient operation of your Beko BVM35400XPS Electric Pyrolytic Oven. Please read these instructions thoroughly before installation and use, and keep them for future reference.

General Safety Warnings:

- Always ensure the oven is disconnected from the power supply before cleaning or maintenance.
- This appliance is intended for household use only. Do not use it for commercial purposes.
- Keep children away from the appliance during operation, especially during pyrolytic cleaning, as surfaces become extremely hot.
- Do not store flammable materials in or near the oven.
- Ensure proper ventilation during use.

2. PRODUCT OVERVIEW

The Beko BVM35400XPS is a large capacity (80 Liter) electric oven featuring pyrolytic self-cleaning technology, designed for efficient and convenient cooking.



Image: Front view of the Beko BVM35400XPS Electric Pyrolytic Oven, showcasing its black glass and stainless steel finish, digital display, and interior racks.

Key features include a spacious interior, multiple cooking functions, and an intuitive control panel for precise temperature and time settings.

3. SETUP AND INSTALLATION

Installation should only be performed by a qualified technician in accordance with local regulations and the provided installation instructions. Incorrect installation can cause harm and void the warranty.

Installation Steps:

1. **Unpacking:** Carefully remove all packaging materials and inspect the oven for any damage. Report any damage to your retailer immediately.
2. **Placement:** Ensure the oven is placed in a suitable cabinet opening, providing adequate ventilation as specified in the separate installation guide.
3. **Electrical Connection:** Connect the oven to a grounded electrical outlet. The electrical supply must match the specifications on the rating plate. Do not use extension cords or multiple socket adapters.
4. **Securing:** Secure the oven to the cabinet using the provided screws to prevent tipping.

Important: Before first use, clean the interior of the oven with a damp cloth.

4. OPERATING INSTRUCTIONS

Initial Use:

Before cooking food, heat the empty oven for approximately 30 minutes at maximum temperature (e.g., 250°C) using a conventional heating function. This helps to burn off any manufacturing residues and odors. Ensure the room is well-ventilated during this process.

Control Panel:

The oven features a digital display and touch controls. Use the function selector to choose the desired cooking mode and the temperature/time controls to set the parameters. Refer to the icons on the control panel for specific functions.

Cooking Functions:

- **Conventional Cooking:** Heat from top and bottom elements. Ideal for baking cakes and roasting meat.
- **Fan-Assisted Cooking:** Heat distributed evenly by a fan. Suitable for cooking multiple dishes simultaneously.
- **Grill:** For grilling toast, sausages, or browning dishes.
- **Eco Fan Heating:** Energy-efficient cooking mode.
- **Defrost:** Uses the fan to circulate air at room temperature for gentle defrosting.

Pyrolytic Self-Cleaning:

The pyrolytic cleaning function heats the oven to a very high temperature (approx. 480°C), turning food residues into ash. This ash can then be easily wiped away once the oven has cooled.

1. Remove all accessories (racks, trays, side supports) from the oven cavity.
2. Wipe away any large spills or loose debris.
3. Close the oven door securely.
4. Select the pyrolytic cleaning function on the control panel and start the cycle.
5. The oven door will lock automatically during the cycle and remain locked until the oven has cooled down to a safe temperature.
6. Once the cycle is complete and the oven has cooled, wipe the interior with a damp cloth to remove the ash.

Warning: Do not attempt to open the oven door during the pyrolytic cleaning cycle. Ensure good ventilation during and after the cycle.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

Exterior Cleaning:

- Wipe the exterior surfaces with a soft cloth and mild detergent.
- For stainless steel surfaces, use a specialized stainless steel cleaner and polish in the direction of the grain.
- Avoid abrasive cleaners, scouring pads, or harsh chemicals that can damage the finish.

Interior Cleaning (Non-Pyrolytic):

- For light soiling, clean the interior with warm soapy water and a soft sponge.
- For stubborn stains, use an oven cleaner specifically designed for electric ovens, following the product instructions carefully.
- Ensure the oven is completely cool before cleaning.

Accessories:

Oven racks and trays can be washed in warm soapy water or in a dishwasher.

6. TROUBLESHOOTING

Before contacting customer service, please consult the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Oven does not heat up.	No power supply; oven not switched on; fuse blown.	Check power connection; ensure oven is switched on; check household fuse box.
Food not cooking evenly.	Incorrect temperature or function; food placed incorrectly.	Verify temperature and function settings; ensure food is centered and not overcrowding the oven.
Smoke or strong odor during first use.	Residues from manufacturing process.	This is normal. Continue initial heating process in a well-ventilated room.
Oven light not working.	Light bulb needs replacement.	Ensure oven is cool and disconnected from power. Replace bulb with a suitable, heat-resistant oven bulb.

7. SPECIFICATIONS

Technical details for the Beko BVM35400XPS Electric Pyrolytic Oven:

- **Model Number:** BVM35400XPS
- **Brand:** Beko
- **Type:** Electric Built-in Oven
- **Capacity:** 80 Liters
- **Dimensions (W x D x H):** 59.41 x 56.69 x 59.51 cm
- **Weight:** 55 Kilograms
- **Cleaning Type:** Pyrolytic
- **Finish Type:** Stainless Steel
- **GTIN (UPC):** 08690842128059

8. WARRANTY AND SUPPORT

Your Beko BVM35400XPS Electric Pyrolytic Oven comes with a manufacturer's warranty. Please refer to the warranty card provided with your appliance for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or to schedule a service appointment, please contact Beko customer support. Contact details can typically be found on the Beko official website or in the documentation supplied with your product.

When contacting support, please have your model number (BVM35400XPS) and serial number ready to assist the service representative.

