

UpStart Components RC-RCR503BZ-DL363

User Manual: UpStart Components Universal Remote Control

Model: RC-RCR503BZ-DL363

1. INTRODUCTION

This manual provides instructions for the UpStart Components Replacement Universal Remote Control, model RC-RCR503BZ-DL363. This remote is designed as a direct replacement for certain RCA 3-Device Universal Remote Control models and is compatible with various devices, including Amino Cable Boxes, requiring remote codes such as 1602 and 1822. It offers a palm-sized design for comfortable handling and ease of use.

Please note that this is an UpStart Components Brand replacement part and not an OEM product. While designed for compatibility, specific functionalities may vary compared to original manufacturer remotes. No programming is typically needed; simply install batteries for immediate use.

2. SAFETY INFORMATION

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Always remove exhausted batteries promptly.
- If the remote control will not be used for an extended period, remove the batteries to prevent leakage and damage.
- Keep batteries out of reach of children.
- Do not expose the remote control to direct sunlight, heat sources, or excessive moisture.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.

Note: This remote control is designed for quick replacement and requires no programming. Once batteries are installed, it should be ready for immediate use with compatible devices.



Figure 1: Front view of the UpStart Components Universal Remote Control, showing its buttons and layout.

4. OPERATING INSTRUCTIONS

4.1 Device Selection

To control a specific device, press the corresponding device button at the top of the remote:

- **TV:** For controlling your television.
- **SAT-CBL-DTC DVD-VCR:** For controlling satellite receivers, cable boxes, digital-to-analog converters, DVD players, or VCRs.

Once a device button is pressed, the remote will operate that device until another device button is selected.

4.2 Basic Functions

The remote features standard buttons for common functions:

- **POWER:** Turns the selected device on or off.
- **VOL+ / VOL-:** Increases or decreases the volume.
- **CHAN+ / CHAN-:** Changes the channel up or down.
- **MUTE:** Mutes or unmutes the audio.
- **Number Buttons (0-9):** For direct channel entry or inputting numbers.
- **ENTER:** Confirms channel selection or menu options.
- **MENU:** Accesses the device's main menu.
- **GO BACK:** Returns to the previous screen or menu.
- **SOURCE:** Cycles through input sources (e.g., HDMI 1, HDMI 2).
- **SLEEP:** Activates the sleep timer function on compatible devices.
- **Playback Controls (REW, PLAY, FWD, REC, PAUSE, STOP):** Controls media playback functions for compatible devices like DVD players or VCRs.
- **CODE SEARCH:** (Though no programming is needed, this button may be present for legacy functions or specific scenarios not requiring user input.)



Figure 2: Detailed view of the remote control's button layout, highlighting various function keys.

5. MAINTENANCE

5.1 Cleaning the Remote

To clean the remote control, use a soft, slightly damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the remote's surface or internal components.

5.2 Battery Replacement

If the remote control's range decreases, or if buttons become unresponsive, it may be time to replace the batteries. Follow the steps in Section 3.1 to replace the two AAA batteries.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with proper polarity.
 - Replace old batteries with new ones.
 - Make sure there are no obstructions between the remote and the device's infrared sensor.
 - Ensure you have selected the correct device (TV, SAT-CBL-DTC DVD-VCR) using the device selection buttons.
- **Limited range or intermittent response:**
 - Replace batteries.
 - Ensure the remote's infrared emitter (at the front tip) is clean and unobstructed.
 - Move closer to the device you are trying to control.
- **Certain functions do not work:**
 - While this remote is a universal replacement, some advanced or device-specific functions may not be supported.
 - Verify that the function you are trying to use is available on the remote and applicable to the selected device.

7. SPECIFICATIONS

Model Number	RC-RCR503BZ-DL363
Brand	UpStart Components
Connectivity Technology	Infrared
Max Number of Supported Devices	Multiple (controls one device at a time via selection buttons)
Color	Black
Special Feature	Universal
Batteries Required	2 AAA batteries (not included)

8. WARRANTY AND SUPPORT

This product is an UpStart Components Brand replacement part. It is not an OEM product and is not covered under any warranties offered by the original manufacturers. Any warranties for this product are offered solely by UpStart Components.

For support or warranty inquiries, please contact UpStart Components directly. Refer to the product packaging or the seller's information for specific contact details.

© 2023 UpStart Components. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question