

[Manuals.plus](#) /

› [Speakman](#) /

› Speakman SA-2706 Vector Single Robe Hook Instruction Manual

Speakman SA-2706

Speakman SA-2706 Vector Single Robe Hook Instruction Manual

Model: SA-2706 | Brand: Speakman

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Speakman SA-2706 Vector Single Robe Hook. Designed by Roger Thomas, this robe hook features a clean, modern frame and solid metal construction, available in a polished chrome finish. Please read these instructions carefully before beginning installation to ensure proper function and longevity of your product.



Figure 1: The Speakman SA-2706 Vector Single Robe Hook in Polished Chrome finish. This image shows the complete product from a front-side angle, highlighting its sleek design and reflective surface.

Key Features:

- Easy to install design.
- Includes all necessary mounting hardware.
- Durable brass construction ensures long-lasting performance.
- Commercial-grade quality, suitable for various environments.
- Part of the comprehensive Vector collection of bathroom accessories.

SETUP AND INSTALLATION

Before installation, ensure you have the necessary tools: a drill, screwdriver, measuring tape, and pencil. Mounting hardware is included with your robe hook.

Installation Steps:

1. **Select Location:** Choose a suitable wall location for the robe hook, ensuring it is at an appropriate height and clear of any electrical wiring or plumbing.
2. **Mark Mounting Points:** Hold the mounting bracket against the wall at the desired location. Use a pencil to

mark the positions for the screw holes.

- Drill Pilot Holes:** Using an appropriate drill bit for your wall type (e.g., drywall, tile), drill pilot holes at the marked locations. If installing into drywall without a stud, use the provided wall anchors.
- Attach Mounting Bracket:** Secure the mounting bracket to the wall using the screws provided. Ensure the bracket is level and firmly attached.
- Mount Robe Hook:** Align the robe hook with the mounting bracket. Slide the hook onto the bracket and secure it with the set screw, typically located on the underside of the hook base. Tighten the set screw until the hook is firmly in place.
- Test Stability:** Gently pull on the installed robe hook to ensure it is securely fastened to the wall.



Figure 2: A technical drawing illustrating the dimensions of the Speakman SA-2706 Robe Hook. The image shows a side profile with a projection of 1 3/4 inches (44mm) from the wall, providing critical measurements for installation planning.

OPERATING INSTRUCTIONS

The Speakman SA-2706 Vector Single Robe Hook is designed for simple and effective use. Hang bathrobes, towels, or other garments directly onto the hook. Ensure items are placed securely to prevent them from falling.



Figure 3: An interior view of a modern bathroom showcasing various Speakman Vector collection accessories, including a robe hook similar to the SA-2706. This image demonstrates the product's aesthetic integration into a contemporary bathroom setting.

MAINTENANCE

To maintain the polished chrome finish and ensure the longevity of your robe hook, follow these cleaning guidelines:

- Regular Cleaning:** Clean regularly with a soft, damp cloth and mild soap.
- Avoid Harsh Cleaners:** Do not use abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish.
- Drying:** After cleaning, wipe the surface dry with a soft cloth to prevent water spots and maintain shine.
- Inspection:** Periodically check the mounting screws for tightness and re-tighten if necessary to ensure the hook remains secure.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Robe hook feels loose.	Mounting screws or set screw are loose.	Tighten the mounting screws and the set screw located on the underside of the hook base.
Finish appears dull or stained.	Accumulation of soap scum, hard water spots, or use of improper cleaning agents.	Clean with a soft, damp cloth and mild soap. Avoid abrasive cleaners. Dry thoroughly after cleaning.

Problem	Possible Cause	Solution
Hook detaches from wall.	Improper installation or damaged wall anchors.	Re-install the hook, ensuring proper use of wall anchors for your wall type. If anchors are damaged, replace them.

SPECIFICATIONS

Attribute	Detail
Model Number	SA-2706
Brand	Speakman
Color	Polished Chrome
Material	Brass
Finish Type	Polished
Item Type Name	Robe Hook
Included Components	Mounting hardware
UPC	671252143069

WARRANTY INFORMATION

The Speakman SA-2706 Vector Single Robe Hook is backed by a **Limited Lifetime Warranty**. This warranty covers defects in material and workmanship under normal use and service. For full details regarding warranty coverage, limitations, and how to make a claim, please refer to the official Speakman warranty documentation or contact customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance with installation, or need to report a problem with your Speakman SA-2706 Vector Single Robe Hook, please contact Speakman Customer Support:

Website: www.speakman.com

Phone: Refer to the Speakman website for regional contact numbers.

Email: Refer to the Speakman website for customer service email.

Please have your model number (SA-2706) and purchase information ready when contacting support.