

## Nerf AR-L

# Nerf Fortnite AR-L Elite Dart Blaster Instruction Manual

Model: AR-L (E6158)

## INTRODUCTION

This manual provides essential instructions for the safe and proper use, assembly, and maintenance of your Nerf Fortnite AR-L Elite Dart Blaster. Please read all instructions carefully before operating the blaster.

## SAFETY INFORMATION

**WARNING: CHOKING HAZARD – Small parts may be generated. Not for children under 3 years.**  
**WARNING: Do not aim at eyes or face. Use only official Nerf darts. Other darts may not meet safety standards. Do not modify darts or blaster.**

Recommended age for use: 8 years and up.

## WHAT'S IN THE BOX

Verify that all components are present:

- 1 x Nerf Fortnite AR-L Elite Dart Blaster
- 1 x 10-Dart Clip
- 20 x Official Nerf Elite Darts
- Instruction Manual



Image: The Nerf Fortnite AR-L blaster, its detachable 10-dart clip, and a package of 20 blue Nerf Elite darts with purple tips.

## SETUP

### 1. Battery Installation

The blaster requires 4 x 1.5V AA alkaline batteries (not included). A Phillips/cross head screwdriver is required.

1. Locate the battery compartment on the left side of the blaster.
2. Unscrew the battery compartment cover.
3. Insert 4 AA batteries, ensuring correct polarity (+/-).
4. Replace the cover and tighten the screw.

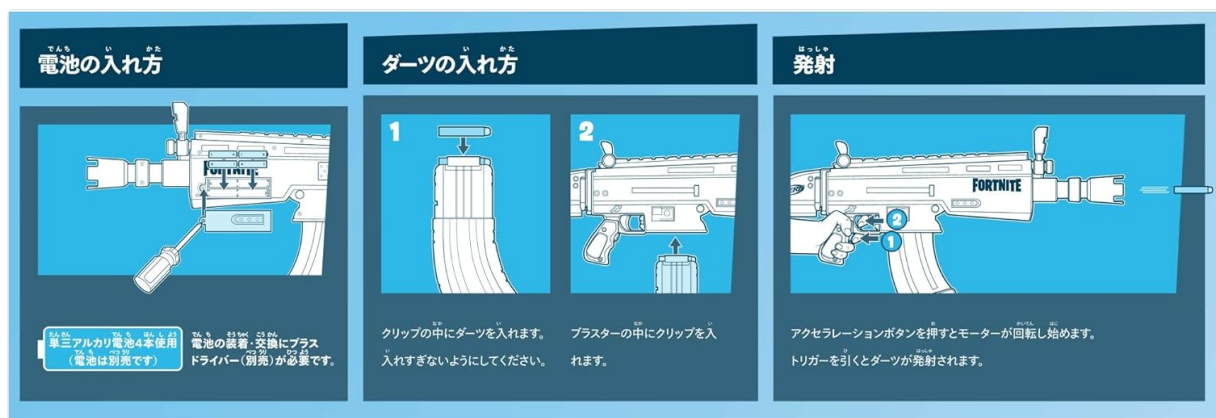 


Image: A diagram illustrating the battery installation process using a screwdriver, followed by dart loading into the clip, and then inserting the loaded clip into the blaster.

### 2. Dart Loading

1. Take the 10-dart clip.

2. Insert one dart at a time into the clip until it is full. Do not overfill.

### 3. Clip Insertion

1. Hold the blaster with one hand.
2. Insert the loaded 10-dart clip into the magazine well on the underside of the blaster until it clicks securely into place.



Image: A person's hands demonstrating the proper way to insert the dart clip into the blaster's magazine well.

## OPERATING THE BLASTER

### 1. Powering On and Firing

Ensure the access door is fully closed and the clip is inserted completely.

1. Hold the blaster firmly.
2. Press and hold the acceleration button (located below the trigger) to power up the motor. You will hear a whirring sound.
3. While holding the acceleration button, pull the trigger to fire a dart.

4. Release the trigger to stop firing. Release the acceleration button to power down the motor.

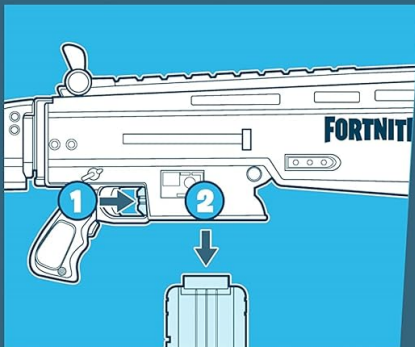 


Image: A person demonstrating firing the Nerf Fortnite AR-L blaster, with a dart visibly launched from the barrel.

## 2. Reloading

1. When the clip is empty, press the clip release button (located in front of the trigger guard).
2. Remove the empty clip from the blaster.
3. Load new darts into the clip as described in the 'Dart Loading' section.
4. Insert the reloaded clip back into the blaster until it clicks.

## リロード



クリップリリースボタンを押し、プラス  
ターからクリップを取り外します。

## しょうじゅんき 照準器

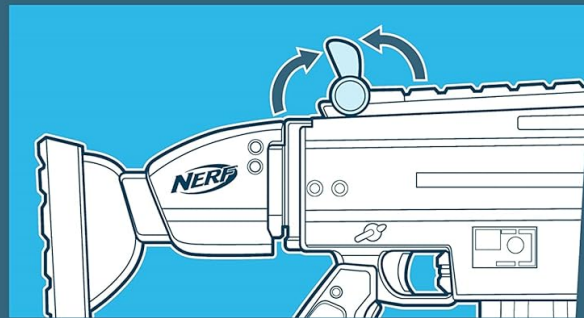 
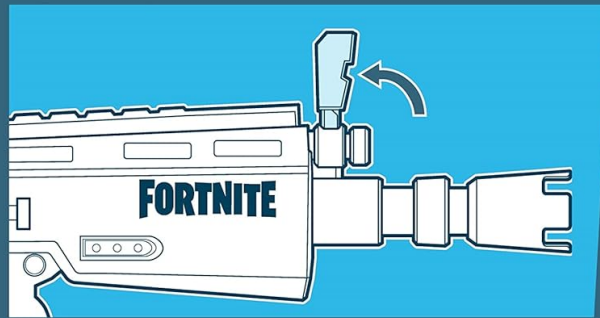 


Image: A diagram illustrating how to press the clip release button to remove the dart clip, and how to flip up and down the front and rear sights.

### 3. Using Flip-Up Sights

The blaster features two flip-up sights for aiming:

- To deploy the sights, gently push them upwards until they lock into position.
- To fold them down, push them back into their recessed positions.

## MAINTENANCE

 
### 1. Clearing Dart Jams

If a dart becomes jammed:

1. Release the acceleration button and remove your finger from the trigger.
2. Open the access door on the side of the blaster.
3. Carefully remove any jammed darts.
4. Close the access door completely. The blaster will not fire if the access door is open.

## ダーツが詰まってしまったときは


ダーツが詰まったように見える場合:

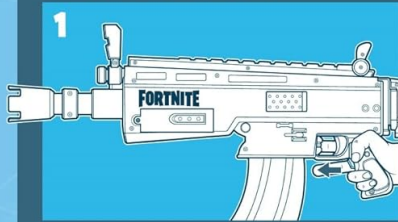

アクセレーションボタンから手を離します。



 アクセスドアを開き、詰まったダーツを取り出します。

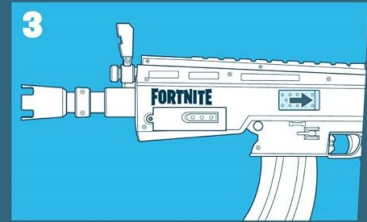

アクセスドアを閉じます。

注意: アクセスドアを完全に閉じないと発射できません。

## ブラスターの収納方法

性能を保つために、クリップにダーツを入れたままにしないでください。

注意: 目や顔に向けて発射しないでください。本製品専用のダーツのみをお使いください。ダーツやブラスターを改造しないでください。

© Epic Games.  
© 2018 Hasbro. All Rights Reserved.  
EC & UK Reg. Des. Apps.  
E6158, E7061, E7659, E7512

0721E6158/202

Image: A diagram detailing the steps to clear a dart jam by opening the access door and removing the dart, and a recommendation for storing the blaster without darts in the clip.

## 2. Storage

To maintain optimal performance, store the blaster without darts loaded in the clip.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Blaster does not fire.	<ul style="list-style-type: none"><li>Batteries are low or incorrectly installed.</li><li>Access door is not fully closed.</li><li>Dart clip is not fully inserted.</li><li>Dart jam.</li></ul>	<ul style="list-style-type: none"><li>Replace batteries or check installation.</li><li>Ensure access door is securely closed.</li><li>Push clip firmly until it clicks.</li><li>Clear any dart jams (see Maintenance section).</li></ul>

Problem	Possible Cause	Solution
Darts are not firing properly or have reduced range.	<ul style="list-style-type: none"><li>Worn or damaged darts.</li><li>Dart jam.</li><li>Low batteries.</li></ul>	<ul style="list-style-type: none"><li>Use new, official Nerf Elite darts.</li><li>Clear any dart jams.</li><li>Replace batteries.</li></ul>

## SPECIFICATIONS




- Product Dimensions:** 2.63 x 31 x 13.25 inches
- Item Weight:** 2.2 pounds
- Model Number:** E6158
- Manufacturer Recommended Age:** 8 years and up
- Batteries:** 4 x AA batteries required (not included)
- Release Date:** March 22, 2019
- Manufacturer:** Hasbro

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact information provided on the product packaging or visit the official Nerf website. Keep your purchase receipt for warranty claims.

© 2025 Nerf. All rights reserved. Fortnite is a trademark of Epic Games, Inc.

### Related Documents - AR-L

	<p><a href="#">Nerf Fortnite AR-L Blaster: Instructions and Features</a></p> <p>This document provides instructions and details for the Nerf Fortnite AR-L Blaster, including how to clear jams, insert batteries, load and fire darts, and store the blaster. It features multilingual support and highlights key components like the trigger, flip-up sight, tactical rail, and acceleration button.</p>
	<p><a href="#">NERF Fortnite HR Dart Blaster: Operation, Jam Clearing, and Assembly Guide</a></p> <p>Comprehensive instructions for the NERF Fortnite HR Dart Blaster, including how to clear jams, reset the bolt, assemble parts, load darts, fire, reload, and store the blaster safely. Features a parts list and step-by-step guidance.</p>
	<p><a href="#">Nerf Rough Cut 2X4 Elite Blaster User Manual</a></p> <p>User manual for the Nerf Rough Cut 2X4 Elite Blaster, detailing its features, operation, and safety precautions. Includes instructions for loading, single fire, and slam fire modes.</p>



#### [Nerf Roblox Arsenal Pulse Laser Blaster Instructions](#)

Comprehensive guide on how to operate, load, fire, and clear jams for the Nerf Roblox Arsenal Pulse Laser motorized dart blaster. Includes safety warnings and battery information.



#### [Nerf N-Strike Elite Strongarm Blaster: User Guide](#)

Official instructions for the Nerf N-Strike Elite Strongarm toy blaster. Learn how to load darts, fire single shots, and use the slam-fire feature for rapid firing. Includes safety warnings and product details.



#### [NERF ULTRA DORADO Blaster: Instructions and Safety Guide](#)

Official instructions for the NERF ULTRA DORADO blaster, including loading, firing, safety warnings, and troubleshooting. Learn how to use your NERF ULTRA DORADO safely and effectively.