



Manuals.plus /

› SHW /

› SHW Triangle-Leg L-Shaped Home Office Computer Desk User Manual

SHW OD-007-2

SHW Triangle-Leg L-Shaped Home Office Computer Desk User Manual

Model: OD-007-2

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your SHW Triangle-Leg L-Shaped Home Office Computer Desk. Please read this manual thoroughly before assembly and use to ensure proper setup and safe operation. Keep this manual for future reference.

2. SAFETY INFORMATION

- Ensure all parts are present and undamaged before beginning assembly.
- Assemble the desk on a soft, clean surface to prevent scratches.
- Do not overtighten screws during assembly to avoid damaging components.
- Keep small parts away from children.
- Do not stand or sit on the desk.
- Distribute weight evenly across the desk surface.

3. PACKAGE CONTENTS

Verify that all components listed below are included in your package. If any parts are missing or damaged, please contact customer support.

- Desk Top Panels (L-shaped sections)
- Steel Frame Components (legs, support bars)
- Adjustable Glides
- Assembly Hardware (screws, Allen wrench)
- Cable Grommets



Figure 3.1: Overview of the SHW L-Shaped Home Office Computer Desk, shown with an office chair and a rolling storage cart, illustrating its potential use in a home office environment.

4. SETUP AND ASSEMBLY

Follow these step-by-step instructions to assemble your SHW L-Shaped Computer Desk. It is recommended to have a second person assist with assembly.

4.1 Preparation

- Clear a spacious area for assembly.
- Lay out all parts and hardware, comparing them with the package contents list.
- Ensure you have the provided Allen wrench and any other necessary tools (e.g., screwdriver, though typically not needed).

4.2 Assembly Steps

1. **Assemble the Steel Frame:** Connect the various steel frame components using the provided screws. Ensure all connections are secure but do not fully tighten until the entire frame is assembled. This allows for minor adjustments.
2. **Attach Adjustable Glides:** Screw the adjustable glides into the bottom of the desk legs. These glides help stabilize the desk on uneven floors.
3. **Position Desk Top Panels:** Carefully place the L-shaped desk top panels onto the assembled steel frame. Align the pre-drilled holes in the desk tops with the corresponding holes in the frame.
4. **Secure Desk Tops:** Attach the desk tops to the frame using the remaining screws. Once all screws are in place, go back and fully tighten all screws on both the frame and the desk tops.
5. **Insert Cable Grommets:** Place the cable grommets into the designated holes on the desk surface. These are designed to help organize and route your cords.



Figure 4.1: The fully assembled SHW L-Shaped Home Office Computer Desk, showcasing its minimalist design and sturdy steel frame.



Figure 4.2: A close-up view of the desk surface, highlighting one of the integrated cable grommets designed for cord organization.

5. OPERATING AND USAGE

Your SHW L-Shaped Computer Desk is designed for versatile use in a home office environment.

- **Workspace:** Utilize the expansive L-shaped surface for multiple monitors, laptops, and other office equipment.
- **Cable Management:** Use the integrated grommets to route and organize power cords and data cables, keeping your workspace tidy.
- **Leveling:** If the desk feels wobbly, adjust the glides at the bottom of each leg by twisting them until the desk is stable on your floor.



Figure 5.1: The SHW L-Shaped Home Office Computer Desk configured with two computer setups, demonstrating its ample workspace for multi-tasking or dual users.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe the desk surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the engineered wood surface.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Protection:** Use coasters for drinks and a desk mat for writing to protect the surface from scratches and marks.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Desk is wobbly	Uneven floor or loose glides/screws.	Adjust the glides at the bottom of the legs. Ensure all assembly screws are tightened.
Parts do not align during assembly	Screws overtightened prematurely, or incorrect orientation of parts.	Loosen all screws slightly, re-align parts, then tighten. Refer to assembly diagrams for correct orientation.
Scratches on desk surface	Improper handling or sharp objects.	Use a desk mat or protective covering. Minor scratches may be concealed with furniture repair kits.

8. SPECIFICATIONS

Model Number: OD-007-2

Brand: SHW

Shape: L-Shape

Material: Engineered Wood (Desk Top), Steel (Frame)

Finish Type: Powder Coated (Frame)

Color: Maple

Product Dimensions: 140 cm (W) x 152 cm (D) x 74 cm (H) / 60" (W) x 55" (D) x 29" (H)

Item Weight: 30.3 kg (66.8 lbs)

Special Features: Adjustable Glides, Cable Grommets

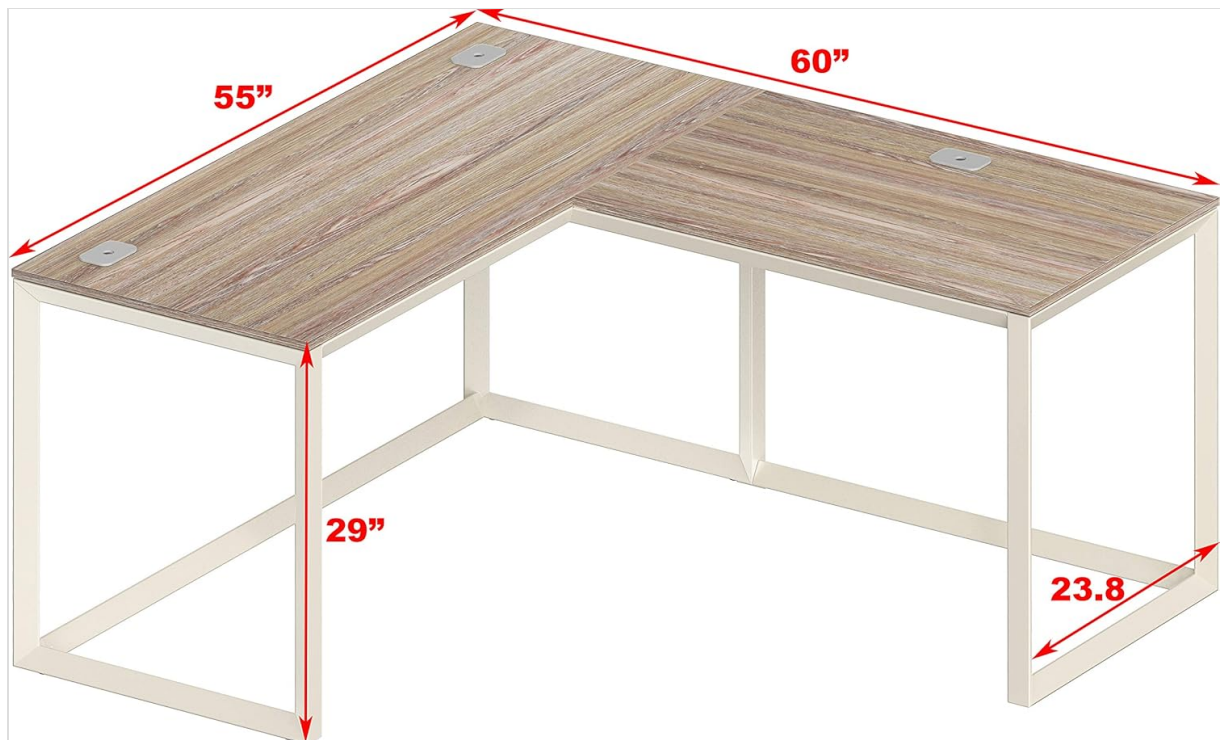


Figure 8.1: Dimensional diagram of the SHW L-Shaped Home Office Computer Desk, indicating its width (60 inches), depth (55 inches), and height (29 inches).

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or contact SHW customer service directly. Keep your purchase receipt for warranty claims.

