

LoopTone TR-18CD

LoopTone TR-18CD 9-in-1 Multimedia Music System User Manual

Model: TR-18CD | Brand: LoopTone

1. INTRODUCTION

Thank you for choosing the LoopTone 9-in-1 Multimedia Music System. This versatile unit combines a vintage turntable with modern audio playback options, including CD, cassette, AM/FM radio, USB/SD playback, Bluetooth connectivity, and recording capabilities. Please read this manual carefully to ensure proper operation and to fully enjoy all the features of your new music system.

2. WHAT'S IN THE BOX

- LoopTone 9-in-1 Multimedia Music System (Record Player)
- Built-in Speaker x 2
- 45 RPM Adapter
- Remote Control
- User Manual

3. PRODUCT FEATURES

- **Multi-Speed Turntable:** Supports 33, 45, and 78 RPM vinyl records. Includes a 45 adapter for 7-inch LPs. Features auto-pause and stop to protect your vinyl.
- **Integrated Media Players:** Includes CD player, cassette player, FM/AM radio, and USB/SD/MMC player for diverse audio sources.
- **Wireless & Wired Connectivity:** Bluetooth allows connection to mobile phones, tablets, and other Bluetooth-enabled devices. Aux-in jack provides easy wired connection.
- **Built-in Speakers & Audio Outputs:** Features 2 high-quality built-in speakers for rich, loud sound. Headphone jack for private listening. RCA line-out allows connection to an external amplifier or active speakers.
- **Recording Functionality:** Record vinyl to MP3 or cassette for convenient digital archiving.
- **User-Friendly Design:** Blue LED light display indicates current mode. Includes a remote control for convenient operation (mute, play/pause, mode switching).

4. SETUP GUIDE

1. **Unpacking:** Carefully remove the unit from its packaging. Retain packaging for future transport or storage.
2. **Placement:** Place the music system on a stable, flat surface away from direct sunlight, heat sources, and excessive dust or moisture. Ensure adequate ventilation around the unit.
3. **Power Connection:** Connect the power cord to a suitable AC outlet (120V for US models).
4. **Dust Cover:** The unit comes with a clear dust cover to protect the turntable. Ensure it is properly seated. Note: The dust cover may need to be open when playing certain record sizes.
5. **FM Antenna:** Extend the FM antenna wire located at the back of the unit for optimal radio reception.
6. **External Speaker Connection (Optional):** If using external speakers, connect them to the RCA Line-Out jacks on the back of the unit. (Red for Right, White for Left).



Image: Rear view of the LoopTone system showing RCA Line Out ports for connecting to an amplifier or powered speakers.

5. OPERATING INSTRUCTIONS

5.1 General Operation

- **Power On/Off:** Turn the VOLUME knob clockwise to power on the unit. Turn counter-clockwise until it clicks to power off.
- **Function Select:** Use the "FUNCTION SELECT" buttons to switch between modes: FM, AM, PHONO/AUX/BT, CD, USB/SD, TAPE. The selected mode will be displayed on the blue LED screen.
- **Volume Control:** Adjust the VOLUME knob to your desired listening level.
- **Remote Control:** Use the included remote control for convenient operation of various functions like mute, play/pause, mode selection, and track navigation.



Image: A hand holding the remote control, with the music system visible in the background. The remote allows for convenient control of various functions.

5.2 Turntable Operation (PHONO Mode)

1. **Select PHONO Mode:** Press the "FUNCTION SELECT" button until "PHONO" is displayed.
2. **Place a Record:** Open the dust cover and place a vinyl record on the turntable platter.
3. **Select Speed:** Adjust the speed selector switch (usually 33, 45, or 78 RPM) to match your record's speed. Use the 45 RPM adapter for 7-inch singles if needed.



3-SPEED

33-1/3, 45, 78 RPM

3 SIZE OF RECORD



Image: A close-up view of the turntable platter, highlighting the 3-speed selector (33-1/3, 45, 78 RPM) and illustrating the three common record sizes (7", 10", 12").

4. **Lift Tonearm:** Gently lift the tonearm using the cueing lever.
5. **Position Tonearm:** Move the tonearm over the desired starting groove of the record.
6. **Lower Tonearm:** Slowly lower the tonearm using the cueing lever. The record will begin playing.
7. **Auto-Stop Feature:** The turntable features an auto-stop function that automatically pauses and stops the platter when the music ends, protecting your vinyl. This can typically be toggled on/off with a switch near the tonearm.

5.3 CD Player Operation

1. **Select CD Mode:** Press the "FUNCTION SELECT" button until "CD" is displayed.
2. **Insert CD:** Press the "OPEN/CLOSE" button to open the CD tray. Place a CD with the label side facing up. Press "OPEN/CLOSE" again to close the tray.
3. **Playback:** The CD will usually start playing automatically. Use the PLAY/PAUSE, NEXT, and PREVIOUS buttons for control.

5.4 Cassette Player Operation

1. **Select TAPE Mode:** Press the "FUNCTION SELECT" button until "TAPE" is displayed.
2. **Insert Cassette:** Open the cassette door and insert a cassette tape. Close the door.
3. **Playback:** Use the PLAY, REW (rewind), FF (fast forward), and STOP/EJ (stop/eject) buttons for control.

5.5 AM/FM Radio Operation

1. **Select Radio Mode:** Press the "FUNCTION SELECT" button until "FM" or "AM" is displayed.
2. **Tune Station:** Use the TUNING knob to manually select your desired radio station.
3. **Antenna Adjustment:** Adjust the FM antenna for better reception if needed.

5.6 USB/SD/MMC Player Operation

1. **Select USB/SD Mode:** Press the "FUNCTION SELECT" button until "USB/SD" is displayed.
2. **Insert Media:** Insert a USB flash drive into the USB port or an SD/MMC card into the card slot.
3. **Playback:** The unit will automatically detect and play compatible audio files (MP3, WMA). Use the playback controls (PLAY/PAUSE, NEXT, PREVIOUS) to navigate.

5.7 Bluetooth Connection

1. **Select Bluetooth Mode:** Press the "FUNCTION SELECT" button until "BT" is displayed. The unit will enter pairing mode, indicated by a flashing "BT" on the screen.
2. **Enable Bluetooth on Device:** On your mobile phone, tablet, or other Bluetooth device, enable Bluetooth and search for available devices.
3. **Pairing:** Select "LoopTone" from the list of devices. Once connected, the "BT" indicator will stop flashing and remain solid. You can now stream audio from your device to the music system.

Video: Demonstrates how to connect a mobile device to the LoopTone music system via Bluetooth. The video shows the "BT" indicator flashing during pairing and becoming solid upon successful connection.

5.8 Recording Function (Vinyl to MP3/Cassette)

1. **Prepare for Recording:** Insert a USB flash drive or SD card into the respective slot. Ensure it has sufficient free space.
2. **Start Playback:** Begin playing the vinyl record or cassette tape you wish to record.
3. **Start Recording:** Press the "REC" button. The recording indicator will light up, and the unit will begin recording the audio to the inserted USB/SD media.
4. **Stop Recording:** Press the "STOP" button to end the recording. The recorded audio will be saved as an MP3 file on your USB/SD media.

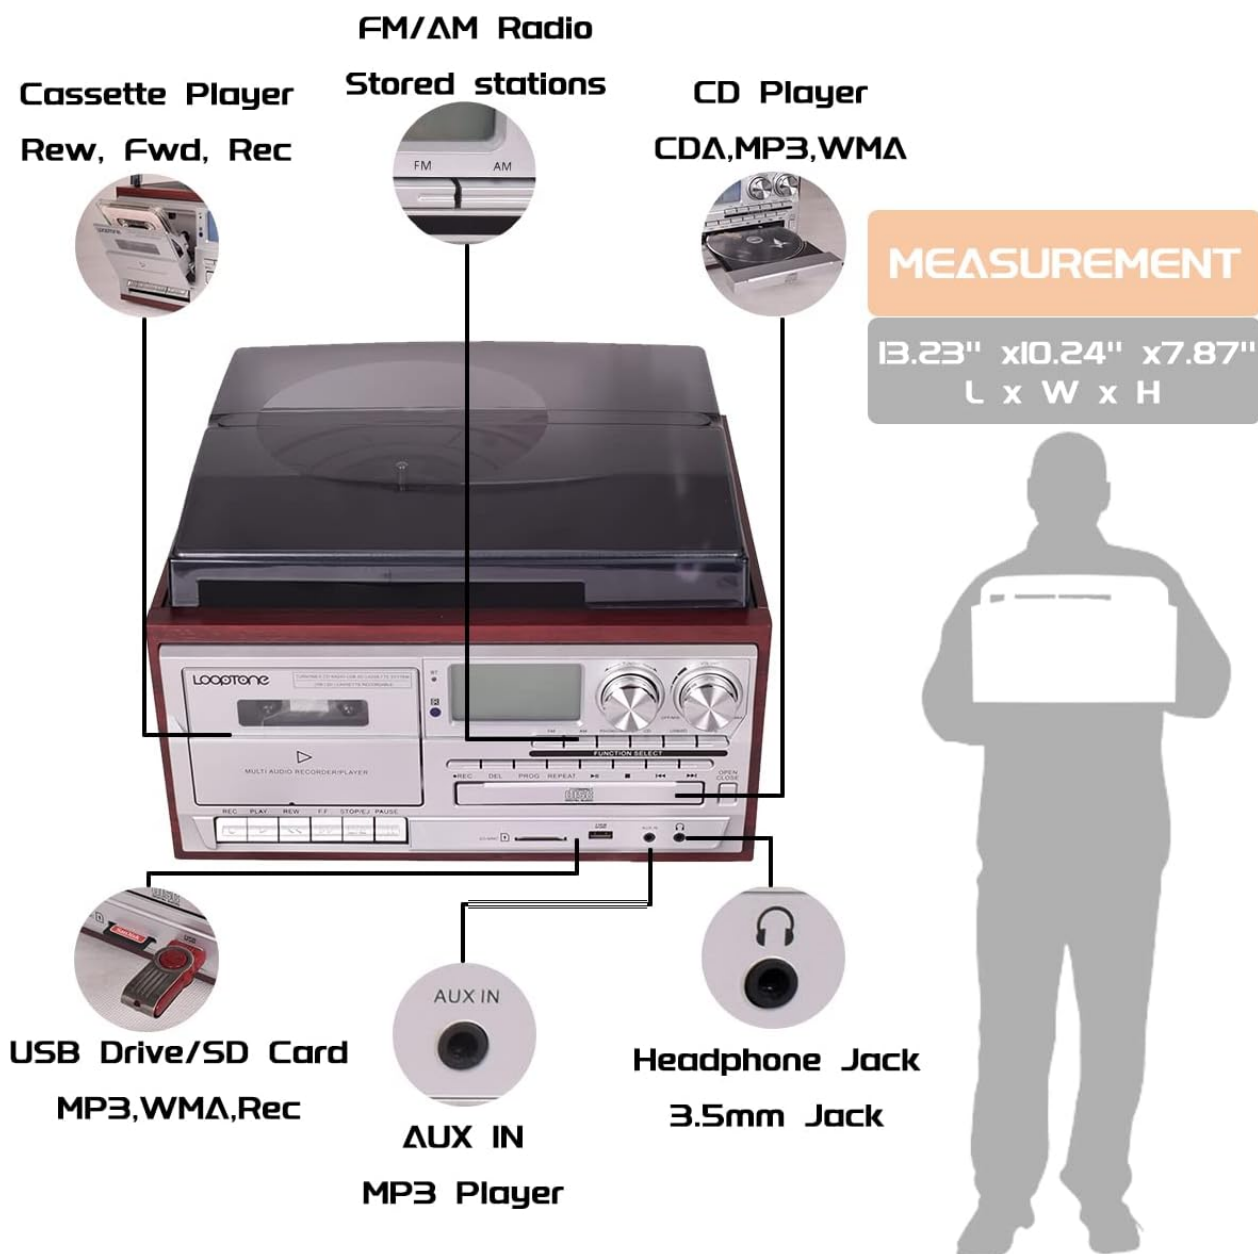


Image: A detailed view of the control panel, highlighting the "REC" button and the USB/SD card slots, illustrating the direct recording capability from various sources to digital formats.

5.9 Headphone Jack & RCA Line-Out

- **Headphone Jack:** Connect standard 3.5mm headphones to the headphone jack on the front panel for private listening. Audio from the built-in speakers will be muted.
- **RCA Line-Out:** Use the RCA Line-Out ports on the back to connect the unit to an external amplifier or powered speakers for enhanced audio output. Ensure proper left/right channel connection (white for left, red for right).

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Dust Cover:** Keep the dust cover closed when the turntable is not in use to prevent dust accumulation on the platter and stylus.
- **Stylus Care:** Handle the tonearm and stylus with care. Clean the stylus periodically with a soft brush designed for turntable styli.
- **Cassette Player:** Regularly clean the tape heads and pinch rollers with a suitable tape head cleaner to ensure optimal performance and prevent tape damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No Power	Power cord not securely connected; outlet not active.	Ensure power cord is firmly plugged in. Test the outlet with another device.
No Sound	Volume too low; incorrect mode selected; external speakers not connected properly.	Increase volume. Select the correct function mode. Check RCA connections if using external speakers. Ensure headphones are not plugged in if using built-in speakers.
Turntable not spinning or playing	Incorrect speed selected; tonearm not lowered; auto-stop engaged prematurely.	Verify correct RPM speed. Ensure tonearm is fully lowered onto the record. Check auto-stop switch.
Poor Radio Reception	FM antenna not extended or positioned correctly.	Fully extend and adjust the FM antenna for optimal signal.
Bluetooth Pairing Issues	Bluetooth not enabled on device; unit not in pairing mode; device too far.	Ensure Bluetooth is active on your device. Confirm the music system is in "BT" mode with flashing indicator. Move devices closer.
CD Player Noise / Skipping	Dirty or scratched CD; unit on unstable surface.	Clean the CD. Try a different CD. Place the unit on a stable, vibration-free surface.
Weak Bass Sound	Inherent characteristic of built-in speakers; no bass control.	For enhanced bass, connect to external powered speakers or an amplifier via RCA Line-Out.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	12.6 x 14.96 x 6.69 inches
Item Weight	7.04 pounds (3.2 Kilograms)
Model Number	TR-18CD
Brand	LoopTone
Connectivity Technology	Bluetooth
Maximum Rotational Speed	78 RPM (supports 33, 45, 78 RPM)
Included Components	Record player, built-in speaker x 2, 45 rpm adapter, remote control, manual
Special Features	Adjustable Speed, Built-In Speaker, Dust Cover
Material	Engineered Wood, Plastic, Metal
Style	Retro
Color	Red

Feature	Detail
Compatible Devices	Smartphone
On-mode power consumption	25.00 watts





9. WARRANTY AND SUPPORT

LoopTone is committed to providing high-quality products and excellent customer service. Your LoopTone 9-in-1 Multimedia Music System comes with a **one-year product quality problem solution warranty**.

For any inquiries, technical assistance, or warranty claims, please contact LoopTone customer service. We provide **7 X 24 hours customer consultation service** to assist you.

Visit the official [LoopTone Store on Amazon](#) for more information and product updates.

Related Documents - TR-18CD

 <p>LoopTone® Turntable Record Player 618A</p> <p>MANUAL READ INSTRUCTIONS CAREFULLY BEFORE USE AND STORE IN A SAFE PLACE FOR FUTURE REFERENCE</p>	<p>LoopTone 618A Turntable Record Player User Manual</p> <p>Comprehensive user manual for the LoopTone 618A Turntable Record Player, covering safety instructions, initial setup, operation of turntable, radio, CD, Bluetooth, USB/SD, cassette, and recording features, along with connection guides and FCC compliance information.</p>
 <p>CLASSICAL TURNTABLE WITH AM/FM RADIO CD, CASSETTE RECORDER & USB/SD SLOT</p> <p>LoopTone</p> <p>MODEL: TR-18CD Operating Instructions Manual</p>	<p>LoopTone TR-18CD Classical Turntable with AM/FM Radio, CD, Cassette Recorder & USB/SD Slot Operating Instructions</p> <p>Operating instructions for the LoopTone TR-18CD, a classical turntable with AM/FM radio, CD player, cassette recorder, and USB/SD slot. This manual covers setup, operation, and troubleshooting for all features.</p>
 <p>LoopTone</p> <p>Retro Radio Model: DS-R08</p> <p>INSTRUCTION MANUAL PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE AND STORE IN A SAFE PLACE FOR FUTURE REFERENCE</p>	<p>LoopTone DS-R08 Retro Radio Instruction Manual</p> <p>Official instruction manual for the LoopTone DS-R08 Retro Radio. Learn how to operate FM, AM, and Bluetooth modes, adjust tone, and view specifications.</p>
 <p>LoopTone® Turntable Record Player 618A</p> <p>MANUAL READ INSTRUCTIONS CAREFULLY BEFORE USE AND STORE IN A SAFE PLACE FOR FUTURE REFERENCE</p>	<p>LoopTone 618A Turntable Record Player User Manual</p> <p>Comprehensive user manual for the LoopTone 618A Turntable Record Player, covering safety instructions, initial setup, operation of turntable, radio, CD, Bluetooth, USB/SD, cassette, and recording features, along with connection guides and FCC compliance information.</p>



Operating instructions for the Looptone TR-18CD, a classical turntable with AM/FM radio, CD player, cassette recorder, and USB/SD slot. This manual covers setup, operation, and troubleshooting for all features.



Operating instructions for the Dosound TR-18CD-SP, a classical turntable with AM/FM radio, CD player, cassette recorder, USB/SD slot, and Bluetooth connectivity. This manual provides setup, operation, and troubleshooting guidance.

Documents - LoopTone – TR-18CD

[illegible]

[\[pdf\]](#) Decleration of Conformity


ATTESTATION OF CONFORMITY Global SourcesTR 17CD TR 17FCD 18CD 18FCD 19CD 20CD 21CD
TCDR 29CD XXFCD BB XXCDSP XXPCDSP XXFCDSP X can be any C6104384198s globalsources
IMAGES CERT 198 C6104384198 |||

BAY AREA COMPLIANCE LABORATORIES CORPORATION www.baclcorp.com
www.baclcorp.com.cn bacltest baclcorp. ... ng North Road,
 Xiaojinkou, Huizhou, Guangdong, China 516023 Product: Name: Turntable player
 Model s : **TR-18CD**-SP, CD114, CD114 BR, CD114 BL, TR-17CD-SP, TR-XXCD-SP,
 TR-17CD, TR-17FCD, **TR-18CD**, TR-18FCD,...

lang:en score:22 filesize: 302.97 K page_count: 1 document date: 2025-04-25

CLASSICAL TURNTABLE WITH AM/FM RADIO
CD, CASSETTE RECORDER & USB/SD SLOT

Looptone

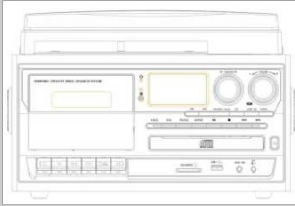

MODEL: TR-18CD
Operating Instructions Manual

[Looptone TR-18CD Classical Turntable with AM/FM Radio, CD, Cassette Recorder & USB/SD Slot Operating Instructions](#)

Operating instructions for the Looptone TR-18CD, a classical turntable with AM/FM radio, CD player, cassette recorder, and USB/SD slot. This manual covers setup, operation, and troubleshooting for all features.

lang:en score:20 filesize: 2.04 M page_count: 20 document date: 2022-06-07