

[Manuals.plus](#) /

› [KOMOK](#) /

› KOMOK 32mm Cordless Electric Pruning Shears User Manual

KOMOK 32mm

KOMOK 32mm Cordless Electric Pruning Shears User Manual

Model: 32mm | Brand: KOMOK

INTRODUCTION

This manual provides detailed instructions for the safe and effective use, setup, maintenance, and troubleshooting of your KOMOK 32mm Cordless Electric Pruning Shears. Please read this manual thoroughly before operating the tool to ensure proper function and user safety. Keep this manual for future reference.

IMPORTANT SAFETY INFORMATION

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Always wear appropriate personal protective equipment, including safety glasses and gloves, when operating the pruning shears.
- Keep hands and fingers away from the blades during operation. The blades are extremely sharp and powerful.
- Ensure the safety switch is engaged when the tool is not in use or when performing maintenance.
- Do not allow children or untrained individuals to operate the pruning shears.
- Use the tool only for its intended purpose: pruning tree branches and similar vegetation within the specified cutting diameter.
- Avoid operating in wet conditions or near flammable liquids or gases.
- Store the tool and batteries in a dry, secure location, out of reach of children.
- Use only KOMOK approved batteries and chargers.
- If the tool jams or malfunctions, immediately release the trigger and engage the safety switch before attempting to clear the obstruction.

PACKAGE CONTENTS

Verify that all items are present and in good condition upon opening the package.



Image: The KOMOK Electric Pruning Shears kit, including the pruner, two batteries, charger, wrench tool, work gloves, and storage case.

- 1x KOMOK Electric Pruning Shears (32mm)
- 2x Lithium Batteries (2Ah)
- 1x Battery Charger
- 1x Wrench Tool
- 1x Pair of Work Gloves
- 1x Storage Case
- 1x User Manual (this document)

PRODUCT FEATURES

- **SK5 High Carbon Steel Blades with DLC Coating:** Provides sharpness, durability, rust resistance, and reduces sap buildup.
- **Brushless Motor:** Delivers strong power for efficient cutting of branches up to 1.26 inches (32mm) in diameter.

- **Long-lasting Batteries:** Two 2Ah Lithium-ion batteries provide extended working hours, with a battery indicator for monitoring charge level.
- **Ergonomic Design:** Non-slip handle for comfortable and secure grip, reducing hand fatigue during prolonged use.
- **Safety Switch:** Integrated safety mechanism to prevent accidental activation.
- **LED Display:** Shows the number of cuts and remaining battery power.

SK5 STEEL BLADE WITH DLC COATING

Non-stick Resin - Easy to clean
Rustproof - Will Never Rust
Thinner and Sharper



Image: Close-up of the SK5 high carbon steel blade with DLC coating, illustrating its cutting capacity of 20-32mm.

LARGE CAPACITY BATTERY

2 Pcs 21V Lithium-Ion Battery Rechargeable



2-3 Hours
Quick Charging



8-10 Hours
Long battery life



CE/ROHS/MSDS/UN38.3 Certification



Over Voltage
Protection



Over Current
Protection



Over
Temperature
Protection



Charging
& Discharging
Protection

Image: Illustration of the 2Ah Lithium-ion battery, highlighting its quick charging time (2-3 hours) and long battery life (8-10 hours).



ADVANCED BRUSHLESS MOTOR



Image: Diagram showing the 800W advanced brushless motor, emphasizing its power and efficiency.

SETUP

1. Charge the Batteries:

Before first use, fully charge both lithium batteries using the provided charger. Connect the charger to a power outlet and then to the battery. The charging indicator on the battery or charger will show the charging status. A full charge typically takes 2-3 hours.

2. Install the Battery:

Ensure the pruning shears are turned off and the safety switch is engaged. Slide a fully charged battery into the battery slot at the base of the pruner until it clicks securely into place.

3. Initial Safety Check:

Before turning on, inspect the blades for any damage or obstructions. Ensure all components are properly assembled.

OPERATING INSTRUCTIONS

1. Power On:

Locate the power switch (often a slider or button) and turn it on. The LED indicator will turn green, and the electric pruner will beep twice. This indicates the tool is in standby mode.

2. Activate Blades:

To activate the blades, quickly pull the trigger twice. The blades will open, and the tool is now ready for use.



Image: Illustration showing how to pull and hold the trigger to cut, and release to open the blades.

3. Making a Cut:

Position the branch to be cut between the open blades. Ensure the branch diameter is within the maximum cutting capacity (32mm). Pull and hold the trigger to close the blades and make the cut. Release the trigger to open the blades for the next cut.

4. Monitoring Display:

The integrated LED display shows the number of cuts made and the remaining battery percentage. Monitor this to plan battery changes or recharging.

5. Power Off:

When finished, engage the safety switch and turn off the power switch. For extended storage, remove the battery from the tool.

MAINTENANCE

- **Blade Cleaning:** After each use, clean the blades to remove sap, debris, and resin. Use a damp cloth or a specialized resin remover. This helps maintain blade sharpness and prevents rust.
- **Blade Oiling:** Regularly apply a few drops of lubricating oil to the blades and pivot points. The tool features an oil filling port for this purpose. This ensures smooth operation and extends blade life.
- **Blade Sharpening:** If the blades become dull, they can be sharpened using a fine-grit sharpening tool. Refer to the diagram for the oil filling port and blade components.
- **Battery Care:** Store batteries in a cool, dry place. Do not expose them to extreme temperatures. Recharge batteries before they are completely depleted to prolong their lifespan.
- **General Storage:** Store the pruning shears in its original case in a dry, secure location, away from direct sunlight and moisture. Ensure the safety switch is engaged and the battery is removed before storage.

MAX CUTTING CAPACITY:32MM

Professional Cordless Electric Pruning Shears



Image: Detailed diagram of the KOMOK Electric Pruning Shears, labeling key components such as the moveable blade, fixed blade, oil filling port, LED display, trigger, non-slip handle, battery release button, lanyard hole, safety switch, and lithium battery.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shears do not turn on.	Battery not installed correctly, battery depleted, power switch off, safety switch engaged.	Ensure battery is fully charged and properly seated. Check if the main power switch is on. Disengage the safety switch.
Blades do not activate after power on.	Trigger not pulled twice quickly, safety mechanism not reset.	After turning on the power switch, quickly pull the trigger twice to activate the blades.

Problem	Possible Cause	Solution
Shears stop during cutting.	Overload (branch too thick), battery low, obstruction.	Release the trigger. Check branch diameter. Check battery level. Clear any obstructions with the tool powered off and battery removed.
Blades are dull or sticky.	Accumulated sap/debris, lack of lubrication, normal wear.	Clean blades thoroughly. Apply lubricating oil. Sharpen blades if necessary.

SPECIFICATIONS

- Brand:** KOMOK
- Model:** 32mm
- Cutting Diameter:** Up to 1.26 inches (32mm)
- Blade Material:** SK5 High Carbon Steel with DLC Coating
- Motor Type:** Brushless Motor
- Wattage:** 800 Watts
- Voltage:** 21 Volts
- Battery Type:** Lithium Ion
- Battery Capacity:** 2Ah (each battery)
- Charging Time:** 2-3 hours
- Working Hours:** Up to 10 hours (with two batteries, depending on usage)
- Item Weight:** Approximately 2.6 pounds (with one battery)
- Product Dimensions:** 11.02"L x 4.49"W
- Handle Material:** Alloy Steel
- UPC:** 725732780852

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact KOMOK customer service directly. Contact details can typically be found on the manufacturer's official website or through your retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07MC46WJ5>

More documents and user manuals: <https://manuals.plus/>