



Manuals.plus /

› Hasbro /

› Disney The Lion King Mighty Roar Simba Interactive Plush Toy Instruction Manual

Hasbro E5679090

Disney The Lion King Mighty Roar Simba Interactive Plush Toy Instruction Manual

Model: E5679090 | Brand: Hasbro

PRODUCT OVERVIEW

The Disney The Lion King Mighty Roar Simba Interactive Plush Toy embodies the fun, charm, and humor of animation's most famous lion cub. This interactive toy responds to touch and sound with over 100 sound-and-motion combinations, bringing Simba to life for engaging playtime.



Figure 1: Disney The Lion King Mighty Roar Simba Interactive Plush Toy.

Key Features:

- A young King who wants to roar, talk, & play: he loves to say phrases from the movie, challenge you to roaring contests, and lean back to show you he's ready to play.
- Responds to touch and sound with 100+ sound-and-motion combinations: he can move his head, eyes, ears, mouth, legs, & tail, and makes lots of fun movie sounds.
- He's full of surprises: pat him on the head -- who knows what he'll say or do? Talk to him, roar at him, and watch him react.
- Feed him his favorite treat: you guessed it – a grub on a stick – and mighty roar Simba responds when you feed it to him (as he likes to say, "slimy, yet satisfying!").

WHAT'S IN THE BOX

Your Disney The Lion King Mighty Roar Simba Interactive Plush Toy package includes:

- 1 x Mighty Roar Simba Interactive Plush Toy
- 1 x Play Treat (Grub on a Stick)
- 1 x Instruction Manual

Note: 4 x C batteries are required and are not included with the toy.

SETUP

1. Battery Installation

1. Locate the battery compartment on Simba's underside.
2. Using a Phillips head screwdriver (not included), open the battery compartment cover.
3. Insert 4 new "C" alkaline batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

2. Power On

Once batteries are installed, locate the ON/OFF switch, usually near the battery compartment. Slide the switch to the "ON" position to activate Simba.

OPERATING INSTRUCTIONS

Interacting with Simba

Simba is designed to be highly interactive, responding to various forms of engagement:

- **Patting his Head:** Gently pat Simba on the head to elicit various sounds and movements, including playful bows and phrases.
- **Petting his Back:** Stroke Simba's back to hear purring sounds and other contented reactions.
- **Talking to him:** Speak to Simba, and he will respond with phrases from the movie or other sounds.



Figure 2: Petting Simba's back for contented reactions.

Feeding Simba

1. Bring the "grub on a stick" close to Simba's mouth.
2. Simba will open his mouth and make eating sounds as he "eats" the treat.
3. Sometimes, if you pet his back while he's eating, he might even burp!



Figure 3: Feeding Simba his favorite grub treat.

Roaring Challenge

Simba enjoys a good roaring contest! Roar at him, and he will roar back, sometimes even challenging you to see who can roar the loudest.

Disney
THE
LION KING

THIS YOUNG KING WANTS TO
TALK, ROAR, & PLAY!

"THERE WILL NEVER BE A KING LIKE ME!"

HE ROARS BACK!

"SLIMY, YET SATISFYING!"

EVEN A KING LIKES TO CUDDLE

BROUGHT TO LIFE BY
FurReal

Includes pet, play treat, and instructions. SURFACE CLEAN ONLY.
Product and colors may vary. Refer to this information for future reference.
Le produit et les couleurs peuvent varier.
Consultez cette information pour référence ultérieure. ©Disney.
TM & © are trademarks of Hasbro.
© 2018 Hasbro. Pawdell, 89 0351-1059 USA. All Rights Reserved.
Tous droits réservés. TM & © de Disney U.S. Trademarks.
HASBRO CANADA, LONGUEUIL, QC CANADA J4G 1G2.
US/CANADA TEL: 1-800-255-5116
MADE IN CHINA • FABRIQUÉ EN CHINE

Disney Hasbro

Figure 4: Engaging in a roaring challenge with Simba.

Posing and Play

Simba's back legs can be posed to make him stand or sit, allowing for various play scenarios and display options.



Figure 5: Simba's posable legs allow for standing or sitting.

Official Product Video

Your browser does not support the video tag.

Video 1: An official overview of the furReal Friends Simba toy, demonstrating its interactive features and sounds.

MAINTENANCE

- **Cleaning:** Surface clean only. Use a soft, damp cloth to wipe away dirt. Do not immerse Simba in water or use harsh cleaning agents.
- **Storage:** Store Simba in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Simba is not responding.	Batteries are low or incorrectly installed.	Ensure the ON/OFF switch is in the "ON" position. Check battery polarity and replace with fresh "C" batteries if needed.
Simba's movements are sluggish or sounds are distorted.	Low battery power.	Replace all 4 "C" batteries with new ones.
Simba is not reacting to touch/sound.	Sensors may be obstructed or toy is in sleep mode.	Ensure sensors (head, back) are clear. Try turning Simba OFF then ON again to reset.

SPECIFICATIONS

Attribute	Detail
Product Dimensions	8.5 x 20 x 17.52 inches
Item Weight	2.2 pounds
ASIN	B07MC8TCGL
Item Model Number	E5679090
Manufacturer Recommended Age	4 years and up
Batteries Required	4 x C batteries (not included)
Manufacturer	Hasbro
Release Date	May 28, 2019

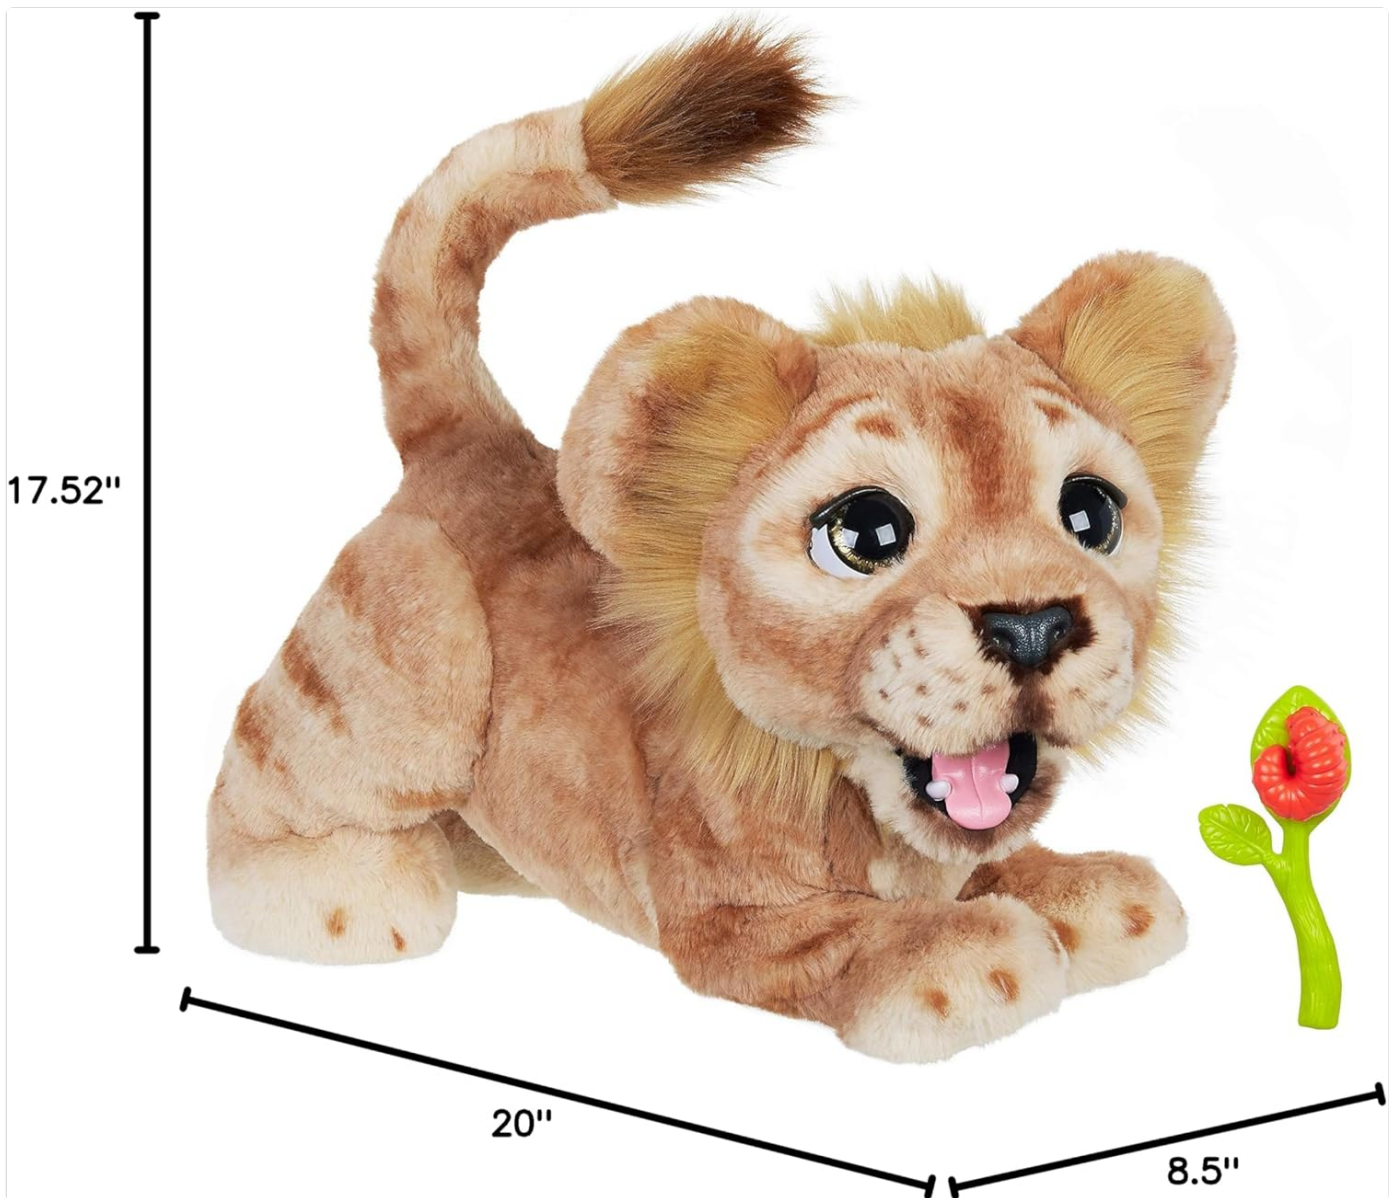


Figure 6: Product dimensions of the Mighty Roar Simba toy.

WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance, please refer to the product packaging or visit the official Hasbro website. Contact details for customer service are typically provided on the packaging or within the included documentation. You can visit the Hasbro Store on Amazon for more information and products.