

## Ewent EW1570

# Ewent EW1570 4-in-1 Universal Programmable Remote Control User Manual



## 1. INTRODUCTION

---

The Ewent EW1570 is a versatile 4-in-1 universal programmable remote control designed to consolidate the control of up to four different audio/video devices into a single unit. This remote is compatible with a wide range of equipment, including televisions, DTT/SAT/STB receivers, DVD/Blu-ray players, projectors, soundbars, media hard drives, and Hi-Fi systems. Its key feature is PC-based programming, which allows for precise customization and ensures compatibility with various brands and models.



An image displaying the Ewent EW1570 remote control alongside icons representing its key features: universal compatibility, PC programmability, free software, and inclusion of a micro USB cable.

## 2. PRODUCT OVERVIEW

The Ewent EW1570 remote control features a standard layout with clearly labeled buttons for easy navigation and control. It is designed for comfortable handling and intuitive operation. The remote includes dedicated buttons for device selection (TV, SAT, DVD, AUX), a numeric keypad, channel and volume controls, and navigation buttons. A micro USB port is located on the remote for PC connection during the programming process.



Front view of the Ewent EW1570 remote control, showing its buttons and layout.

### 3. SETUP AND PROGRAMMING

---

---

The Ewent EW1570 remote control is programmed via a Windows PC. This method ensures comprehensive compatibility and allows for detailed customization of functions.

### 3.1. Requirements

- A computer running a Windows operating system.
- The included micro USB to USB cable.
- Internet access to download the programming software.

### 3.2. Programming Steps

1. **Download Software:** Visit the official Ewent website to download the latest programming software for the EW1570. Ensure you download the correct version for your Windows operating system.
2. **Install Software:** Follow the on-screen instructions to install the programming software on your PC.
3. **Connect Remote:** Connect the Ewent EW1570 remote control to your PC using the provided micro USB cable. The remote should be recognized by the software.
4. **Select Devices:** Within the software, select the type and brand of the devices you wish to control (e.g., TV, Satellite Receiver, DVD Player). The software provides a comprehensive database of codes.
5. **Customize Functions (Optional):** The software allows for individual key assignment, enabling you to map specific functions from your original remote controls to the EW1570 buttons.
6. **Upload Configuration:** Once you have selected and customized your device settings, upload the configuration to the remote control via the software.
7. **Test Remote:** Disconnect the remote from the PC and test its functionality with your devices.



The Ewent EW1570 remote control shown alongside its micro USB cable, essential for PC programming.

## 4. OPERATION

---

After successful programming, operating the Ewent EW1570 is straightforward.

### 4.1. Selecting a Device

To control a specific device, press one of the dedicated device selection buttons at the top of the remote:

- **TV:** For your television.
- **SAT:** For satellite or cable receivers.
- **DVD:** For DVD or Blu-ray players.
- **AUX:** For auxiliary devices such as soundbars, media boxes, or Hi-Fi systems.

Once a device button is pressed, the remote will operate that specific device until another device button is selected.

### 4.2. Basic Functions

The remote provides standard control functions:

- **POWER:** Turns the selected device on or off.
- **MUTE:** Mutes the audio.
- **Volume (+/-):** Adjusts the volume.
- **Channel (+/-):** Changes channels.
- **Numeric Keypad (0-9):** For direct channel input or other numeric functions.
- **Navigation (Up/Down/Left/Right, OK):** For menu navigation.
- **MENU, EXIT, INFO, EPG:** Access device-specific menus and information.

## 5. MAINTENANCE

---

### 5.1. Battery Replacement

The Ewent EW1570 requires two 1.5V AAA/LR03 batteries (not included). To replace them:

1. Open the battery compartment cover on the back of the remote.
2. Remove the old batteries.
3. Insert two new AAA/LR03 batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover.

*The remote's permanent memory ensures that all programmed codes are retained even when batteries are removed or replaced.*

### 5.2. Cleaning

To clean the remote control, use a soft, dry cloth. Avoid using abrasive cleaners, solvents, or wet cloths, as these can damage the remote's surface or internal components.

## 6. TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if the batteries are correctly inserted and have sufficient charge. Replace if necessary.
  - Ensure you have selected the correct device mode (TV, SAT, DVD, AUX) for the device you are trying to control.
  - Verify that the remote is pointed directly at the device's infrared receiver.
- **Device not responding to specific functions:**
  - The programming for that specific function might be incorrect or missing. Re-program the remote using the PC software, paying close attention to key assignments.
  - Ensure the device you are trying to control is fully compatible with the selected code.
- **Difficulty finding programming software:**
  - Always refer to the official Ewent website for the most up-to-date programming software and drivers. Search for 'EW1570 software' on their support page.
- **Remote loses settings:**
  - The EW1570 features permanent memory, so settings should not be lost during battery changes. If settings are lost, re-program the remote. If the issue persists, contact Ewent support.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	EW1570
Brand	Ewent
Type	4-in-1 Universal Programmable Remote Control
Compatible Devices	TV, DTT (DVB-T), SAT (DVB-S), STB, DVD, VCR, Blu-ray, Projectors, Soundbar, Media Hard Drive, Hi-Fi
Maximum Supported Devices	4
Programming Method	Via Windows PC (Micro USB cable included)
Power Source	2 x 1.5V AAA/LR03 batteries (not included)
Memory	Permanent (retains settings during battery replacement)
Connectivity	USB (for programming)
Maximum Range	10 Meters
Dimensions	23.5 x 5.1 x 1.5 cm
Weight	102 g
Special Feature	Backlight

## 8. WARRANTY AND SUPPORT

### 8.1. Spare Parts Availability

Spare parts for the Ewent EW1570 are available for a period of 2 years from the date of purchase.

### 8.2. Software Updates


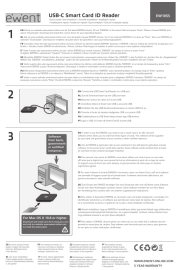
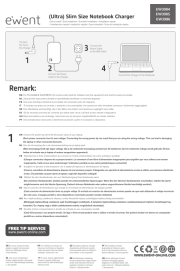


The programming software for the EW1570 is regularly updated, with free daily updates available to ensure compatibility with new devices and to improve functionality.

### 8.3. Customer Support

For further assistance, technical support, or warranty claims, please visit the official Ewent website or contact their customer service department. Ensure you have your product model number (EW1570) and proof of purchase available when seeking support.



**Related Documents - EW1570**

	<p><a href="#">Ewent Dual Docking Station USB 3.1 EW7014 Quick Installation Guide</a></p> <p>Quick installation guide for the Ewent EW7014 Dual Docking Station USB 3.1, detailing how to mount drives, connect to a PC, power on the device, and clone hard drives without a computer. Supports multiple languages.</p>
	<p><a href="#">Ewent Bluetooth Wireless Keyboard User Manual</a></p> <p>User manual for the Ewent Bluetooth Wireless Keyboard, providing instructions for installation and warranty information.</p>
	<p><a href="#">Ewent EW1055 USB-C Smart Card ID Reader Quick Installation Guide</a></p> <p>Get started with your Ewent EW1055 USB-C Smart Card ID Reader. This guide provides quick installation steps, driver download information, and connection instructions for seamless setup.</p>
	<p><a href="#">Ewent (Ultra) Slim Size Notebook Charger Quick Install Guide</a></p> <p>Quick installation guide for Ewent (Ultra) Slim Size Notebook Chargers, models EW3984, EW3985, and EW3986. Provides step-by-step connection instructions and important usage remarks for safe operation.</p>
	<p><a href="#">Ewent EW1331 65W GaN Fast Charger PD - Compact Design Quick Start Guide</a></p> <p>Compact 65W GaN fast charger by Ewent (model EW1331) with 2 USB-C PD ports and 1 USB-A QC 3.0 port. Supports fast charging for smartphones, tablets, and notebooks. Includes safety information and declaration of conformity.</p>
	<p><a href="#">Ewent EW1318 20W USB-C PD &amp; USB-A QC GaN Fast Charger - Quick Start Guide</a></p> <p>Quick start guide for the Ewent EW1318 20W GaN fast charger. Features USB-C PD and USB-A QC 3.0 ports for charging smartphones and tablets. Includes safety information, product features, and declarations of conformity.</p>





...

...

...

## [\[pdf\]](#) Specifications Datasheet Dimension Guide Warranty

aquí MANDO A DISTANCIA UNIVERSAL EWENT EW1570 4 EN 1 EuropeanPC Ficha del producto mmo  
67099260 1548935579 0788 21083 objects icecat biz |||

4 in 1 Universele Afstandsbediening programmeerbaar via PC met micro USB kabel

Bedien 4 A/V apparaten met n afstandsbediening **EW1570** 8054392614330

OVERVIEW 4:1 Universele afstandsbediening voor het bedienen van vier  
verschillende apparaten met maar n afstandsbediening Eenvoudig te programmeren  
via e...

lang:nl score:38 filesize: 4.13 M page\_count: 17 document date: 2019-01-31