

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Salton](#) /
- › [Swan Retro 4 Slice Toaster Instruction Manual](#)

## Salton ST19020GRN

# Swan Retro 4 Slice Toaster Instruction Manual

Model: ST19020GRN

## INTRODUCTION

---

Thank you for purchasing the Swan Retro 4 Slice Toaster. This appliance is designed to provide efficient and consistent toasting for up to four slices of bread simultaneously. Its retro design complements any modern or classic kitchen. Please read this manual thoroughly before use to ensure safe and proper operation.



*Image: The Swan Retro 4 Slice Toaster in Gray, featuring its four wide slots and chrome accents.*

## IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.

- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.

## COMPONENTS

---

1. **Toast Slots (4):** Wide slots to accommodate various bread types.
2. **Carriage Levers (2):** Used to lower bread into the toasting chamber and initiate toasting.
3. **Browning Control Dials (2):** Independently adjust the browning level from 1 (lightest) to 6 (darkest) for each pair of slots.
4. **Cancel Button (2):** Stops the toasting cycle at any time.
5. **Reheat Button (2):** Warms up previously toasted bread without further browning.
6. **Defrost Button (2):** Defrosts and toasts frozen bread.
7. **Slide-out Crumb Trays (2):** Located at the bottom for easy cleaning of crumbs.



*Image: Detailed view of the toaster's control panel, highlighting the browning dials and function buttons.*

## SETUP

1. **Unpack:** Carefully remove the toaster and all packaging materials.
2. **Placement:** Place the toaster on a stable, heat-resistant surface, away from flammable materials like curtains or walls. Ensure adequate ventilation around the appliance.
3. **First Use:** Before toasting bread for the first time, operate the toaster without bread on the highest browning setting (6) a few times. This will burn off any manufacturing residues and eliminate odors. A slight smoke or odor is normal during this process. Ensure the area is well-ventilated.

## OPERATING INSTRUCTIONS

The Swan Retro 4 Slice Toaster features independent controls for each pair of slots, allowing for different browning levels simultaneously.

### Basic Toasting

1. Plug the toaster into a suitable electrical outlet.
2. Place up to two slices of bread into each set of toast slots.
3. Adjust the browning control dial for the desired pair of slots to your preferred setting (1-6). Start with a medium setting (e.g., 3 or 4) and adjust as needed for future use.
4. Press down the corresponding carriage lever until it locks into place. The indicator light will illuminate, and toasting will begin.
5. Once the toasting cycle is complete, the toast will automatically pop up, and the indicator light will turn off.

### Using Function Buttons

- **Cancel:** To stop the toasting cycle at any time, press the **CANCEL** button. The carriage lever will immediately pop up.
- **Reheat:** To warm up cold toast, place the toast in the slots, press down the carriage lever, and then press the **REHEAT** button. The indicator light will illuminate, and the toaster will warm the toast for a short period.
- **Defrost:** To toast frozen bread, place the frozen bread in the slots, press down the carriage lever, and then press the **DEFROST** button. The toaster will automatically adjust the toasting time to first defrost and then toast the bread.



*Image: The toaster in action, with two slices of golden-brown toast emerging from the slots.*

### Product Overview Video

*Video: An official product overview from Salton USA, demonstrating the features and functionality of the Swan Retro 4 Slice Toaster.*

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Always Unplug:** Before cleaning, ensure the toaster is unplugged from the power outlet and completely cooled down.
2. **Crumb Tray:** Pull out the slide-out crumb trays located at the bottom of the toaster. Dispose of accumulated crumbs. Wipe the trays with a damp cloth and dry thoroughly before reinserting.
3. **Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. For stubborn marks, a mild detergent can be used, but ensure no liquid enters the toast slots. Do not use abrasive cleaners or metal scouring pads, as they may scratch the surface.
4. **Interior:** Never insert any object into the toast slots to clean the interior. If food becomes lodged, unplug the toaster and carefully invert it to dislodge the item.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure plug is fully inserted. Check household circuit breaker. Try a different outlet.
Toast is too light/dark.	Browning control setting is incorrect.	Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast.
Carriage lever does not stay down.	Toaster is not plugged in; internal mechanism issue.	Ensure the toaster is plugged into a live electrical outlet. If the issue persists, contact customer support.
Smoke coming from toaster.	Crumbs accumulated; food lodged; first use residue.	Unplug immediately. Clean crumb tray. If food is lodged, carefully remove it after cooling. First use smoke is normal.

## SPECIFICATIONS

- **Brand:** Salton
- **Model:** ST19020GRN
- **Color:** Gray
- **Material:** Color-coated iron
- **Wattage:** 1600 watts
- **Number of Slices:** 4
- **Browning Settings:** 6 levels
- **Special Features:** Cancel, Reheat, Defrost functions, LED Indicators, Slide-out crumb tray
- **Product Dimensions:** 10 x 11 x 7 inches
- **Item Weight:** 2 pounds
- **Manufacturer:** Swan
- **Country of Origin:** Switzerland

## WARRANTY AND SUPPORT

This Swan Retro 4 Slice Toaster is covered by a manufacturer's warranty against defects in material and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Salton website. For technical support, replacement parts, or service inquiries, please contact Salton customer service through their official channels.

**Website:** [www.salton.com](http://www.salton.com)