

## YOOHOO B07MCTDBV8

# YOOHOO Portable DVD Player User Manual

Model: B07MCTDBV8

## INTRODUCTION

---

Thank you for choosing the YOOHOO Portable DVD Player. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

## SAFETY INFORMATION

---

To ensure proper operation and prevent damage, observe the following safety guidelines:

- Do not expose the device to rain or moisture.
- Avoid placing the device near heat sources or in direct sunlight.
- Use only the provided power adapter and car charger.
- Keep the device away from strong magnetic fields.
- Do not attempt to disassemble or modify the device. Refer all servicing to qualified personnel.



1. This is a pointer for reading discs, please do not touch it. (Places marked in red circle)
2. Please press the button of the disc cover lightly. If you press hard, the button may be damaged. (Place indicated by yellow circle)
3. Please read the instructions carefully before use.

**Image: Disc Compartment Warning.** This image shows the open disc compartment of the portable DVD player. A warning symbol is present, indicating critical instructions. The text advises against touching the disc reading pointer (marked in red) and to press the disc cover lightly when closing to prevent damage.

## PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x YOOHOO Portable DVD Player
- 1 x Remote Controller
- 1 x AC Power Adapter
- 1 x Car Charger
- 1 x AV Cable
- 1 x User Manual



①



②



③



④



⑤



⑥



⑦

① Product packaging

② DVD player

③ Remote control

④ Car charger

⑤ AV cable

⑥ Power Adapter

⑦ User's Guide

**Image: Package Contents.** This image displays all components included in the product package: the portable DVD player, remote control, car charger, AV cable, power adapter, and user's guide, alongside the product packaging.

## PRODUCT OVERVIEW

Familiarize yourself with the main components and ports of your portable DVD player.

# Support Multiple DVD Formats



**Image: Front View and Multi-Format Support.** This image shows the YOOHOO Portable DVD Player with its screen displaying content. Above the player, icons illustrate its compatibility with various disc formats (SVCD, VCR, DVD-RW, CD, HDCD, EVD, DVD, CD-R, DVD-R) and media types (SD Card, USB).

The player features a 14.1-inch HD swivel screen, disc compartment, control buttons (Play/Pause, Stop, Fast Forward/Rewind, Volume, Menu, Setup), and various ports including USB, SD card slot, AV output, and power input.

## SETUP

### Charging the Battery

Before first use, fully charge the internal 3,500 mAh lithium battery. Connect the provided AC power adapter to the DC IN port on the player and plug it into a wall outlet. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off. A full charge provides up to 6 hours of playback.

### Powering On/Off

Press and hold the **POWER** button on the player or remote control to turn the device on or off.

## OPERATING INSTRUCTIONS

---

### Disc Playback

1. Gently open the disc cover.
2. Place a compatible disc (DVD, CD, VCD, etc.) onto the spindle with the label side facing up. Ensure the disc is seated correctly.
3. Close the disc cover lightly. Do not force it.
4. The player will automatically detect and begin playing the disc. If not, press the **PLAY/PAUSE** button.
5. Use the control buttons on the player or remote control for playback functions (Play, Pause, Stop, Skip, Volume).

### Media Playback (USB/SD Card)

The player supports media files from USB flash drives and SD cards.

- Insert a USB flash drive into the USB port or an SD card into the SD card slot.
- Use the **MODE** button or the remote control to select the USB or SD input source.
- Navigate through your files using the directional buttons and press **PLAY/PAUSE** to start playback.
- Supported formats include VOB, AVI, MPEG 1/2/4, XVID for video; MP3, WMA for audio; and JPEG for images.

### Swivel Screen Functionality

The 14.1-inch screen can swivel 270 degrees and flip 180 degrees, allowing for flexible viewing angles.

# 270° & 180° Swivel Screen

adjust to the most comfortable viewing angle for watching

270° Flip Screen



180° Flip Screen



0.38 inch

Ultra-thin



Metal Paint



**Image: Swivel and Flip Screen.** This image demonstrates the screen's ability to rotate 270 degrees and flip 180 degrees, allowing for various viewing positions, including a tablet-like configuration. It also highlights the player's ultra-thin design.

Carefully adjust the screen to your desired position. Avoid excessive force when rotating or flipping the screen.

## Resume Play Function

The player features a 'Break-Point Memory Function' (Resume Play). If enabled, the device will remember the last playback point of a disc or media file. When you power on the player again or re-insert the same media, it will prompt you to resume from where you left off.

# Break-Point Memory Function



**Image: Break-Point Memory Function and Screen Size.** This image illustrates the 'Break-Point Memory Function' by showing a movie paused and then resumed. It also indicates the 14-inch product screen size.

## Connecting to an External TV

You can connect the portable DVD player to a larger display, such as a television, using the provided AV cable.

1. Connect one end of the AV cable to the AV OUT port on the DVD player.
2. Connect the other end of the AV cable to the corresponding AV IN ports (Yellow for Video, Red for Right Audio, White for Left Audio) on your television.
3. Select the correct AV input source on your television.



**Image: Usage Scenarios.** This image collage shows the portable DVD player being used in various settings: mounted on a car headrest, connected to a gaming controller, used casually, and connected to a television via AV cables.

## MAINTENANCE

### Cleaning

- Wipe the exterior of the player with a soft, dry cloth.
- For stubborn marks, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive cleaners.
- Keep the disc compartment clean and free of dust. Do not use liquids inside the disc area.

### Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- If storing the device for an extended period, charge the battery to approximately 50% and store in a cool, dry place.

## TROUBLESHOOTING

If you encounter issues with your YOOHOO Portable DVD Player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Player does not power on.	Battery is depleted or power adapter is not connected.	Connect the AC power adapter and allow the battery to charge. Ensure the power button is pressed firmly.
"NO DISC" message appears.	Disc is not inserted correctly, disc is dirty/damaged, or disc format is unsupported.	Ensure the disc is seated properly. Clean the disc with a soft cloth. Try a different, known-good disc. Verify disc format compatibility.
Disc playback freezes or skips.	Disc is dirty, scratched, or player lens is dirty.	Clean the disc. Avoid touching the disc reading pointer. Try a different disc.
No sound or distorted sound.	Volume is too low, headphones not connected properly, or AV cable issue.	Adjust volume. Check headphone connection. Ensure AV cable is securely connected to both player and TV.
Remote control not working.	Batteries are depleted or remote is not aimed at the sensor.	Replace remote control batteries. Ensure there is a clear line of sight between the remote and the player's IR sensor.

## SPECIFICATIONS

Feature	Specification
Screen Size	14.1 Inches (16.9" diagonal product size)
Display Type	LCD, 1280*800 resolution
Battery	3,500 mAh Rechargeable Lithium Ion
Battery Life	Up to 6 hours
Disc Formats Supported	CD, DVD, DVD+R(-R), DVD+RW(-RW), VCD, SVCD-R(RW), CD-R(RW)
Video File Formats Supported	VOB, AVI, MPEG 1, MPEG 2, MPEG 4, XVID
Audio File Formats Supported	MP3, WMA
Image File Format Supported	JPEG
Connectivity	USB Port, SD Card Reader, AV Output
Product Dimensions	13.78 x 9.69 x 1.57 inches

Feature	Specification
Item Weight	5.33 pounds

## WARRANTY AND SUPPORT

---

YOOHOO provides a **12-month worry-free money-back guarantee** for this product. We are committed to offering lifetime professional customer service and technical support.

For any inquiries, technical assistance, or warranty claims, please contact YOOHOO customer service through the retailer where the product was purchased.