

[Manuals.plus](#) /

> [Youtob](#) /

> Youtob LED Flush Mount Ceiling Light (Model FM-LS-3000K, 4000K Cool White, 8.7 Inch) Instruction Manual

Youtob FM-LS-3000K

Youtob LED Flush Mount Ceiling Light (Model FM-LS-3000K, 4000K Cool White, 8.7 Inch) Instruction Manual

Model: FM-LS-3000K | Brand: Youtob

1. INTRODUCTION

Thank you for choosing the Youtob LED Flush Mount Ceiling Light. This manual provides essential information for the safe installation, operation, and maintenance of your new lighting fixture. Please read these instructions thoroughly before installation and retain them for future reference.

This Youtob LED Ceiling Light (Model FM-LS-3000K) is a 15W, 1200 lumen fixture with a 4000K cool white color temperature. It features a slim, round design with a brushed silver finish, measuring 8.7 inches in diameter and 0.65 inches in thickness. It is designed for various indoor applications, including kitchens, bedrooms, bathrooms, closets, stairways, hallways, basements, and laundry rooms. The fixture utilizes edge-lit technology for even light distribution and efficient heat dissipation, contributing to a longer LED lifespan of over 30,000 hours.



Image 1.1: Front view of the Youtob LED Flush Mount Ceiling Light, showcasing its round, slim design and brushed silver finish.

2. SAFETY INFORMATION

WARNING: Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.

- Read all instructions carefully before beginning installation.
- All wiring connections must be in accordance with local and national electrical codes. If you are unfamiliar with proper electrical wiring, consult a qualified electrician.
- Ensure the supply voltage is correct (120V AC).
- Do not install this fixture on a dimmable circuit as it is not designed for dimming.
- Do not attempt to alter the fixture. Any alterations may void the warranty and create a safety hazard.
- This fixture is for indoor use only and is not water-resistant. Avoid installation in areas with direct water exposure.
- Wear appropriate safety gear, including safety glasses, during installation.

3. PACKAGE CONTENTS

Verify that all components are present before installation:

- Youtob LED Flush Mount Ceiling Light Fixture (1 unit)
- Mounting Hardware (screws, wire nuts, mounting bracket)
- Instruction Manual (this document)

4. SPECIFICATIONS

Feature	Specification
Brand	Youtob
Model Number	FM-LS-3000K
Dimensions (L x W x H)	8.7" x 8.7" x 0.65"
Wattage	15W (100W Equivalent)
Brightness	1200 Lumens
Color Temperature	4000K (Cool White)
Voltage	120 Volts
Material	Aluminum + PC Plastic
Finish Type	Brushed Silver
Light Source Type	LED
Average Life	30,000 Hours
Installation Type	Flush Mount
Indoor/Outdoor Usage	Indoor

Water Resistance Level	Not Water Resistant
Special Features	Shock and vibration resistant, Not Dimmable, Ultra bright

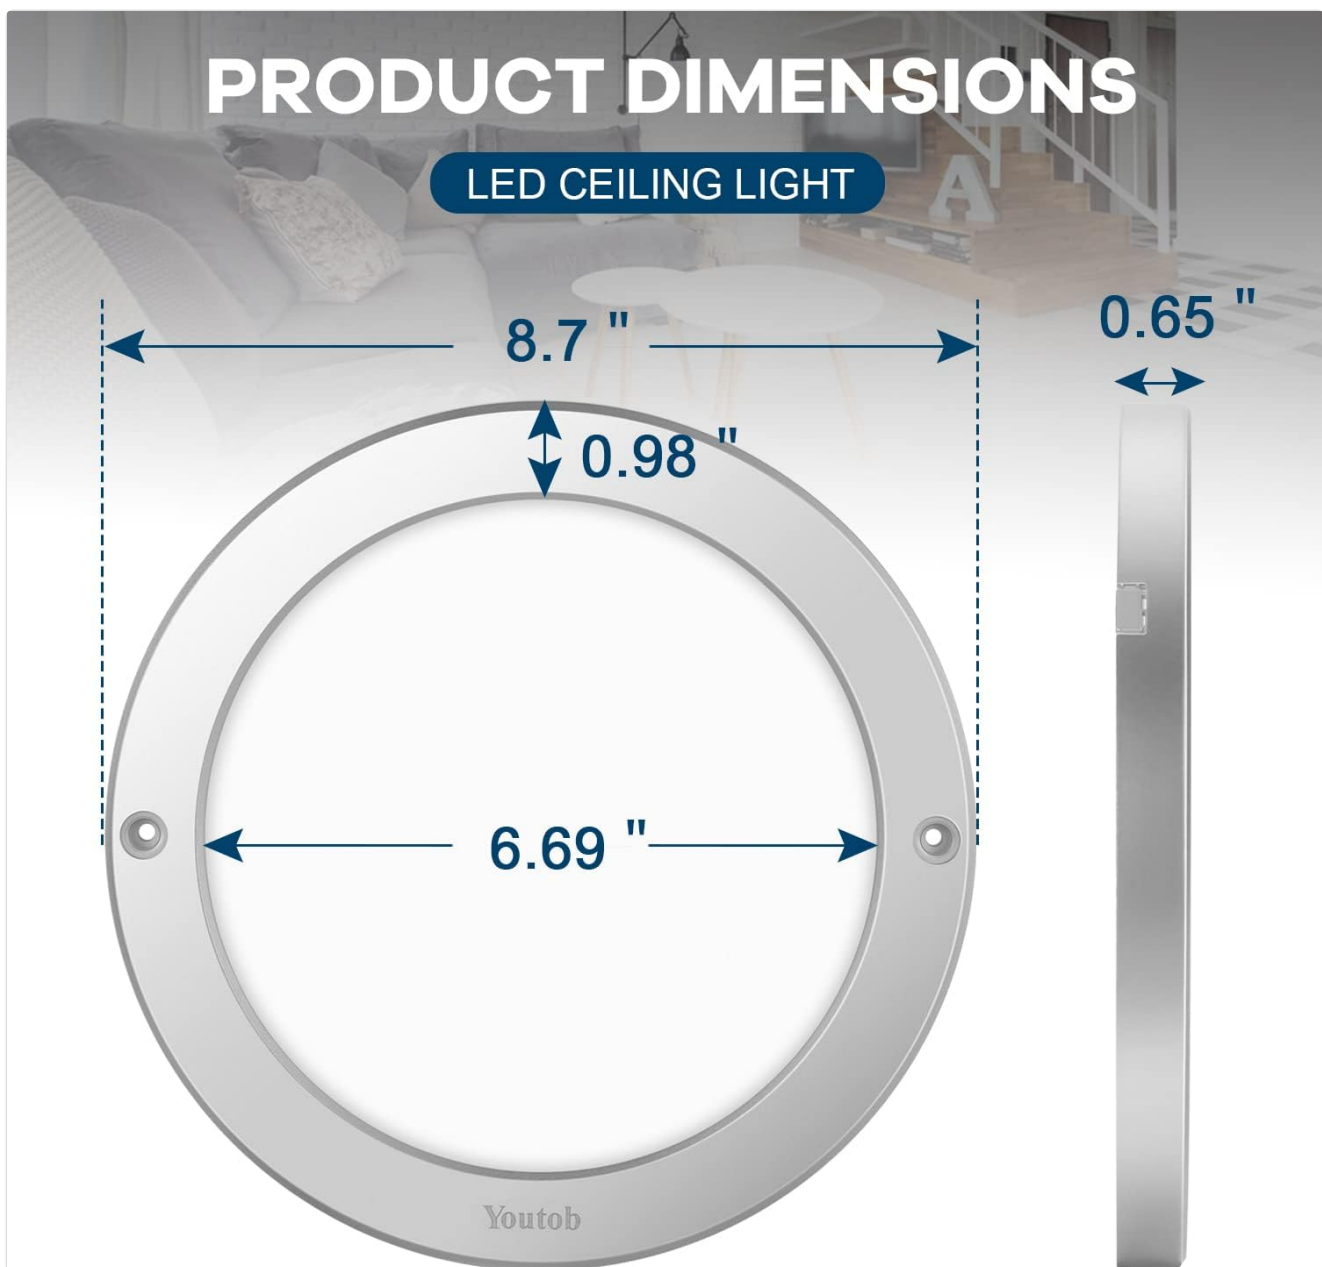


Image 4.1: Detailed product dimensions, showing a diameter of 8.7 inches and a thickness of 0.65 inches.

5. SETUP AND INSTALLATION

Before you begin: Ensure power is disconnected at the circuit breaker. Use appropriate safety gear, including safety glasses.

- 1. Turn Off Power:** Locate the circuit breaker controlling the light fixture you are replacing or the area where you are installing the new fixture. Switch it to the OFF position. Verify power is off using a voltage tester.
- 2. Remove Old Fixture (if applicable):** Carefully remove the existing light fixture. Disconnect the wires and remove any old mounting hardware.
- 3. Install Mounting Bracket:** Attach the provided mounting bracket to the junction box in the ceiling using the screws from the mounting hardware kit. Ensure the bracket is securely fastened.

4. Connect Wiring:

- Connect the **black** wire from the fixture to the **black** (live) wire from the ceiling using a wire nut.
- Connect the **white** wire from the fixture to the **white** (neutral) wire from the ceiling using a wire nut.
- Connect the **ground** wire (bare copper or green) from the fixture to the **ground** wire from the ceiling (or to the junction box if no ground wire is present).

Ensure all connections are tight and secure. Tuck wires neatly into the junction box.

5. **Attach Fixture to Bracket:** Align the holes on the light fixture with the screws on the mounting bracket. Push the fixture up towards the ceiling and secure it with the decorative nuts or screws provided. Ensure the fixture is flush against the ceiling.
6. **Restore Power:** Once the fixture is securely installed, return to the circuit breaker and switch the power back ON. Test the light fixture.



Image 5.1: The slim profile of the Youtob LED Ceiling Light after installation, highlighting its low-profile design.

6. OPERATING INSTRUCTIONS

The Youtob LED Flush Mount Ceiling Light operates via a standard wall switch connected to its electrical circuit. There are no additional controls on the fixture itself.

- To turn the light ON, flip the connected wall switch to the ON position.
- To turn the light OFF, flip the connected wall switch to the OFF position.

Note: This fixture is not dimmable. Connecting it to a dimmer switch may cause flickering or damage to the LED components.

7. MAINTENANCE

The Youtob LED Flush Mount Ceiling Light requires minimal maintenance.

- **Cleaning:** Before cleaning, ensure the power to the fixture is turned off at the circuit breaker. Use a soft, dry, or slightly damp cloth to wipe the surface of the fixture. Do not use abrasive cleaners, solvents, or cleaners containing alcohol, as these can damage the finish or electrical components.
- **LED Longevity:** The integrated LED light source has an average lifespan of 30,000 hours and is not replaceable.

8. TROUBLESHOOTING

If you encounter issues with your Youtob LED Flush Mount Ceiling Light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	<ul style="list-style-type: none">◦ Power is off at the circuit breaker or wall switch.◦ Loose wire connections.◦ Faulty wall switch.◦ Fixture defect.	<ul style="list-style-type: none">◦ Ensure power is ON at both the circuit breaker and wall switch.◦ Turn off power, then check and tighten all wire connections.◦ Test the wall switch with another device or replace it if faulty.◦ If all else fails, contact customer support.
Light flickers.	<ul style="list-style-type: none">◦ Fixture connected to a dimmer switch.◦ Loose wire connections.◦ Voltage fluctuations.	<ul style="list-style-type: none">◦ Ensure the fixture is not connected to a dimmer switch. This fixture is not dimmable.◦ Turn off power, then check and tighten all wire connections.◦ Consult an electrician if voltage issues are suspected.
Light is too dim.	<ul style="list-style-type: none">◦ Not designed for dimming.◦ Incorrect power supply.	<ul style="list-style-type: none">◦ This fixture provides 1200 lumens at 4000K. If it appears dimmer than expected, ensure it's not on a dimmer circuit.◦ Verify the correct 120V power supply.

9. WARRANTY AND SUPPORT

Warranty: This Youtob LED Flush Mount Ceiling Light comes with an 18-Month Warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover:

- Damage caused by improper installation or misuse.
- Damage caused by unauthorized repairs or modifications.

- Damage caused by natural disasters or accidents.

Customer Support: For warranty claims, technical assistance, or any questions regarding your product, please contact Youtob customer support through the retailer where the product was purchased or visit the official Youtob website for contact information.

Please have your purchase receipt and model number (FM-LS-3000K) ready when contacting support.