

UBay RM-ADU007

RM-ADU007 Remote Control Instruction Manual

Model: RM-ADU007 | Brand: UBay

INTRODUCTION

This manual provides detailed instructions for the UBay RM-ADU007 replacement remote control, designed for various Sony AV System and Home Theater System models. This remote offers a direct replacement solution, requiring no programming for immediate use.

Compatible Sony AV System Models:

- DAV-HDX274, RMADU007A, HCDHDX277, HCD-HDX287WC, HCD-HDX576
- 1-480-570-21, DAV-HDZ273, DAV-HDX275, DAV-HDX276WF, DAV-HDX277WC
- DAV-HDX279W, DAV-HDX285, DAV-HDX287WC, DAV-HDX475, DAV-HDX576WF
- DAV-HDX587WC, DAV-HDX589W, HCD-HDZ273, HCD-HDX275, HCD-HDX475, HCD-HDX576WF

SETUP

The UBay RM-ADU007 remote control is designed for immediate use with compatible Sony AV and Home Theater Systems. No complex programming or pairing is required.

1. Battery Installation

To begin using your remote control, you must first install the batteries.

1. Locate the battery compartment on the back of the remote control. This is typically a rectangular cover that can be slid or unclipped.
2. Gently slide the battery compartment cover downwards or press the release tab and lift to open.
3. Insert two (2) AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment. Incorrect battery orientation may prevent the remote from

functioning.

4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image: Front and back view of the RM-ADU007 remote control. The front displays all control buttons, while the back shows the battery compartment cover and a "MADE IN MALAYSIA" label.

2. Initial Use

Once batteries are installed, the remote is ready for use. Point the remote control directly at your Sony AV System or Home Theater System and press any function button to test its operation.

OPERATING INSTRUCTIONS

The UBay RM-ADU007 remote control provides full functionality for your compatible Sony Home Theater System. Below is a general guide to the common buttons and their functions.



Image: Angled view of the RM-ADU007 remote control, showcasing the full array of buttons from a slight top-down perspective.

Button Functions Overview

Button Name	Function
POWER (I/O)	Turns the connected Sony AV system on or off.
THEATER / ONE-TOUCH PLAY	Activates the Home Theater mode or initiates one-touch playback.
TV I/O	Turns the connected television on or off.
BRAVIA Sync	Controls devices compatible with Sony's BRAVIA Sync (HDMI CEC) feature.
SLEEP	Sets a sleep timer for the system.
TV VOL +/-	Adjusts the volume of the connected television.
TV INPUT	Cycles through input sources on the connected television.
FUNCTION	Selects the audio/video function (e.g., DVD, CD, Tuner, AUX).
DISPLAY	Shows on-screen display information.
DISC SKIP	Skips to the next disc in a multi-disc changer.
PICTURE NAVI	Navigates picture settings or photo slideshows.
AUDIO	Cycles through audio tracks or sound modes.
SUBTITLE	Toggles subtitles on/off or cycles through subtitle languages.
ANGLE	Changes camera angles on compatible DVDs.
D.TUNING	Direct tuning for radio stations.
S-AIR MODE	Activates or adjusts S-AIR wireless audio settings.
NIGHT	Activates Night Mode for optimized sound at low volumes.
SOUND MODE	Cycles through various sound modes (e.g., Cinema, Music, Standard).
SYSTEM DYNAMIC BASS	Enhances bass output for the system.
NUMBER BUTTONS (0-9)	Direct input for track numbers, channel numbers, or menu selections.
CLEAR	Clears numerical input or cancels a selection.
DVD TOP MENU	Accesses the top menu of a DVD.
ENTER / DVD MENU	Confirms selections or accesses the DVD menu.
MUTING	Mutes or unmutes the system's audio.
VOLUME +/-	Adjusts the system's main volume.
MENU	Accesses the system's main menu.
NAVIGATION BUTTONS (Up, Down, Left, Right, Center)	Navigates through menus and selections.

Button Name	Function
TOOLS	Accesses additional tools or settings.
RETURN / TV CH-	Returns to the previous menu or changes TV channel down.
PRESET - / REPLAY	Selects previous radio preset or replays a short segment.
STEP / ADVANCE	Advances frame by frame or skips forward.
PRESET + / TV CH+	Selects next radio preset or changes TV channel up.
PLAY (▶)	Starts playback.
PAUSE (⏸)	Pauses playback.
STOP (■)	Stops playback.
REWIND (◀◀)	Rewinds playback.
FAST FORWARD (▶▶)	Fast forwards playback.
PREVIOUS TRACK (◀)	Skips to the beginning of the current or previous track/chapter.
NEXT TRACK (▶)	Skips to the next track/chapter.
TUNING - / SLOW	Decreases radio frequency or slows down playback.
TUNING + / SLOW	Increases radio frequency or slows down playback.



Image: Top-down view of the RM-ADU007 remote control, providing a clear perspective of all buttons and their labels.

MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your UBay RM-ADU007 remote control.

Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

Battery Replacement

- Replace batteries when the remote's response becomes sluggish or it stops functioning.
- Always replace both batteries at the same time with new ones of the same type (AAA).
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period to prevent leakage and damage.
- Dispose of used batteries according to local regulations.

Storage

- Store the remote control in a cool, dry place, away from direct sunlight, extreme temperatures, and high humidity.
- Avoid dropping the remote or exposing it to strong impacts.

TROUBLESHOOTING

If you experience issues with your UBay RM-ADU007 remote control, refer to the following common solutions:

Problem	Possible Cause / Solution
Remote is not responding.	<ul style="list-style-type: none">◦ Batteries: Check if batteries are inserted correctly (+/- orientation). Replace with fresh AAA batteries.◦ Line of Sight: Ensure there is a clear line of sight between the remote's infrared emitter and the receiver on your Sony AV system. Obstructions can block the signal.◦ Distance: You may be too far from the device. Move closer to the Sony AV system.◦ Interference: Strong light sources (e.g., direct sunlight, fluorescent lights) can interfere with infrared signals. Try operating the remote in a different lighting condition.

Problem	Possible Cause / Solution
Only some buttons work.	<ul style="list-style-type: none">◦ Battery Power: Low battery power can sometimes cause inconsistent button responses. Replace batteries.◦ Stuck Buttons: Check if any buttons are physically stuck or jammed. Gently press and release them.◦ Compatibility: While this remote is broadly compatible, some specific functions might not be supported by all Sony models. Refer to your Sony system's original manual for specific remote functions.
Remote works intermittently.	<ul style="list-style-type: none">◦ Weak Batteries: This is a common symptom of weak batteries. Replace them.◦ Signal Obstruction: Ensure no objects are intermittently blocking the signal path.

If the problem persists after trying these solutions, the remote control may be faulty. Contact the seller or manufacturer for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	RM-ADU007
Brand	UBay
Product Dimensions	7 x 2 x 0.7 inches (approximately)
Item Weight	2.75 ounces (approximately)
Connectivity Technology	Infrared (IR)
Compatible Devices	Sony Home Theater Systems (various models, see Introduction)
Max Number of Supported Devices	1 (dedicated replacement remote)
Special Feature	Ergonomic design
Batteries Required	2 x AAA (not included)

WARRANTY AND SUPPORT

For warranty information or technical support regarding your UBay RM-ADU007 remote control, please refer to the seller's return policy or contact the manufacturer directly. Details are typically provided at the point of purchase or on the product packaging.

As a general guideline, Amazon's return policy for this product is 30 days from receipt for a refund or replacement. For specific warranty claims beyond this period, please reach out to UBay Factory, the manufacturer.

© 2024 UBay. All rights reserved. This manual is for informational purposes only.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question