

manuals.plus /

- › [CkeyiN](#) /
- › [CkeyiN JS063A 550ml Aroma Diffuser and Humidifier User Manual](#)

CkeyiN JS063A

CkeyiN JS063A 550ml Aroma Diffuser and Humidifier User Manual

Model: JS063A | Brand: CkeyiN

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your CkeyiN JS063A 550ml Aroma Diffuser and Humidifier. Please read this manual thoroughly before operating the device and retain it for future reference.



Yoga



Arbeit



Schlafen

Image: The CkeyiN Aroma Diffuser is suitable for various environments such as yoga sessions, office work, or during sleep, promoting relaxation and comfort.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always place the diffuser on a flat, stable surface.
- Do not place the diffuser near heat sources or in direct sunlight.
- Keep out of reach of children and pets.
- Use only clean tap water or distilled water. Do not use hot water.
- Do not exceed the maximum water level indicated.
- Only use 100% natural essential oils. Avoid corrosive or synthetic oils.
- Unplug the device before cleaning or refilling.
- Do not touch the ultrasonic plate with bare hands.

- If the device emits smoke or an unusual smell, unplug it immediately.
- Do not immerse the device in water or any other liquid.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x CkeyiN 550ml Aroma Diffuser
- 1 x Power Adapter
- 1 x Measuring Cup
- 1 x Remote Control
- 1 x User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your aroma diffuser.



Image: The CkeyiN 550ml Aroma Diffuser, featuring a wood grain finish, mist output, and a remote control for convenient operation. The base shows an illuminated LED ring.

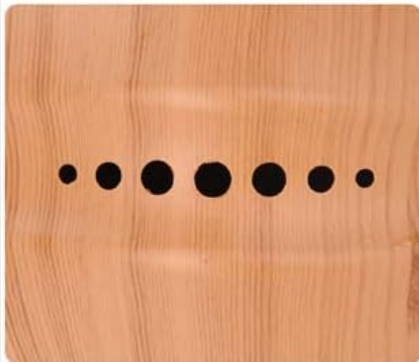


Image: Detailed view of the diffuser's mist outlets on top, the power input port at the back, and the control buttons (Light, Mist, Timer) located on the front base.

7 Kleine Öffnungen Verteilt

7 LED Licht

Jede Farbe kann durchlaufen oder auf eine feste Farbe eingestellt werden

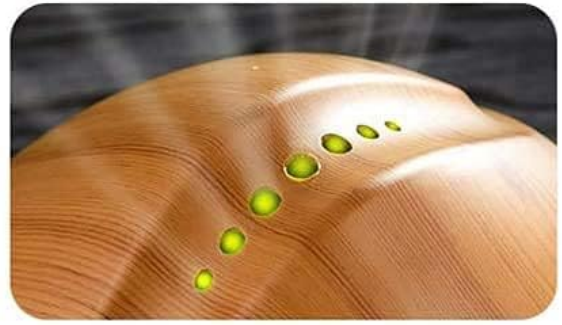


Image: The diffuser's dimensions are displayed as 15.6 cm (height) by 17 cm (width). Below, seven different LED light colors are shown, indicating the customizable ambient lighting feature.

5. SETUP GUIDE

Follow these steps for initial setup:

1. Place the diffuser on a stable, level surface.
2. Remove the top cover by lifting it upwards.
3. Connect the power adapter to the DC jack at the back of the diffuser.
4. Fill the measuring cup with clean water (tap or distilled) up to the 550ml max line. Do not exceed the maximum water level indicator inside the tank.
5. Add 2-3 drops of essential oil directly into the water tank (optional).
6. Replace the top cover, ensuring it is securely seated.

7. Plug the power adapter into a wall outlet.



1. Heben Sie die Abdeckung an



2. Stecken Sie das Stromkabel ein



3. Wasser hinzufügen



4. Drücken Sie den Netzschalter zum
Einschalten

Image: Step-by-step setup: 1. Lift the cover. 2. Plug in the power cable. 3. Add water to the tank. 4. Press the power button to turn on the device.

6. OPERATING INSTRUCTIONS

Operate your diffuser using the buttons on the unit or the included remote control.

3 Meter Entfernt



Image: A hand holding the remote control, demonstrating its effective range of approximately 3 meters. The remote features buttons for ON/OFF, Intermittent mist, Continuous mist, Timing, Mist Volume (Big/Small), and Light control.

6.1. Power On/Off

- Press the 'ON/OFF' button on the remote or the 'MIST' button on the unit to turn on the diffuser.
- Press the 'ON/OFF' button on the remote or hold the 'MIST' button on the unit for 2 seconds to turn off the diffuser.

6.2. Mist Control

The diffuser offers continuous or intermittent mist, and adjustable mist volume.



Image: The CkeyiN Aroma Diffuser actively releasing a visible stream of mist, demonstrating its humidifying and diffusing capability.

- **Continuous Mist:** Press the 'Continuous' button on the remote or press the 'MIST' button on the unit once.
- **Intermittent Mist:** Press the 'Intermittent' button on the remote or press the 'MIST' button on the unit a second time. The diffuser will mist for 10 seconds and pause for 10 seconds.
- **Mist Volume:** Press the 'Big/Small' button on the remote or hold the 'MIST' button on the unit for 1 second to switch between high and low mist output.

6.3. Timer Settings

Set the diffuser to automatically turn off after a specified period.

- Press the 'Timing' button on the remote or the 'TIMER' button on the unit to cycle through 1 hour, 3 hours, 6 hours, or continuous operation.
- The diffuser will automatically shut off when the water level is too low, regardless of the timer setting.

6.4. LED Light Control

Customize the ambient lighting with 7 color options.

- Press the 'Light' button on the remote or the 'LIGHT' button on the unit to turn on the LED light.
- Press again to cycle through the 7 colors.
- Hold the 'Light' button for 2 seconds to fix the light to a single color.
- Hold the 'Light' button again for 2 seconds to turn off the light.

7. MAINTENANCE AND CLEANING

Regular cleaning helps maintain optimal performance and extends the lifespan of your diffuser.

1. Unplug the diffuser from the power outlet and remove the top cover.
2. Empty any remaining water from the tank, ensuring to pour away from the air outlet side.
3. Wipe the inside of the water tank with a soft cloth.
4. For stubborn residue, add a small amount of white vinegar to the tank and let it sit for 10-15 minutes. Then, gently wipe clean with a soft brush or cotton swab.
5. Clean the ultrasonic plate gently with a cotton swab. Do not use harsh chemicals or abrasive materials.
6. Wipe the exterior of the diffuser with a soft, damp cloth.
7. Allow all parts to air dry completely before reassembling or storing.

Note: Clean the diffuser after every 5-6 uses or every 3-5 days to prevent mineral buildup and ensure proper function.

8. TROUBLESHOOTING

If you encounter issues with your diffuser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No mist or weak mist	Low water level Ultrasonic plate dirty Air outlet blocked Too much water	Add water to the appropriate level Clean the ultrasonic plate Ensure air outlet is clear Do not exceed MAX water line
No power	Power adapter not connected No power from outlet	Check power adapter connection Test outlet with another device
Light not working	Light function off	Press the 'LIGHT' button to activate
Remote control not working	Batteries dead Obstruction between remote and diffuser	Replace remote control batteries Ensure clear line of sight
Unusual noise	Low water level Diffuser not on a flat surface	Add water Place on a stable, flat surface

9. TECHNICAL SPECIFICATIONS

Feature	Detail
Model	JS063A
Brand	CkeyiN
Material	PP + ABS + PC
Input Voltage	AC 100-240V, 50/60Hz
Output Voltage	DC 24V, 650mA
Rated Power	Approx. 14W
Water Tank Capacity	550ml
Noise Level	≤ 36dB
Ultrasonic Frequency	2.4MHz
Recommended Usage Area	20-25 square meters
Humidification Method	Ultrasonic
Product Dimensions (H x W)	15.5 x 17 cm (approx. 6.1 x 6.7 inches)
Product Weight	Approx. 560g

10. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the product packaging or contact your retailer for specific warranty terms and conditions. For technical support or inquiries, please contact CkeyiN customer service through the details provided at the point of purchase.

