

UpStart Components RC-CT90325-DL169

User Manual: Replacement TV Remote Control

Model: RC-CT90325-DL169 | Brand: UpStart Components

INTRODUCTION

This manual provides instructions for the UpStart Components Replacement TV Remote Control, model RC-CT90325-DL169. This remote is designed as a direct replacement for the Toshiba CT-90325 TV Remote Control and is compatible with Toshiba 40L5200U1 Television models. It offers easy setup and operation, requiring no programming.

SETUP

Battery Installation

The remote control requires two (2) AA batteries (not included) for operation. Follow these steps to install the batteries:

- 1. Locate the battery compartment cover on the back of the remote control.
- 2. Press down on the tab and slide the cover downwards to open the compartment.
- 3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
- 4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use with compatible Toshiba televisions.





Figure 1: Front view of the UpStart Components Replacement TV Remote Control. This image shows the layout of all buttons, including number keys, volume and channel controls, navigation pad, and media playback buttons.

OPERATING INSTRUCTIONS

This remote control is designed to function identically to the original Toshiba CT-90325 remote. No programming is required; simply point the remote at your television and press the desired button.

Key Functions

- **POWER** (): Turns the television on or off.
- **INPUT**: Selects video input sources (e.g., HDMI 1, AV, Component).

- **NUMBER BUTTONS (0-9, 100):** Directly enters channel numbers.
- **VOL (+/-):** Adjusts the volume level.
- **CH (▲/▼):** Changes channels up or down.
- **MUTE:** Mutes or unmutes the television audio.
- **RECALL:** Switches between the current and previously viewed channel.
- **INFO:** Displays information about the current program or input.
- **MENU:** Opens the television's main menu.
- **NAVIGATION PAD (▲/▼/◀/▶, ENTER):** Navigates through menus and confirms selections.
- **EXIT:** Closes the current menu or on-screen display.
- **BACK:** Returns to the previous menu or screen.
- **MEDIA PLAYBACK CONTROLS (PLAY, PAUSE/STEP, STOP, REW, FF, SKIP):** Controls playback of connected media devices or TV features.

MAINTENANCE

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AA). Remove batteries if the remote will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is not working.	Dead or incorrectly installed batteries.	Check battery polarity. Replace with fresh AA batteries.
Remote is unresponsive.	Obstruction between remote and TV's IR sensor.	Ensure a clear line of sight to the television's infrared receiver.
Some buttons do not work.	Dirt or debris under the buttons.	Clean the remote control as described in the Maintenance section.
Remote does not control the TV.	Incompatible TV model.	Verify that your television model (Toshiba 40L5200U1) is listed as compatible. This remote is a replacement for CT-90325.

SPECIFICATIONS

- **Model Number:** RC-CT90325-DL169
- **Compatible Remote:** Toshiba CT-90325

- **Compatible TV Models:** Toshiba 40L5200U1 Television
- **Power Source:** 2 x AA Batteries (not included)
- **Connectivity Technology:** Infrared (IR)
- **Color:** Black
- **Manufacturer:** UpStart Components

WARRANTY AND SUPPORT

This product is an UpStart Components Brand replacement part. It is not an OEM (Original Equipment Manufacturer) product. All mentions of brand names or model descriptions are made strictly to illustrate compatibility. All brand names and logos are registered trademarks of their respective owners.

This product is not affiliated with any original manufacturers and is not covered under any warranties offered by the original manufacturers. Any warranties for this product are offered solely by UpStart Components.

For support or warranty inquiries, please contact UpStart Components directly through their official channels. Refer to the product packaging or the seller's information for specific contact details.

© 2023 UpStart Components. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07MDLKB2H>

More documents and user manuals: <https://manuals.plus/>