

[Manuals.plus](#) /

› [PAWHITS](#) /

› PAWHITS Wireless Pro Controller for Nintendo Switch User Manual

PAWHITS WM8579-B

PAWHITS Wireless Pro Controller for Nintendo Switch User Manual

Model: WM8579-B

INTRODUCTION

This manual provides comprehensive instructions for the PAWHITS Wireless Pro Controller, designed for use with Nintendo Switch consoles. Please read this manual carefully before use to ensure proper setup and operation. No additional drivers are required for this controller.

Key features include:

- Wireless Bluetooth connectivity for a stable gaming experience.
- Ergonomic design for comfortable extended play sessions.
- Dual motor vibration for immersive feedback.
- Gyro axis function for enhanced motion control.
- Turbo function for improved gameplay.
- High-performance analog sticks for precise 360-degree control.
- Rechargeable battery providing up to 5 hours of playtime on a 2-3 hour charge.



Used for 5 hrs
after full charged



Vibration function



Gyro axis function

Image: PAWHITS Wireless Pro Controller highlighting its key features: 5 hours of battery life, vibration function, and gyro axis function.

SETUP INSTRUCTIONS

A. Wireless Connection to Nintendo Switch Console (First Time)

1. From the main interface of your Nintendo Switch console, navigate to **"Controllers"** → **"Change Grip/Order"**. This will open the pairing mode interface.
2. On the PAWHITS controller, press and hold the **"Y + HOME"** combination buttons for 5 seconds to power on the controller and enter pairing mode.
3. The four LED indicator lights located below the **"Home"** button will begin to flash rapidly and circularly. Once one of the four indicator lights remains solid, the controller is successfully paired with the console.
4. Press the **"B"** button on the controller to return to the main menu interface.

B. Reconnecting the Controller Wirelessly

- To reconnect the controller after initial pairing, simply press the **"Home"** button for 2 seconds to power it on. The controller will automatically connect with the console.

C. Waking Up the Controller

- If the controller is in standby mode, press the **"Home"** button to wake it up. The controller and console will automatically reconnect.

D. Wired Connection to Nintendo Switch Console

1. Connect the PAWHITS controller to your Nintendo Switch console using a USB cable. The four LED indicators on the controller will flash.
2. On the console's main menu, go to **"System Settings" → "Controllers and Sensors"**.
3. Enable **"Pro Controller Wired Communication"**.
4. Once wired communication is enabled, LED 1 on the controller will light up, indicating a successful wired connection.



Wireless Connection to Nintendo Switch Console:

- 1) Turn on the Nintendo Switch Console, Select **"Controllers – Change Grip/Order"**;
- 2) Hold on **"HOME + Y"** Buttons for 5s;
- 3) 4 LEDs under the HOME button start blinking quickly and circularly in pairing mode;
- 4) When LEDs is solid bright, pair up finished. Press **"B"** to return to the main menu interface.

Image: Front view of the PAWHITS Wireless Pro Controller, showing the layout of buttons including HOME, Turbo, Select, Start, Screenshot, L1/L2, R1/R2, Left Stick, D-Pad, Right Stick, A/B/X/Y buttons, and the 4 LED indicators.

OPERATING THE CONTROLLER

The PAWHITS Wireless Pro Controller features a standard layout for intuitive gameplay. Refer to the image in the Setup section for button identification.

- **Analog Sticks:** Use the Left and Right Analog Sticks for precise 360-degree movement and camera control in games.
- **D-Pad:** The directional pad provides traditional directional input.
- **Action Buttons (A, B, X, Y):** These buttons are used for in-game actions as defined by the specific game.
- **Shoulder Buttons (L1, L2, R1, R2):** Located on the top of the controller, these are typically used for various in-game functions like aiming, shooting, or menu navigation.
- **HOME Button:** Press to return to the Nintendo Switch Home menu. Hold for 2 seconds to power on/off the controller.
- **Screenshot Button:** Press to capture screenshots during gameplay.
- **Turbo Function:** This controller supports a Turbo function. Consult your game's instructions or the controller's specific documentation (if available) for how to activate and utilize this feature for rapid button presses.
- **Vibration Function:** The dual motor vibration provides tactile feedback during gameplay, enhancing immersion.
- **Gyro Axis Function:** The built-in gyro axis allows for motion control in compatible games, offering an additional layer of interaction.

MAINTENANCE AND CHARGING

Charging the Controller

The controller is equipped with a rechargeable Lithium-ion battery. To charge:

1. Connect the provided USB charging cable to the charging port on the controller (located on the front edge).
2. Connect the other end of the USB cable to a power source (e.g., Nintendo Switch dock, USB wall adapter, or computer USB port).
3. The LED indicators will show the charging status. Once fully charged, the controller provides approximately 5 hours of gameplay. A full charge typically takes 2-3 hours.



Image: Bottom view of the PAWHITS Wireless Pro Controller, highlighting the USB-C charging port located between the L2 and R2 buttons.

General Care

- Keep the controller dry and away from moisture.
- Avoid exposing the controller to extreme temperatures.
- Clean the controller with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store the controller in a safe place when not in use to prevent damage.

TROUBLESHOOTING

Controller not connecting wirelessly:

- Ensure the controller is fully charged.
- Verify that the Nintendo Switch console is in pairing mode ("**Controllers**" → "**Change Grip/Order**").
- Make sure you are pressing and holding "**Y + HOME**" for 5 seconds on the controller to enter pairing mode.
- If you encounter an error during connection, you may need to update the controller's firmware. Please contact PAWHITS customer support for firmware update instructions.
- Try restarting both the Nintendo Switch console and the controller.

Controller not responding or buttons are unresponsive:

- Check the battery level and charge the controller if necessary.
- Ensure the controller is within range of the Nintendo Switch console.
- Reconnect the controller to the console.
- If using a wired connection, ensure "**Pro Controller Wired Communication**" is enabled in the console's settings.

Vibration or Gyro Axis not working:

- Ensure the game you are playing supports these features.
- Check the Nintendo Switch system settings and in-game settings to ensure vibration and motion controls are enabled.

SPECIFICATIONS

Brand:	PAWHITS
Model:	WM8579-B
Product Dimensions:	15.5 x 10.6 x 6 cm
Item Weight:	290 grams
Battery:	1 Lithium-ion battery required (included)
Battery Cell Composition:	Lithium Polymer
Connectivity:	Bluetooth
Number of Buttons:	16
Platform:	Nintendo Switch Console



Image: Back view of the PAWHITS Wireless Pro Controller, displaying a label with technical specifications such as working voltage, current, and input.

WARRANTY INFORMATION

The product comes with a 30-day period for customer support regarding any issues. Please contact the seller or manufacturer directly for warranty claims or support within this period.

CUSTOMER SUPPORT

For any questions, technical assistance, or firmware updates, please contact PAWHITS customer support. Refer to your purchase documentation or the retailer's website for specific contact details.