



[Manuals.plus](#) /

> [Outsunny](#) /

> Outsunny Universal Hammock Stand (Model 84A-083) Instruction Manual

Outsunny 84A-083

Outsunny Universal Hammock Stand Instruction Manual

Model: 84A-083

INTRODUCTION

This manual provides comprehensive instructions for the assembly, safe operation, and proper maintenance of your Outsunny Universal Hammock Stand. Please read this manual thoroughly before assembly and use to ensure correct setup and to maximize the lifespan of your product. Keep this manual for future reference.

SAFETY INFORMATION

WARNING: Maximum weight capacity 264 lbs. Securely anchor hammock to stable supports. Do not use without a hammock with spreader bars. Keep away from children. Failure to follow these instructions may result in serious injury or property damage.

- Ensure all connections are tight and secure before each use.
- Do not exceed the maximum weight capacity of 264 lbs.
- Place the hammock stand on a flat, stable, and level surface.
- Keep hands and feet clear of moving parts during assembly and adjustment.
- Regularly inspect the stand for any signs of wear, damage, or loose components.

PACKAGE CONTENTS

Before beginning assembly, ensure all parts listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Main Frame Components (various steel tubes)
- Connection Hardware (screws, nuts, washers)
- Adjustment Knobs/Levers
- Assembly Tools (basic wrench, hex key)
- Instruction Manual

SAFE AND STURDY



Figure 1: Exploded view of hammock stand components.

SETUP AND ASSEMBLY

The Outsunny Universal Hammock Stand is designed for quick and easy assembly. Follow these steps carefully:

- 1. Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify all parts are present against the package contents list.
- 2. Assemble Base Sections:** Connect the horizontal base bars using the provided hardware. Ensure all screws are finger-tightened initially.
- 3. Attach Upright Poles:** Secure the two upright support poles to the base sections. The triangular design at the base of the uprights increases stability.
- 4. Connect Hammock Hooks:** Attach the hammock hanging hooks to the top of the upright poles. Ensure they are firmly seated.
- 5. Adjust Length:** The stand features an adjustable central bar. Loosen the adjustment knobs, slide the sections to your desired length (120" to 150"), and then securely tighten the knobs. This allows accommodation for various hammock sizes.
- 6. Final Tightening:** Once the stand is fully assembled and adjusted to the desired length, go back and securely tighten all screws and connections using the provided tools. Do not overtighten.



Figure 2: Visual guide for easy assembly.

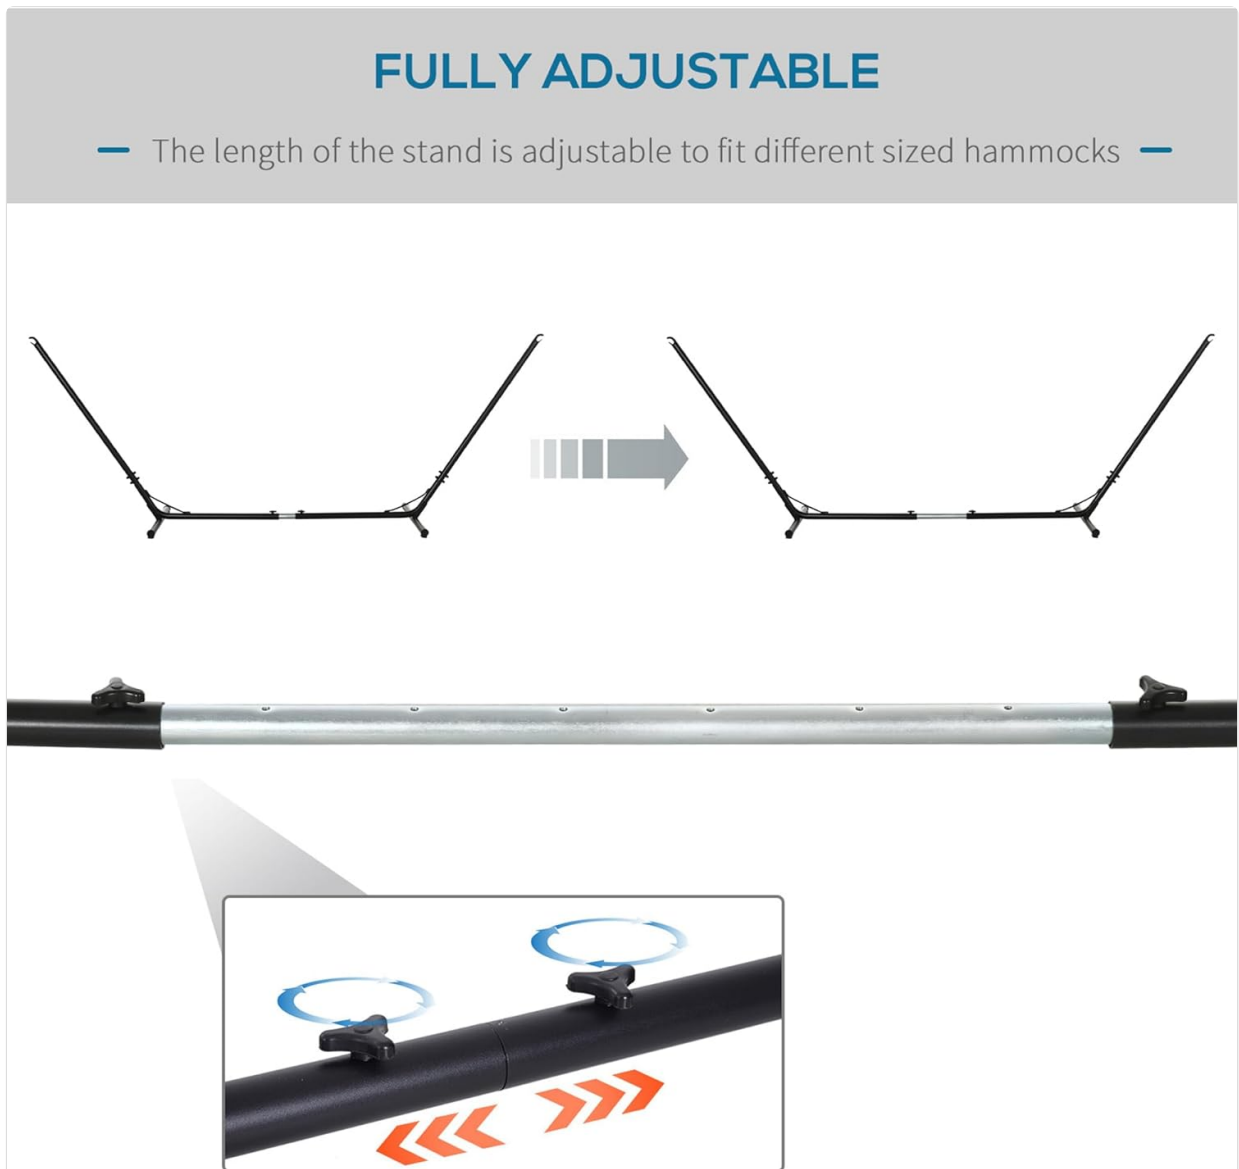


Figure 3: Detail of the adjustable length feature.

OPERATING INSTRUCTIONS

This hammock stand is designed for use with various hammocks, providing a stable and portable solution for relaxation.

- **Hammock Compatibility:** This stand is compatible with hammocks requiring a length between 120 inches and 150 inches. It is designed for hammocks with spreader bars.
- **Attaching Hammock:** Carefully attach your hammock to the hooks on the upright poles. Ensure the hammock is securely fastened and evenly distributed.

- **Weight Distribution:** When using the hammock, distribute your weight evenly. Avoid sudden movements or excessive swinging that could destabilize the stand.
- **Placement:** The stand can be used indoors or outdoors. For outdoor use, consider placing it on a stable, level surface in your courtyard, patio, or garden.

Enjoy your hammock anywhere, no trees needed!



Note: This product is the hammock frame only

Figure 4: Hammock stand in use by a pool.

MAINTENANCE

Proper maintenance will extend the life of your hammock stand.

- **Cleaning:** Wipe down the metal frame with a damp cloth and mild soap as needed. Avoid abrasive cleaners that could damage the finish.
- **Inspection:** Periodically check all bolts, screws, and connections to ensure they remain tight. Re-tighten if necessary. Inspect the frame for any signs of rust, cracks, or structural damage.
- **Storage:** If storing the stand for extended periods, especially during harsh weather, disassemble it and store it in a dry, protected area to prevent rust and wear.

TROUBLESHOOTING

If you encounter issues with your hammock stand, refer to the following common solutions:

- **Stand feels wobbly:** Ensure all bolts and connection points are fully tightened. Verify the stand is placed on a completely flat and level surface.
- **Difficulty adjusting length:** Loosen the adjustment knobs completely before attempting to slide the frame sections. Clean any debris from the sliding mechanism if it feels stiff.
- **Rust appearing:** The stand is weather-resistant, but prolonged exposure to moisture can cause rust. Clean affected areas with a wire brush and apply rust-inhibiting paint if necessary. Store indoors during off-season.
- **Hammock not fitting:** Double-check the length of your hammock against the stand's adjustable range (120" to 150"). Ensure your hammock is designed for use with a stand and has appropriate attachment points.

SPECIFICATIONS

Feature	Detail
Model Number	84A-083
Material	Powder-Coated Steel
Color	Black
Adjustable Length	120" - 150" (304.8 cm - 381 cm)
Product Dimensions (Max)	152.75" L x 43" W (388 cm L x 109.2 cm W)
Maximum Weight Capacity	264 lbs (120 kg)
Item Weight	34 lbs (15.4 kg)
Max Hammock Length (with rope)	130" (330.2 cm)
Max Hammock Bed Size	80" L x 59" W (203.2 cm L x 149.9 cm W)



Figure 5: Dimensions and weight capacity.

WARRANTY AND SUPPORT

For warranty information, replacement parts, or technical support, please contact Outsunny customer service. Refer to your purchase documentation for specific warranty terms and contact details.

You can typically find support contact information on the manufacturer's website or through the retailer where the product was purchased.