

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [TOUCHBeauty](#) /
- › [TOUCHBeauty Portable Nail Dryer with Fan & LED Light \(Model AG-0889\) User Manual](#)

TOUCHBeauty AG-0889

TOUCHBeauty Portable Nail Dryer with Fan & LED Light (Model AG-0889) User Manual

Model: AG-0889

INTRODUCTION

Thank you for choosing the TOUCHBeauty Portable Nail Dryer with Fan & LED Light. This device is designed to provide a convenient and efficient way to dry regular nail polishes. Its compact size and battery operation make it ideal for home use or travel. Please read this manual carefully before use to ensure proper operation and maintenance.



Image: Front view of the TOUCHBeauty Portable Nail Dryer, showing its compact, rounded design with a purple activation button on top and an opening for fingers.

SETUP

- 1. Unpack the Device:** Carefully remove the nail dryer from its packaging.
- 2. Battery Installation:**
 - Locate the battery compartment on the underside of the device.
 - Open the battery compartment cover.
 - Insert 3 AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
 - Close the battery compartment cover securely.



Image: Underside of the nail dryer showing the open battery compartment, ready for AAA battery insertion.

OPERATING INSTRUCTIONS

1. Ensure batteries are correctly installed.
2. Apply your regular nail polish to your nails. This device is designed for regular nail polish, not gel polish.
3. Place your fingers or toes into the drying chamber. The device is compact and may accommodate up to four fingers at a time.
4. Gently press down on the activation panel (the purple button on top) with your hand or foot. The fan and LED lights will activate automatically.
5. Keep your nails under the fan and lights until the polish is dry to the touch. Drying time may vary depending on the thickness of the polish and the number of coats.
6. Release pressure from the activation panel to turn off the device.
7. Repeat for all nails as needed.



Image: A hand with painted nails positioned inside the nail dryer, demonstrating its use.

MAINTENANCE

- **Cleaning:** Wipe the exterior of the device with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.
- **Storage:** Store the nail dryer in a cool, dry place away from direct sunlight when not in use. If storing for extended periods, remove the batteries to prevent leakage.

- **Battery Replacement:** Replace batteries when the fan speed decreases or the LED lights dim.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	<ol style="list-style-type: none">1. Batteries are dead or incorrectly installed.2. Activation panel not pressed firmly.	<ol style="list-style-type: none">1. Check battery polarity and replace with fresh AAA batteries if needed.2. Ensure firm and consistent pressure on the activation panel.
Nail polish takes too long to dry.	<ol style="list-style-type: none">1. Too many coats of polish or thick application.2. Weak batteries.3. Device not suitable for gel polish.	<ol style="list-style-type: none">1. Apply thinner coats and allow adequate time between applications.2. Replace batteries.3. Confirm you are using regular nail polish. This device is not for gel polish.

SPECIFICATIONS

- **Model Number:** AG-0889
- **Brand:** TOUCHBeauty
- **Product Dimensions:** 4.65 x 4.65 x 2.83 inches
- **Weight:** 6 ounces
- **Power Source:** Battery Powered (3 AAA batteries required)
- **Material:** Plastic
- **Features:** Fan and LED Light
- **Manufacturer:** TOUCHBeauty
- **First Available Date:** August 27, 2019

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact TOUCHBeauty customer service directly. Keep your purchase receipt for any warranty claims.

Manufacturer: TOUCHBeauty

Website: [Visit the TOUCHBeauty Store on Amazon](#)

