

Ninja CE200

Ninja CE200 Coffee Brewer Instruction Manual

Model: CE200

INTRODUCTION

Welcome to the Ninja CE200 Coffee Brewer user manual. This guide provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new 12-cup programmable coffee maker. The Ninja CE200 features Custom Brew Technology, ensuring your coffee is consistently hot, flavorful, and never bitter. It offers options for brewing from a small batch to a full carafe, with Classic or Rich strength settings. The removable water reservoir simplifies filling, and the brew basket lid prevents grounds from entering the reservoir. Ninja's Thermal Flavor Extraction Technology is designed to unlock the full flavor potential of your ground coffee.



Figure 1: The Ninja CE200 Coffee Brewer. This image displays the Ninja CE200 Coffee Brewer from the front. It features a sleek black design with a stainless steel accent around the brew basket. The clear water reservoir with measurement markings is visible on the right side, and the control panel with various buttons is below it. A glass carafe sits on the warming plate.

IMPORTANT SAFEGUARDS

Please read all instructions before using your Ninja CE200 Coffee Brewer to reduce the risk of fire, electric shock, injury, or damage to the appliance.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting the appliance.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot liquids.
- Always ensure the carafe is properly placed on the warming plate before brewing.
- Do not open the brew basket lid during the brewing cycle.

GETTING STARTED: SETUP

Before first use, follow these steps to prepare your coffee brewer:

1. **Unpack:** Carefully remove all packaging materials and promotional labels from your coffee brewer.
2. **Clean Components:** Wash the glass carafe, brew basket, and removable water reservoir in warm, soapy water. Rinse thoroughly and dry all parts.
3. **Position:** Place the coffee brewer on a clean, dry, and level surface.
4. **First Clean Cycle:**
 - Fill the water reservoir to the MAX fill line with fresh water.
 - Place an empty paper filter (or permanent filter, if using) into the brew basket.
 - Place the empty glass carafe on the warming plate.
 - Press the **CLEAN** button. The clean cycle will run for approximately 10 minutes.
 - Once complete, discard the water from the carafe and the filter. Your brewer is now ready for use.

OPERATING INSTRUCTIONS

Brewing Coffee

1. **Fill Water Reservoir:** Remove the water reservoir and fill it with fresh, cold water up to the desired brew size marking. Replace the reservoir securely.
2. **Add Coffee Grounds:** Insert a paper filter (cone-shaped, #4 size) into the brew basket, or use a permanent filter. Add your desired amount of ground coffee. Refer to the coffee scoop recommendations for best results.
3. **Place Carafe:** Ensure the glass carafe is empty and properly seated on the warming plate.
4. **Select Brew Size:** Use the **BREW SIZE** button to select your desired number of cups (e.g., Small Batch, Full Carafe).
5. **Select Brew Style:** Choose your preferred brew style using the **BREW STYLE** button:
 - **CLASSIC:** For a smooth, balanced coffee.
 - **RICH:** For a more intense, robust coffee flavor.
6. **Start Brewing:** Press the **START BREW** button. The brewing indicator light will illuminate.
7. **Enjoy:** Once brewing is complete, the brewer will beep, and the warming plate will activate to keep your coffee hot.

Programming Delay Brew

You can set your Ninja CE200 to automatically brew coffee at a later time.

1. Prepare your brewer for brewing as described in steps 1-3 above (water, coffee grounds, carafe).
2. Press the **DELAY BREW** button. The DELAY BREW light will flash, and the clock will display "12:00 AM" or the last set delay time.
3. Use the **H** (Hour) and **M** (Minute) buttons to set your desired brew start time.
4. Select your desired brew size and brew style.
5. Press the **DELAY BREW** button again to confirm. The DELAY BREW light will illuminate solid, indicating the delay brew is set.

Setting the Clock

1. Plug in the coffee brewer. The clock will flash "12:00 AM".
2. Use the **H** (Hour) and **M** (Minute) buttons to set the current time. The AM/PM indicator will change automatically.
3. The clock will automatically set after 5 seconds of inactivity, or you can press any other button to confirm.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your Ninja CE200 Coffee Brewer.

Daily Cleaning

- **Carafe and Brew Basket:** After each use, wash the glass carafe and brew basket in warm, soapy water or place them on the top rack of your dishwasher.
- **Water Reservoir:** The removable water reservoir can also be washed in warm, soapy water or placed on the top rack of your dishwasher.
- **Exterior:** Wipe the exterior of the brewer with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.

Descaling (CLEAN Cycle)

Over time, hard water can cause mineral buildup (scale) in your brewer, affecting performance and coffee

taste. The **CLEAN** indicator light will illuminate when descaling is recommended.

1. **Prepare Descaling Solution:** Pour 16 oz. of white vinegar into the water reservoir, then fill the remainder of the reservoir with water up to the MAX fill line.
2. **Start Clean Cycle:** Place the empty glass carafe on the warming plate. Press the **CLEAN** button. The clean cycle will run for approximately 10 minutes.
3. **Rinse Cycles:** After the clean cycle is complete, discard the solution from the carafe. Fill the water reservoir with fresh water to the MAX fill line and run a full carafe brew cycle (without coffee grounds) to rinse the system. Repeat this rinse cycle at least once more.
4. The **CLEAN** light will turn off once the descaling process is successfully completed.

TROUBLESHOOTING GUIDE

Refer to this guide for common issues and their solutions.

Problem	Possible Cause	Solution
Coffee is not brewing.	No water in reservoir; brewer not plugged in; brew cycle not initiated.	Fill reservoir with water; ensure brewer is plugged into a working outlet; press START BREW button.
Coffee tastes weak.	Insufficient coffee grounds; incorrect brew style selected; old coffee grounds.	Increase amount of coffee grounds; select RICH brew style; use fresh coffee grounds.
Coffee overflows from brew basket.	Too many coffee grounds; filter not properly seated; clogged brew basket.	Reduce coffee grounds; ensure filter is correctly placed; clean brew basket and filter holder.
"CLEAN" light is illuminated.	Mineral buildup (scale) in the system.	Perform a descaling cycle as described in the "Cleaning and Maintenance" section.
Water leaks from the brewer.	Water reservoir not properly seated; carafe not correctly placed.	Ensure water reservoir is fully inserted; verify carafe is centered on the warming plate.

SPECIFICATIONS

Brand: Ninja
Model Number: CE200
Color: Black
Product Dimensions: 7.48"D x 9.84"W x 13.39"H
Item Weight: 6.38 pounds
Special Features: Programmable, Thermal Flavor Extraction Technology
Coffee Maker Type: Drip Coffee Machine
Coffee Input Type: Ground Coffee
Included Components: Glass Carafe
Operation Mode: Fully Automatic
Human Interface Input: Buttons
UPC: 622356554251

ASIN: B07MF77JF4

Date First Available: January 11, 2019

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Ninja website. You can also contact Ninja customer service directly for assistance with product registration, parts replacement, or any operational questions.

Online Support: www.ninjakitchen.com/support/

Contact Information: Refer to your product packaging or the Ninja website for the most current contact details.