

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Glacier Bay](#) /
- › [Glacier Bay Nottely Touchless Kitchen Faucet User Manual](#)

Glacier Bay HD67495-1008D2

Glacier Bay Nottely Touchless Single-Handle Pull-Down Sprayer Kitchen Faucet User Manual

MODEL: HD67495-1008D2

This manual provides essential information for the installation, operation, and maintenance of your Glacier Bay Nottely Touchless Kitchen Faucet. Please read thoroughly before beginning installation or use.

1. Product Overview

The Glacier Bay Nottely Touchless Single-Handle Pull-Down Sprayer Kitchen Faucet is designed for convenience and efficiency in your kitchen. It features an intuitive motion sensor for hands-free operation, a single handle for precise temperature control, and a pull-down sprayer with TurboSpray technology for enhanced cleaning power. The FastMount mounting system simplifies installation.



Image: The Glacier Bay Nottely Touchless Kitchen Faucet, showcasing its stainless steel finish, high-arc spout, single handle, and integrated motion sensor at the base.

2. Setup and Installation

This faucet utilizes the exclusive FastMount mounting system, designed to make installation quicker and easier. While detailed step-by-step instructions are provided in the full installation guide included with your product, here are key considerations:

- **Pre-Installation Check:** Ensure all components are present and undamaged. Verify your sink has the necessary hole configuration (4-hole count is typical for this model).

- **Power Source:** The touchless sensor requires 4 AA batteries (not included) for operation. Install these in the designated battery pack before final installation.
- **Water Supply:** Connect hot and cold water supply lines securely. Ensure no leaks are present after connection.
- **Mounting:** Position the faucet on the sink deck. The FastMount system allows for secure tightening from above the sink.



Image: The Glacier Bay Nottely Faucet seamlessly installed in a modern kitchen sink setting, demonstrating its high-arc design and integration with the countertop.

3. Operating Instructions

Your Glacier Bay Nottely faucet offers both touchless and manual operation for maximum flexibility.

- **Touchless Activation:** To activate the water flow hands-free, simply wave your hand in front of the sensor located at the base of the faucet. Wave again to stop the flow. The sensor detects motion within its range and

activates the water.

- **Manual Operation:** Use the single handle to manually control water flow and temperature. Push the handle up to turn on the water and down to turn it off. Move the handle left for hot water and right for cold water.
- **Pull-Down Sprayer:** The sprayer head can be pulled down from the spout for extended reach. It features two spray modes:
 - **Stream Mode:** For everyday tasks like filling pots.
 - **TurboSpray Mode:** Provides focused water columns with 30% more power than standard pull-down faucets, ideal for heavy-duty cleaning. Press the button on the sprayer head to switch between modes.



Image: Left: A close-up view of the faucet's base, highlighting the integrated motion sensor. Right: A detailed view of the pull-down sprayer head, showing the buttons for switching between stream and TurboSpray modes.

4. Maintenance

Proper maintenance ensures the longevity and optimal performance of your faucet.

- **Cleaning:** Clean the faucet regularly with a soft cloth and mild soap. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the stainless steel finish.
- **Sensor Maintenance:** Keep the sensor area clean and free from obstructions to ensure proper touchless operation.
- **Battery Replacement:** The touchless sensor is powered by 4 AA batteries. If the sensor becomes unresponsive or erratic, it may be time to replace the batteries. Refer to the full installation guide for instructions on accessing and replacing the battery pack.
- **Ceramic Disc Valve:** The faucet is equipped with a durable ceramic disc valve designed for drip-free

performance. No regular maintenance is typically required for the valve itself.

5. Troubleshooting

If you encounter issues with your faucet, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
No water flow or low water pressure.	Water supply valves are closed; clogged aerator; kinked supply lines.	Ensure water supply valves are fully open. Clean or replace the aerator. Check supply lines for kinks or obstructions.
Touchless sensor not responding.	Dead batteries; sensor obstructed or dirty; sensor malfunction.	Replace the 4 AA batteries. Clean the sensor window. If problem persists, contact customer support.
Faucet leaks from spout or handle.	Loose connections; damaged O-rings or ceramic disc valve.	Check and tighten all connections. If leaking continues, professional assistance or replacement parts may be needed.
Difficulty switching spray modes.	Mineral buildup in sprayer head; faulty diverter.	Clean the sprayer head nozzles. If problem persists, contact customer support.

For issues not listed here or if troubleshooting steps do not resolve the problem, please contact Glacier Bay customer support.

6. Specifications

Feature	Detail
Brand	Glacier Bay
Model Number	HD67495-1008D2
Recommended Uses	Kitchen
Mounting Type	Deck Mount
Finish Type	Stainless
Material	Stainless Steel
Color	Stainless Steel
Number of Handles	1

Feature	Detail
Included Components	Handle, Sprayer
Hole Count	4
Special Feature	Pull Down Sprayer
Handle Type	Sensor
Installation Type	Single Hole Deck Mount, Single Hole
Maximum Flow Rate	1.8 Gallons Per Minute
Item Weight	5.84 pounds
Product Dimensions	20 x 12 x 5 inches
Batteries Required	4 AA batteries (not included)

7. Warranty and Support

For specific warranty details regarding your Glacier Bay Nottely Touchless Kitchen Faucet, please refer to the warranty card included with your product or visit the official Glacier Bay website. Warranty terms typically cover manufacturing defects and material flaws for a specified period.

If you require technical assistance, have questions about installation, or need to order replacement parts, please contact Glacier Bay customer support. Contact information can usually be found on the product packaging or the manufacturer's official website.

Note: Always use genuine replacement parts to ensure proper function and to maintain your product's warranty.