

[Manuals.plus](#) /

- › [UpStart Components](#) /
- › 2 Pack Replacement for RCA 3-Device Universal Remote Control Palm Sized - Compatible with Changhong TV - Remote Code 0765

UpStart Components RC-RCR503BZ-2PK-DL13

Universal Remote Control User Manual

Model: RC-RCR503BZ-2PK-DL13

Brand: UpStart Components

PRODUCT OVERVIEW

This universal remote control is designed to replace your existing remote for up to three devices, offering a convenient and streamlined control experience. It is compatible with various brands, including Changhong TVs, and is pre-programmed for ease of use.



Image: Front view of the UpStart Components Universal Remote Control, displaying all buttons and their labels.

The remote features a palm-sized design for comfortable handling and intuitive button layout for common functions such as power, volume, channel, and playback controls.

SETUP AND INITIAL USE

This replacement remote control is designed for quick setup with no programming needed for most compatible devices. Simply install the batteries, and it should be ready to use.

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

Note: Batteries are not included with the remote control and must be purchased separately.

2. Device Compatibility and Code Search (If needed)

While this remote is often ready to use out of the box for many devices, if your device does not respond, you may need to perform a quick code search or manual code entry. Refer to the original device's manual for specific remote codes if available, or use the "CODE SEARCH" button on the remote.

- Press and hold the "CODE SEARCH" button until the indicator light turns on.
- Press the device button you wish to program (e.g., TV, SAT-CBL-DTC, DVD-VCR).
- Point the remote at your device and repeatedly press the "POWER" button until the device turns off.
- Press the "ENTER" button to save the code. The indicator light should turn off.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your universal remote control to effectively operate your devices.

Button Functions:

- **POWER:** Turns the selected device on or off.
- **TV / SAT-CBL-DTC / DVD-VCR:** Selects the device to be controlled. Press the corresponding button before operating that device.
- **VOL+ / VOL-:** Increases or decreases the volume.
- **CHAN+ / CHAN-:** Changes the channel up or down.
- **MUTE:** Mutes or unmutes the audio.
- **MENU:** Accesses the device's on-screen menu.
- **GO BACK:** Returns to the previous menu or channel.
- **SOURCE:** Cycles through input sources (e.g., HDMI 1, HDMI 2, AV).
- **Number Buttons (0-9):** Used for direct channel entry or menu navigation.
- **ENTER:** Confirms selections in menus or enters channel numbers.
- **REW / PLAY / FWD / REC / PAUSE II / STOP:** Controls playback functions for compatible devices like DVD players or VCRs.

- **SLEEP:** Activates the sleep timer function on compatible devices.

MAINTENANCE

Battery Replacement:

When the remote control's performance degrades or the indicator light does not illuminate, it is time to replace the batteries. Always replace all batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries.

Cleaning:

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding to device.	Batteries are dead or inserted incorrectly. Remote is not programmed for the device. Obstruction between remote and device.	Check and replace batteries; ensure correct polarity. Perform code search or manual code entry (see Setup section). Ensure a clear line of sight to the device's IR receiver.
Some buttons work, others don't.	Incorrect device mode selected. Specific button not supported by the device.	Press the correct device button (TV, SAT-CBL-DTC, DVD-VCR) before using functions. Not all universal remote functions are compatible with every device.
Indicator light does not turn on.	Batteries are dead or missing.	Install or replace batteries.

SPECIFICATIONS

- **Model Number:** RC-RCR503BZ-2PK-DL13
- **Brand:** UpStart Components
- **Compatible Devices:** Television, Satellite/Cable/DTC boxes, DVD/VCR players
- **Max Number of Supported Devices:** 3

- **Power Source:** 2 x AAA Batteries (not included)
- **Color:** Black
- **Special Feature:** Universal compatibility

WARRANTY AND SUPPORT

This product is an UpStart Components Brand replacement part. It is not an OEM (Original Equipment Manufacturer) product. All mentions of brand names or model descriptions are made strictly to illustrate compatibility.

All brand names and logos are registered trademarks of their respective owners. This product is not affiliated with any brands and is not covered under any warranties offered by the original manufacturers. Any warranties for this product are offered solely by UpStart Components.

For support or warranty inquiries, please contact UpStart Components directly through their official channels.