



[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components Universal Remote Control RC-RCR503BZ-DL468 User Manual

## UpStart Components RC-RCR503BZ-DL468

# UpStart Components Universal Remote Control RC-RCR503BZ-DL468 User Manual

Model: RC-RCR503BZ-DL468

## INTRODUCTION

---

This document provides instructions for the UpStart Components RC-RCR503BZ-DL468 universal remote control. This remote is designed as a replacement for certain RCA 3-Device universal remotes and is compatible with Venturer Digital TV Converter Boxes, utilizing remote code 2454. It offers a straightforward solution for controlling your television and compatible devices.



2. Slide the cover downwards or press the latch and lift to open.
3. Insert two new AAA batteries, matching the positive (+) and negative (-) terminals as indicated inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

## 2. Initial Setup and Device Pairing

This remote is designed for quick replacement and often requires no programming for its primary compatible devices, such as the Venturer Digital TV Converter Box (using code 2454). Simply install batteries and test functionality.

For other devices or if the remote does not function immediately, you may need to use the Code Search feature.

### Using Code Search (Optional)

1. Turn on the device you wish to control (e.g., TV, SAT/CBL/DTC, DVD/VCR).
2. Press and hold the **CODE SEARCH** button on the remote until the indicator light turns on.
3. While holding **CODE SEARCH**, press the device button you want to program (e.g., **TV**, **SAT-CBL-DTC DVD-VCR**). The indicator light will blink once and then remain on.
4. Release the **CODE SEARCH** button. The indicator light should remain on.
5. Point the remote at the device and repeatedly press the **POWER** button (or **CHAN+** for some devices) until the device turns off. Pressing **POWER** sends a different code each time.
6. Once the device turns off, press the **ENTER** button to save the code. The indicator light will turn off.
7. Test other functions like **VOLUME** and **CHANNEL** to ensure proper operation. If not, repeat the process.

## OPERATING

---

Familiarize yourself with the buttons on your UpStart Components universal remote control:



Figure 2: Detailed view of the remote control buttons.

- **POWER:** Turns the selected device on or off.
- **CODE SEARCH:** Used for programming the remote to control other devices.
- **TV / SAT-CBL-DTC DVD-VCR:** Device selection buttons. Press to select the device you wish to

control.

- **SLEEP:** Activates the sleep timer function on compatible devices.
- **MENU:** Accesses the menu system of the selected device.
- **VOL+ / VOL-:** Increases or decreases the volume.
- **CHAN+ / CHAN-:** Changes channels up or down.
- **MUTE:** Mutes or unmutes the audio.
- **GO BACK:** Returns to the previous channel or menu option.
- **Number Pad (0-9):** Used for direct channel entry or menu navigation.
- **ENTER:** Confirms selections or enters channel numbers.
- **SOURCE:** Cycles through input sources (e.g., HDMI 1, AV, Component).
- **REW / PLAY / FWD / REC / PAUSE II / STOP:** Playback controls for compatible DVD/VCR or DVR devices.

## MAINTENANCE

---

### Battery Replacement

Replace batteries when the remote's performance degrades or the indicator light fails to illuminate. Always replace both batteries simultaneously with new AAA batteries.

### Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the remote's surface or internal components.

### Storage

If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

## TROUBLESHOOTING GUIDE

---

- **Remote not responding:**
  - Check battery orientation and ensure they are fresh. Replace if necessary.
  - Ensure there is a clear line of sight between the remote and the device. Remove any obstructions.
  - Verify that the correct device button (e.g., **TV**, **SAT-CBL-DTC DVD-VCR**) has been selected.
- **Device not responding to commands after setup:**
  - Repeat the Code Search programming steps carefully. The correct code might be further down the list.
  - Ensure the remote is pointed directly at the device's IR receiver.
- **Some buttons work, but others do not:**
  - This may indicate an incomplete or incorrect code. Try reprogramming the device using the Code Search feature.
  - Some universal remotes may not support all functions of every device. Refer to your device's original manual for specific IR command compatibility.
- **Remote does not control my specific TV/device:**
  - This remote is primarily designed as a replacement for RCA 3-Device remotes and is specifically

compatible with Venturer Digital TV Converter Boxes (code 2454). While it has universal capabilities, full compatibility with all brands and models cannot be guaranteed. If the Code Search feature does not find a working code, your device may not be supported.

## PRODUCT SPECIFICATIONS

---

<b>Brand</b>	UpStart Components
<b>Model Number</b>	RC-RCR503BZ-DL468
<b>Special Feature</b>	Universal
<b>Color</b>	Black
<b>Max Number of Supported Devices</b>	1 (Designed as a replacement for a 3-device universal remote, but controls one device at a time)
<b>Compatible Devices</b>	Television, Venturer Digital TV Converter Box
<b>Connectivity Technology</b>	Infrared
<b>Controller Type</b>	Button Control
<b>Number of Batteries Required</b>	2 AAA
<b>UPC</b>	754672841996



# UpStart Components



Figure 3: Angled view of the remote control.

## WARRANTY AND CUSTOMER SUPPORT

This UpStart Components product is a replacement part and is not affiliated with original manufacturers. Any warranties for this product are offered solely by UpStart Components.

For warranty claims, technical assistance, or further support, please contact UpStart Components directly through their official channels.