

[Manuals.plus](#) /

> [BAKAJI](#) /

> Bakaji 3-Compartment Laundry Hamper with Wheels and Handles, Oxford Fabric, Foldable, 63x35x57 cm

BAKAJI 8054317259011

Bakaji 3-Compartment Laundry Hamper Instruction Manual

Model: 8054317259011 | Brand: BAKAJI

INTRODUCTION

This Bakaji 3-Compartment Laundry Hamper is designed to simplify your laundry sorting process. Made from durable Oxford fabric, it features three distinct sections for separating clothes, convenient wheels for easy transport, and sturdy rope handles. Its foldable design allows for compact storage when not in use. Please read this manual carefully before assembly and use to ensure proper function and longevity of your product.



Image: Bakaji 3-Compartment Laundry Hamper, Cream

SAFETY INFORMATION

- Keep the product out of reach of children and pets to prevent accidental injury or misuse.
- Do not overload the hamper beyond its capacity to avoid damage to the fabric or frame.
- Avoid placing sharp objects inside the hamper that could puncture or tear the Oxford fabric.
- Ensure the hamper is placed on a stable, level surface to prevent tipping.
- If equipped with wheel locks, engage them when the hamper is stationary to prevent unintended movement.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- 1 x Bakaji 3-Compartment Laundry Hamper (Foldable Oxford fabric body with lid and rope handles)
- 4 x Wheels
- Internal support rods (quantity may vary, typically 4-6 depending on design)

SETUP AND ASSEMBLY

Follow these steps to assemble your laundry hamper:

1. **Unfold the Hamper Body:** Carefully unfold the main Oxford fabric body of the laundry hamper until it forms its rectangular shape.
2. **Insert Support Rods:** Locate the internal sleeves or pockets along the corners and bottom edges of the hamper. Insert the provided support rods into these sleeves to give the hamper its rigid structure. Ensure they are fully seated.
3. **Attach Wheels:** Turn the hamper upside down. Firmly push each of the four wheels into the designated sockets on the base of the hamper. Apply gentle pressure until you hear a click, indicating the wheel is securely in place.
4. **Position the Lid:** Place the lid on top of the hamper, ensuring it aligns correctly with the hamper's opening. The lid helps contain odors and keeps laundry out of sight.



Image: Close-up of Lid Handle



Image: Close-up of Rope Handle

OPERATING INSTRUCTIONS

Using your Bakaji 3-Compartment Laundry Hamper is straightforward:

- **Sorting Laundry:** Utilize the three clearly marked compartments (e.g., "LIGHT", "DARK", "COLOR") to pre-sort your dirty laundry as you place it into the hamper. This saves time on laundry day.
- **Moving the Hamper:** When it's time to do laundry, simply push or pull the hamper using its integrated wheels. The sturdy rope handles provide an additional option for lifting or maneuvering the hamper, especially over thresholds or stairs.
- **Folding for Storage:** If the hamper is not needed for an extended period, you can fold it for compact storage. First, remove any internal support rods. Then, collapse the fabric body flat. This allows it to be stored in small spaces.



Image: Hamper in use, showing sorted laundry

MAINTENANCE

Proper care will extend the life of your laundry hamper:

- **Cleaning the Fabric:** The Oxford fabric is not suitable for machine washing. To clean, wipe the exterior and interior surfaces with a damp cloth and a small amount of mild soap. Avoid harsh chemicals or abrasive cleaners.
- **Drying:** After cleaning, allow the hamper to air dry completely in a well-ventilated area before folding or storing. This prevents mildew and unpleasant odors.
- **Wheel Maintenance:** Periodically check the wheels for any accumulated lint, hair, or debris. Clean them as necessary to ensure smooth rolling.
- **Storage:** When not in use, store the hamper in a dry place away from direct sunlight to prevent material degradation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Hamper does not stand upright or is wobbly.	Support rods not fully inserted or missing.	Ensure all internal support rods are correctly inserted into their sleeves and fully extended.
Wheels are stiff or not rolling smoothly.	Debris (lint, hair) caught in wheels; wheels not properly attached.	Clean any debris from the wheel mechanisms. Verify that all wheels are securely attached to the base.
Unpleasant odor from the hamper.	Accumulated dirt or damp laundry.	Clean the hamper thoroughly as per the Maintenance section. Ensure laundry placed inside is dry to prevent mildew.

SPECIFICATIONS

Model Number: 8054317259011

Brand: BAKAJI

Material: High-quality Oxford Fabric

Color: Cream

Dimensions (L x W x H): 63 cm x 35 cm x 57 cm (approximately 24.8 x 13.8 x 22.4 inches)

Weight: 1.8 kg (approximately 3.97 lbs)

Features: 3 Compartments, Foldable Design, 4 Wheels, Rope Handles, Lid



Image: Product Dimensions

WARRANTY AND SUPPORT

For specific warranty information regarding your Bakaji 3-Compartment Laundry Hamper, please refer to the documentation provided at the time of purchase or contact the retailer directly. For customer support, inquiries, or assistance with your product, please reach out to Bakaji customer service through the platform or store where you purchased this item.