

[Manuals.plus](#) /

› [Memorex](#) /

› Memorex MC0952 Projection Clock Radio User Manual

Memorex MC0952

Memorex MC0952 Projection Clock Radio User Manual

Model: MC0952

INTRODUCTION

Thank you for purchasing the Memorex MC0952 Projection Clock Radio. This manual provides detailed instructions for setting up, operating, and maintaining your new device. Please read this manual thoroughly before use to ensure proper operation and to maximize the lifespan of your product.

PRODUCT OVERVIEW

Key Features

- Large 1.8-inch LED display with dimmer function (3 levels: high, medium, low).
- AM/FM radio with presets.
- 180-degree projector lens to project time onto a wall or ceiling.
- Alarm and Snooze functions.

Components

Familiarize yourself with the main components of your Memorex MC0952:



Figure 1: Front view of the Memorex MC0952 showing the large LED display and the projected time feature.



Figure 2: Top panel with control buttons and the rotatable projection lens.

The device features a prominent 1.8-inch LED display on the front, showing the current time. On the top, you will find various control buttons for setting time, alarms, radio functions, and adjusting the projection. The projector lens is located on the top-rear, designed to rotate 180 degrees for flexible time projection.

SETUP

Power Connection

1. Unpack the Memorex MC0952 and its power cord.
2. Insert the power cord into the DC input jack on the back of the unit.
3. Plug the other end of the power cord into a standard AC wall outlet (120V, 60Hz).
4. The LED display will illuminate, indicating the unit is powered on.



Figure 3: Rear view showing the power cord connection.

Battery Backup (Optional)

While the unit operates on AC power, it may have a battery backup compartment (batteries not included) to maintain time settings during power outages. Refer to the battery compartment cover on the bottom of the unit for battery type and installation instructions.

OPERATING INSTRUCTIONS

Setting the Time

1. Press and hold the **TIME SET** button (refer to Figure 2 for button location). The hour digits will begin to flash.
2. Press the **HOUR** button repeatedly to adjust the hour. Note the AM/PM indicator.
3. Press the **MINUTE** button repeatedly to adjust the minute.
4. Press the **TIME SET** button again to confirm and exit time setting mode.

Using the Dimmer Function

The 1.8-inch LED display features a 3-level dimmer. Press the **DIMMER** button (usually located near the time display) to cycle through High, Medium, and Low brightness settings.

Radio Operation (AM/FM)

1. Press the **RADIO ON/OFF** button to turn the radio on.
2. Press the **BAND** button to select between AM and FM bands.
3. Use the **TUNE +** or **TUNE -** buttons to manually tune to a desired station. Press and hold to auto-scan for the next available station.
4. To set a preset station:
 - a. Tune to the desired station.
 - b. Press the **PRESET** button. The preset number will flash.
 - c. Use the **PRESET +** or **PRESET -** buttons to select the desired preset number.
 - d. Press **PRESET** again to save.
5. Adjust volume using the **VOLUME +** or **VOLUME -** buttons.

Setting and Using the Alarm

1. Press and hold the **ALARM SET** button. The alarm hour digits will flash.
2. Use the **HOURL** and **MINUTE** buttons to set the desired alarm time.
3. Press **ALARM SET** again. The alarm source (Buzzer or Radio) will flash.
4. Use the **ALARM MODE** button to select your desired alarm source.
5. Press **ALARM SET** to confirm.
6. When the alarm sounds, press the **SNOOZE/SLEEP** button to temporarily silence it for a few minutes.
7. To turn off the alarm completely, press the **ALARM OFF** button.

Using the Projection Feature

The Memorex MC0952 can project the time onto a wall or ceiling.

1. Locate the projector lens on the top-rear of the unit (refer to Figure 2).
2. Rotate the lens 180 degrees to direct the projected time to your desired surface.
3. Adjust the focus wheel on the projector lens until the projected time is clear and sharp.
4. To turn the projection on or off, locate the **PROJECTION ON/OFF** switch or button, typically near the lens.



Figure 4: Side view illustrating the placement of control buttons.

MAINTENANCE

Cleaning

- Always unplug the unit from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- For stubborn marks, slightly dampen the cloth with water. Do not use abrasive cleaners, waxes, or solvents.
- Avoid getting moisture into any openings.

Storage

If you plan to store the unit for an extended period, unplug it from the power source and remove any backup batteries. Store it in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Power cord not properly connected.	Ensure the power cord is securely plugged into the unit and the wall outlet. Try a different outlet.
Display is too dim or too bright.	Dimmer setting is incorrect.	Press the DIMMER button to cycle through brightness levels.
Radio reception is poor.	Antenna not extended or positioned correctly. Interference.	Extend the FM wire antenna fully. For AM, rotate the unit for best reception. Move unit away from other electronic devices.
Projected time is blurry.	Projection focus needs adjustment.	Rotate the focus wheel on the projector lens until the image is clear.
Alarm does not sound.	Alarm not set or turned off. Volume too low (for radio alarm).	Verify alarm time and ensure alarm is activated. Check alarm source (Buzzer/Radio). Increase radio volume if using radio alarm.

SPECIFICATIONS

Feature	Detail
Brand	Memorex
Model	MC0952
Display Type	Digital LED (1.8-inch)
Power Source	Corded Electric
Special Features	Auto-dimmable, Alarm, Snooze, Projection (180-degree lens)
Radio Bands	AM/FM with Presets
Mounting Type	Tabletop / Wall Mount
Dimensions (L x W x H)	18.8 x 11.3 x 9.3 cm (approx. 7.4 x 4.4 x 3.7 inches)
Weight	504 g (approx. 1.1 lbs)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Memorex website. Keep your purchase receipt as proof of purchase for warranty claims.

Online Resources: For the most up-to-date information, FAQs, and support, please visit the Memorex support page.



